



AVH-X7750BT AVH-X6750DVD

DVD RDS AV RECEIVER
DVD RDS AV接收機

Owner's Manual
用戶手冊

Contents

Thank you for buying this Pioneer product. Please read through these instructions so you will know how to operate your model properly. After you have finished reading the instructions, keep this document in a safe place for future reference.

Important

The screens shown in the examples may differ from actual screens, which may be changed without notice for performance and function improvements.

■ Precaution4

License, Warranty Disclaimer & Limitation of Liability.....	4
Important safety information	4
Parking brake interlock	4
When using a display connected to rear monitor output.....	5
To avoid battery exhaustion.....	5
Rear view camera	5
Handling the USB connector.....	5
In case of trouble.....	5
Visit our website.....	5
About this product.....	5
Protecting the LCD panel and screen.....	5
Notes on internal memory.....	5
About this manual.....	6
Protecting your unit from theft	6
Use and care of the remote control	6

■ Basic operation.....8

Checking part names and functions	8
Remote control	8
Notes on using the LCD panel	8
Opening and closing the LCD panel.....	9
Turning the LCD panel horizontally.....	9
Adjusting the LCD panel slide position.....	9
Adjusting the LCD panel angle.....	9
Inserting/ejecting/connecting media.....	10
On first-time startup	10
How to use the screens.....	11
Supported AV source	12
Displaying the AV operation screen.....	12
Selecting a source	12

Changing the display order of sources	12
Using the touch panel	12

■ Registration and connection of Bluetooth device.....13

Displaying the "Bluetooth" screen.....	13
Registering your Bluetooth devices.....	13
Connecting a registered Bluetooth device manually	13
Switching visibility	14
Entering the PIN code for Bluetooth wireless connection	14
Displaying the device information.....	14
Clearing the Bluetooth memory.....	14
Updating Bluetooth software	14
Displaying the Bluetooth software version.....	14

■ Hands-free phoning.....14

Displaying the Phone menu screen.....	15
Making a phone call	15
Receiving a phone call	15
Minimizing the dial confirmation screen	15
Changing the phone settings	15
Using the voice recognition function (for iPhone).....	16
Notes for hands-free phoning.....	16

■ Setup for iPod / iPhone or smartphone.....17

The basic flow of iPod / iPhone or smartphone setup	17
Setting the device connection method.....	17
iPod compatibility.....	17
Android™ device compatibility.....	17
MirrorLink device compatibility	17
Information on the connections and functions for each device	18

■ Radio19

Starting procedure	19
Searching by PTY information.....	19
Storing the strongest broadcast frequencies.....	19
Displaying the "Radio settings" screen	19
Tuning into strong frequencies	19
Setting the FM or AM tuning step.....	19
Setting the alternative frequency search.....	20
Setting the Auto PI search.....	20

Limiting stations to regional programming.....	20
Receiving traffic announcements (TA).....	20
Receiving news announcements.....	20
Receiving alarm broadcasts.....	20

■ TV tuner.....20

Starting procedure	20
Storing stations	20

■ Disc.....21

Starting procedure	22
Selecting files from the file name list	22
Switching the media file type.....	22
Searching for the part you want to play	23
Operating the DVD menu	23
Switching the subtitle/audio language.....	23
Operating the DVD menu using touch panel keys	23

■ Compressed audio files23

Starting procedure (for Disc).....	24
Starting procedure (for USB).....	24
Selecting files from the file name list	24
Selecting a file by Music Browse	24
Selecting a song in the album (link search)	24
Switching the media file type.....	24

■ Compressed video files25

Starting procedure	26
Selecting files from the file name list	26

■ Still image files26

Starting procedure	26
Selecting files from the file name list	27
Switching the media file type.....	27
Saving the image as the wallscreen.....	27
Setting the slideshow interval.....	27

■ iPod27

Connecting your iPod	28
Starting procedure	28
Selecting song or video sources from the playlist screen	28
Using this product's iPod function from your iPod.....	29
Selecting a song in the album (link search)	29

■ iPhone or smartphone applications29

Using AppRadioMode.....	29
Using MirrorLink.....	30
Using the audio mix function	30

■ Bluetooth audio player....31

Starting procedure	31
Selecting files from the file name list	31

■ AUX source32

Starting procedure	32
Setting the video signal	32

■ AV input.....32

Starting procedure	32
Setting the video signal	32

■ MIXTRAX33

MIXTRAX operation.....	33
MIXTRAX EZ operation.....	33
Displaying the "MIXTRAX Settings" screen	33
Setting the flash pattern	34

■ System settings34

Displaying the "System" setting screen	34
Setting the steering wheel control	34
Activating the Bluetooth audio source	34
Setting the ever scroll.....	34
Setting the rear view camera.....	34
Turning off the demo screen.....	35
Selecting the system language.....	35
Setting the keyboard language with the application for iPhone.....	35
Adjusting the response positions of the touch panel (touch panel calibration)	35
Setting the dimmer.....	35
Adjusting the picture	36
Displaying the firmware version	36
Updating firmware	36

■ Audio adjustments37

Displaying the "Audio" setting screen	37
Using fader adjustment.....	37
Using balance adjustment.....	37
Switching sound muting/attenuation	37
Adjusting source levels	37
Using the auto level control	37

Contents

Adjusting loudness.....	37
Using the subwoofer output.....	37
Adjusting the cutoff frequency value	37
Switching the rear speaker output.....	38
Boosting the bass	38
Selecting the listening position.....	38
Adjusting the speaker output levels finely.....	38
Adjusting the time alignment.....	38
Switching the time alignment preset.....	38
Using the equalizer	39
Adjusting the equalizer curve automatically (Auto EQ).....	39
Saving the sound settings	40
Loading the sound settings	40

■ Theme menu40

Selecting the background display.....	40
Setting the illumination color	40
Selecting the theme color.....	41
Selecting the clock image	41

■ Setting up the video player.....42

Setting the top-priority languages	42
Setting the angle icon display.....	42
Setting the aspect ratio	42
Setting parental lock	43
Displaying your DivX VOD registration code.....	43
Displaying your DivX VOD deregistration code.....	43
Automatic playback of DVDs	43
Setting the video signal for the rear view camera.....	44

■ Favorite menu44

Creating a shortcut	44
Selecting a shortcut	44
Removing a shortcut.....	44

■ Common operations.....44

Setting the time and date	44
Setting the "Sound Retriever" function.....	45
Changing the wide screen mode.....	45

■ Other functions.....45

Restoring this product to the default settings	45
---	----

■ Connection.....45

Precautions.....	45
Precautions before connecting the system.....	45
Before installing this product	46
To prevent damage	46
Notice for the blue/white lead	46
This product	46
Power cord.....	47
Speaker leads.....	47
Power amp (sold separately).....	47
iPhone and smartphone.....	48
iPhone with Lightning connector	48
iPhone with 30-pin connector	48
Android or MirrorLink device	48
Camera.....	49
External video component and the display.....	49

■ Installation50

Precautions before installation	50
Before installing	50
Installation notes	50
DIN front/rear-mount	51
Installing the microphone	52
Mounting on the sun visor	52
Installation on the steering column.....	52
Adjusting the microphone angle	52

■ Appendix53

Troubleshooting	53
Error messages	54
Handling and care of discs.....	55
Playable discs	56
Detailed information for playable media	56
Copyright and trademark notice	59
Bluetooth	59
WMA	59
DivX	59
AAC	59
Android™.....	59
MirrorLink.....	59
Detailed information regarding connected iPod devices.....	59
Using app-based connected content.....	60
Notice regarding video viewing	60
Notice regarding DVD-Video viewing	60
Notice regarding MP3 file usage	60
Using the LCD screen correctly.....	60
Specifications.....	61

Precaution

CAUTION

This product is a Class 1 Laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.

CLASS 1 LASER PRODUCT

CAUTION—CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN, DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.

License, Warranty Disclaimer & Limitation of Liability

SAFETY PROVISIONS

Disclaimer

THE WARRANTIES SET FORTH IN PIONEER'S LIMITED WARRANTY ARE THE ONLY WARRANTIES MADE BY PIONEER OR ANY OF ITS LICENSORS, AS APPLICABLE. PIONEER AND ITS LICENSORS EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Limitation of Liability

TO THE MAXIMUM EXTENT PERMISSIBLE UNDER APPLICABLE LAW, NEITHER PIONEER NOR ITS LICENSORS WILL BE LIABLE TO YOU OR TO ANY OTHER PARTY FOR ANY INDIRECT, CONSEQUENTIAL, INCIDENTAL, PUNITIVE, OR SPECIAL DAMAGES, REGARDLESS OF THE FORM OF ACTION, WHETHER IN CONTRACT OR IN TORT, INCLUDING NEGLIGENCE, EVEN IF SUCH PARTIES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

TO THE MAXIMUM EXTENT PERMISSIBLE UNDER APPLICABLE LAW, PIONEER'S, OR ITS LICENSORS', TOTAL LIABILITY OF ANY KIND ARISING OUT OF OR RELATED TO YOUR USE OF THE PRODUCTS, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY CLAIMS, OR ANY CLAIMS FOR PROPERTY DAMAGE, DEATH OR DISABILITY, REGARDLESS OF THE FORUM AND REGARDLESS OF WHETHER ANY ACTION OR CLAIM IS BASED ON CONTRACT, TORT, (INCLUDING NEGLIGENCE), STRICT PRODUCT LIABILITY, OR ANY OTHER LEGAL THEORY, WILL NOT EXCEED ONE THOUSAND DOLLARS (USD\$1 000).

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF DAMAGES OR LIMITATION OF LIABILITY, SO THE ABOVE EXCLUSIONS OR LIMITATIONS, TO THE EXTENT PROHIBITED BY APPLICABLE LAW, MAY NOT APPLY TO YOU. YOUR SPECIFIC RIGHTS MAY VARY FROM JURISDICTION TO JURISDICTION.

Important safety information

⚠ WARNING

- Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards.
- Do not allow this product to come into contact with liquids. Electrical shock could result. Also, damage to the product, smoke, and overheating could result from contact with liquids.
- If liquid or foreign matter should get inside this product, park your vehicle in a safe place, turn the ignition switch off (ACC OFF) immediately and consult your dealer or the nearest authorized Pioneer Service Station. Do not use this product in this condition because doing so may result in a fire, electric shock, or other failure.
- If you notice smoke, a strange noise or odor from this product, or any other abnormal signs on the LCD screen, turn off the power immediately and consult your dealer or the nearest authorized Pioneer Service Station. Using this product in this condition may result in permanent damage to the system.
- Do not disassemble or modify this product, as there are high-voltage components inside which may cause an electric shock. Be sure to consult your dealer or the nearest authorized Pioneer Service Station for internal inspection, adjustments or repairs.

Before using this product, be sure to read and fully understand the following safety information:

- Do not operate this product, any applications, or the rear view camera option (if purchased) if doing so will divert your attention in any way from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating this product or reading the display, park your vehicle in a safe location and apply the parking brake before making the necessary adjustments.
- Never set the volume of this product so high that you cannot hear outside traffic and emergency vehicles.
- To promote safety, certain functions are disabled unless the vehicle is stopped and/or the parking brake is applied.
- Keep this manual handy as a reference for operating procedures and safety information.
- Do not install this product where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags or hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle.
- Please remember to fasten your seat belt at all times while operating your vehicle. If you are ever in an accident, your injuries can be considerably more severe if your seat belt is not properly buckled.
- Never use headphones while driving.

Parking brake interlock

Certain functions (such as viewing of video image and certain touch panel key operations) offered by this product could be dangerous (possibly resulting in serious injury or death) and/or unlawful if used while driving. To prevent such functions from being used while the vehicle is in motion, there is an interlock system that senses when the parking brake is set and when the vehicle is moving. If you attempt to use the functions described above while driving, they will become disabled until you stop the vehicle in a safe place, and (1) apply the parking brake, (2) release the parking brake, and then (3) apply the parking brake again. Please keep the brake pedal pushed down before releasing the parking brake.

To ensure safe driving

⚠ WARNING

- **LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE PARKING BRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT**

Precaution

IN SERIOUS INJURY OR DAMAGE.

- Do not take any steps to tamper with or disable the parking brake interlock system which is in place for your protection. Tampering with or disabling the parking brake interlock system could result in serious injury or death.
- To avoid the risk of damage and injury and the potential violation of applicable laws, this product is not for use with a video image that is visible to the driver.
- In some countries the viewing of video image on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed.

If you attempt to watch video image while driving, the warning "Viewing of front seat video source while driving is strictly prohibited." will appear on the screen. To watch video image on this display, stop the vehicle in a safe place and apply the parking brake. Please keep the brake pedal pushed down before releasing the parking brake.

When using a display connected to rear monitor output

The video output terminal (**rear monitor output**) is for connection of a display to enable passengers in the rear seats to watch video images.

⚠WARNING

NEVER install the rear display in a location that enables the driver to watch video images while driving.

To avoid battery exhaustion

Be sure to run the vehicle engine while using this product. Using this product without running the engine can drain the battery.

⚠WARNING

Do not install this product in a vehicle that does not have an ACC wire or circuitry available.

Rear view camera

With an optional rear view camera, you are able to use this product as an aid to keep an eye on trailers, or backing into a tight parking spot.

⚠WARNING

- SCREEN IMAGE MAY APPEAR REVERSED.
- USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE

REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.

⚠CAUTION

The rear view mode is to use this product as an aid to keep an eye on the trailers, or while backing up. Do not use this function for entertainment purposes.

Handling the USB connector

⚠CAUTION

- To prevent data loss and damage to the storage device, never remove it from this product while data is being transferred.
- Pioneer cannot guarantee compatibility with all USB mass storage devices and assumes no responsibility for any loss of data on media players, iPhone, smartphone, or other devices while using this product.

In case of trouble

Should this product fail to operate properly, contact your dealer or nearest authorized Pioneer Service Station.

Visit our website

Visit us at the following site:

In Mexico

<http://www.pioneer-mexico.com/>

In Singapore

<http://www.pioneer.com.sg/>

In Malaysia

<http://www.pioneer.my/>

In Thailand

<http://pioneer-thailand.co.th/>

In Philippines

<http://www.pioneer.ph/>

In Vietnam

<http://www.pioneer.vn/>

In Indonesia

<http://www.pioneer.co.id/>

In Australia

<http://www.pioneer.com.au/>

In Israel

<http://www.pioneerisrael.co.il/>

In Middle East / Africa

<http://www.pioneer-mea.com/en/>

In Latin

<http://www.pioneer-latin.com/en/about-pioneer.html>

In Hong Kong

<http://www.pioneerhongkong.com.hk/ct/index.php>

In Taiwan

<http://www.pioneer-twn.com.tw/>

In Korea

<http://www.pioneer.co.kr/>

- We offer the latest information about PIONEER CORPORATION on our website.
- Pioneer regularly provides software updates to further improve its products. Please check the support section of the Pioneer website for all available software updates.

About this product

- This product does not work correctly in areas other than Europe. The RDS (Radio Data System) function operates only in areas with FM stations broadcasting RDS signals. The RDS-TMC service can also be used in the area where there is a station that broadcasts the RDS-TMC signal.

Protecting the LCD panel and screen

- Do not expose the LCD screen to direct sunlight when this product is not used. This may result in LCD screen malfunction due to the resulting high temperatures.
- When using a cellular phone, keep the antenna of the cellular phone away from the LCD screen to prevent disruption of the video in the form of spots, colored stripes, etc.
- To protect the LCD screen from damage, be sure to touch the touch panel keys only with your finger and do so gently.

Notes on internal memory

Before removing the vehicle battery

- Some of the settings and recorded contents will not be reset.

Data subject to erasure

The information is erased by disconnecting the yellow lead from the battery (or removing the battery itself).

- Some of the settings and recorded contents will not be reset.

Precaution

Resetting the microprocessor

⚠ CAUTION

Pressing the **RESET** button resets settings and recorded contents to the factory settings.

- Do not perform this operation when a device is connected to this product.
- Some of the settings and recorded contents will not be reset.

The microprocessor must be reset under the following conditions:

- Prior to using this product for the first time after installation.
- If this product fails to operate properly.
- If there appears to be problems with the operation of the system.
- If your vehicle position is shown on the map with a significant positioning error.

1 Turn the ignition switch OFF.

2 Press the RESET button with a pen tip or other pointed implement.

➡ *Checking part names and functions* on page 8

Settings and recorded contents are reset to the factory settings.

About this manual

This manual uses diagrams of actual screens to describe operations. However, the screens on some units may not match those shown in this manual depending on the model used.

Meanings of Symbols Used in This Manual

X7750BT	This indicates model name that are supported the described operations.
	This indicates to touch an appropriate soft key on the touch screen.
	This indicates to touch and hold an appropriate soft key on the touch screen.
	This indicates that there is a reference or supplementary for the key or screen.

Protecting your unit from theft

The front panel can be detached to deter theft.


⚠ Important

- Handle the front panel with care when removing or attaching it.
- Avoid subjecting the front panel to excessive shock.
- Keep the front panel out of direct sunlight and high temperatures.
- If removed, replace the front panel on the unit before starting up your vehicle.
- To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it.

Removing the front panel

- Pinch the top and bottom of its right side and pull the front panel out.


Take care not pinch it too tightly or to drop it, and also avoid contact with water or other fluids to prevent permanent damage.

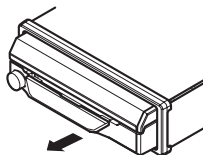

Re-attaching the front panel

1 Slide the front panel to the left.

The front panel and the head unit are connected on the left side. Make sure that the front panel has been properly connected to the head unit.

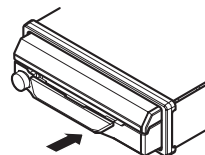

2 Press the right side of the front panel until it is firmly seated.

If you can't attach the front panel to the head unit successfully, try again.


Forcing the front panel into place may result in damage.

Use and care of the remote control

Installing the battery

Slide the tray on the back of the remote control out and insert the battery with the plus (+) and minus (-) poles aligned properly.

- When using for the first time, pull out the film protruding from the tray.

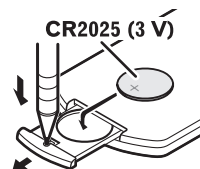

⚠ WARNING

- Keep the battery out of the reach of children. Should the battery be swallowed, consult a doctor immediately.
- Batteries (battery pack or batteries installed) must not be exposed to excessive heat such as sunshine, fire or the like.

⚠ CAUTION

- Remove the battery if the remote control is not used for a month or longer.
- There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

Precaution

- Do not handle the battery with metallic tools.
- Do not store the battery with metallic objects.
- If the battery leaks, wipe the remote control completely clean and install a new battery.
- When disposing of used batteries, comply with governmental regulations or environmental public institutions' rules that apply in your country/area.
- "Perchlorate Material – special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate. (Applicable to California, U.S.A.)"

Using the remote control

Point the remote control in the direction of the front panel to operate.


- The remote control may not function properly in direct sunlight.

Important

- Do not store the remote control in high temperatures or direct sunlight.
- Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal.

Basic operation


Checking part names and functions

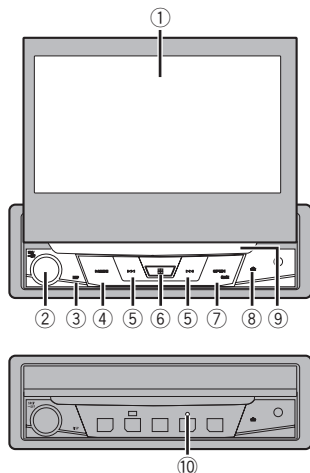

1	LCD screen	
2	Volume/SRC/OFF	Press to cycle through all the available sources. On the Application screen or navigation mode, press to display the side control bar. Press and hold to turn the display off.
3	DISP button	On the AV operation screen, press to turn the display off. On the Application screen or navigation mode, press to display the side control bar. Press and hold to turn the display off. When the display is turned off, touch the screen to revert to the original screen.
4	MODE button	Press to switch between the Application screen and the AV operation screen. Press and hold to switch to the camera view mode.

5	TRK (◀▶) button	Performs manual seek tuning, fast forward, reverse and track search controls.
6	■ button	Press to display the top menu screen. Press and hold to activate the voice recognition function. Using the voice recognition function (for iPhone) on page 16
7	OPEN/CLOSE button	Press OPEN/CLOSE to open the LCD panel. To close the LCD panel, press OPEN/CLOSE again.
8	▲ button	
9	Disc-loading slot	Inserting and ejecting a disc on page 10
10	RESET button	Resetting the microprocessor on page 6

Remote control

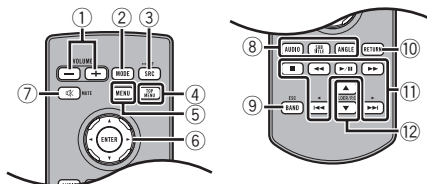

1	Volume (+/-)	
2	MODE	Press to switch between the Application screen and the AV operation screen. Press and hold to switch to the camera view mode.
3	SRC	Press to cycle through all the available sources. Press and hold to turn the source off.
4	TOP MENU	Returns to the top menu during DVD playback.
5	MENU	Displays the DVD menu during DVD playback.
6	Thumb pad	Selects a menu on the DVD menu.
7	MUTE	

8	AUDIO SUBTITLE ANGLE	Changes the audio language, subtitle language or viewing angle during DVD playback.
9	BAND	Selects the tuner band when tuner is selected as a source. Cancels the control mode of functions. Switches between media file types when playing the data of Disc, USB.
10	Return	Returns to the specified point and begins playback from there.
11	▶/ or ◀▶ or ▶▶	Pauses or resumes playback. For audio: Press and hold to perform fast reverse or fast forward. For video: Press to perform fast reverse or fast forward.
	◀◀ or ▶▶ or ■	Press to return to the previous track (chapter) or go to the next track (chapter). Stops playback. If you resume playback, playback will start from the point where you stopped. Touch the key again to stop playback completely.
12	FOLDER/P. CH	Selects the next or previous disc or folder. Recalls radio station frequencies assigned to preset channel keys.

Notes on using the LCD panel

⚠ WARNING

- Keep hands and fingers clear of this product when opening, closing, or adjusting the LCD panel. Be especially cautious of children's hands and fingers.
- Do not use with the LCD panel left open. It may result in injury in the event of an accident.

⚠ CAUTION

- Do not open or close the LCD panel by force. It may cause a malfunction.
- Do not operate this product until the LCD panel has completely opened or closed. The LCD panel may stop at that angle for safety.
- Do not place a glass or can on the open LCD panel.

Basic operation

Opening and closing the LCD panel

The LCD panel will open or close automatically when the ignition switch is turned on or off. You can turn off the automatic close/open function.

- Do not close the LCD panel by force with your hands. That will cause a malfunction.
- The automatic close/open function will operate the display as follows.
 - When the ignition switch is turned OFF while the LCD panel is opened, the LCD panel will close after six seconds.
 - When the ignition switch is turned ON again (or turned to ACC), the LCD panel will open automatically.
 - Removing or attaching the front panel will automatically close or open the LCD panel.
- ➔ *Protecting your unit from theft on page 6*
- When the ignition switch is turned OFF after the LCD panel has been closed, turning the ignition switch ON again (or turning it to ACC) will not open the LCD panel. In this case, press **OPEN/CLOSE** to open the LCD panel.
- When closing the LCD panel, check to make sure that it has closed completely. If the LCD panel has stopped halfway, leaving it like this could result in damage.
- **Press OPEN/CLOSE to open the LCD panel.**
 - To close the LCD panel, press **OPEN/CLOSE** again.

Setting the automatic open function

To prevent the display from hitting the shift lever of an automatic vehicle when it is in the **P** (park) position, or when you do not wish the display to open/close automatically, you can set the automatic open function to manual mode.

1 Display the “System” setting screen.



2 Touch [Auto Flap].

- **On** (default): The LCD panel will open or close automatically when the ignition switch is turned on or off.
- **Off**: You have to press **OPEN/CLOSE** to open/close the LCD panel.

Turning the LCD panel horizontally

When the LCD panel is upright and hinders the operation of the air conditioner, the panel can be turned horizontally temporarily.

- 1 **Press and hold OPEN/CLOSE to display the flap menu.**
- 2 **Touch the flip down temporarily key to flip the LCD panel down to the horizontal position.**



Flips the LCD panel down to the horizontal position temporarily.

- To return to the original position, press and hold **OPEN/CLOSE**.
- The LCD panel returns to the original position automatically, indicated with a beeping sound 10 seconds after operation.

Adjusting the LCD panel slide position

You can adjust the LCD panel slide position so that the panel is set back or forward.

- 1 **Press and hold OPEN/CLOSE to display the flap menu.**
- 2 **Touch the slide back key or slide front key to move the LCD panel back and forth.**



The LCD panel slides to the back.



The LCD panel slides to the front.


Adjusting the LCD panel angle

❗ Important

- If you can hear the LCD panel knocking against your vehicle's console or dashboard, touch the flip down temporarily key from the flap menu to temporarily level the LCD panel.
- When adjusting the LCD panel angle, be sure to adjust from the flap menu. Forcibly adjusting the LCD panel by hand may damage it.




- 1 **Press and hold OPEN/CLOSE to display the flap menu.**
- 2 **Touch the tilt down key or tilt up key to adjust the LCD panel to an easily viewable angle.**

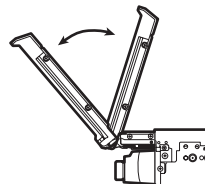

Laying the panel down.

 Basic operation



Returning the panel to the upright position.

- As the set angle is saved, the LCD panel will automatically be adjusted to the same position the next time the LCD panel is opened.

Inserting/ejecting/connecting media

⚠CAUTION

Do not insert anything other than a disc into the disc-loading slot.

Inserting and ejecting a disc

Inserting a disc

- Insert a disc into the disc-loading slot.


Ejecting a disc

- Press **▲** button to eject a disc.

Plugging and unplugging a USB storage device

- This product may not achieve optimum performance with some USB storage devices.
- Connection via a USB hub is not possible.
- A USB cable is required for connection.

- Pull out the plug from the USB port of the USB cable.**
- Plug a USB storage device into the USB cable.**

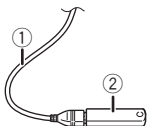

- USB cable
 - USB storage device
- Check that no data is being accessed before pulling out the USB storage device.

On first-time startup

1 Start the engine to boot up the system.

After a short pause, the splash screen comes on for a few seconds.

The **"Select Program Language"** screen appears.

- From the second time on, the screen shown will differ depending on the previous conditions.

2 Touch the language that you want to use on screen.

3 Touch .

The **"Speaker Mode Setting"** screen appears.

4 Touch the speaker modes that you want to use.

● Standard Mode

4-speaker system with front and rear speakers, or a 6-speaker system with front and rear speakers and subwoofers.

● Network Mode

2-way+SW Multi amp, multi-speaker system with high speaker, mid speaker and subwoofer for reproduction of high, middle and low frequencies (bands).

⚠WARNING

Do not use the unit in standard mode when a speaker system for 3-way network mode is connected to this unit. This may cause damage to the speakers.

5 Touch **[OK]**.

The **"Smartphone Setup"** screen appears.

6 Touch the item you want to set.

- Information on the connections and functions for each device on page 18

7 Touch .

The top menu screen appears.

- Once the speaker mode is set, the setting cannot be changed unless this product is restored to the default settings. Restore the default settings to change the speaker mode setting.

- Restoring the default settings on page 45

Switching the speaker mode


● Restore the default setting.

- Restoring the default settings on page 45

Basic operation


How to use the screens

Application menu screen *4

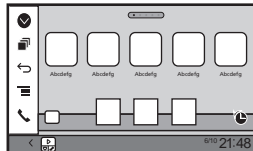

Depending on the connection method, the "smartphone setup" screen is displayed.


Application operation screen *4

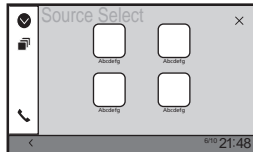

You can control the iPhone or smartphone applications directly on this product.


Recent application icons *5

Top menu screen *1 *2

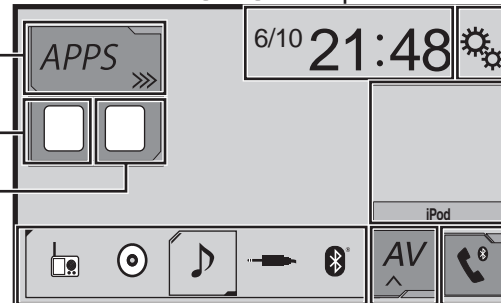


Favorite source icons *3


AV source selection screen

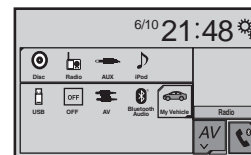

Time and date setting screen

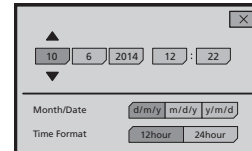


Setting menu screen

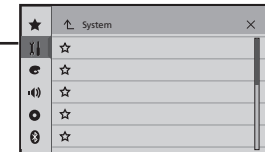


AV operation screen



Phone menu screen

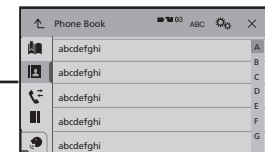

Basic operation

- *1 The top menu screen of this manual is the screen when using the **AppRadioMode**. The items displayed on the screen may vary depending on the connecting device or mode. When you connect an iPhone via Bluetooth wireless technology or a smartphone via USB cable, **"Smartphone Setup"** screen appears by touching [APPS].
- *2 By pressing the  button on any screen you can display the Top menu screen.
- *3 When you connect the external navigation system to this unit, the navigation mode key is displayed at the left bottom of the display.
- *4 By pressing the **MODE** button you can switch between the Application screen and the AV operation screen.
- *5 When you connect a **MirrorLink** device to this unit, the current app icon is displayed instead of recent apps and shortcut app.

Supported AV source

You can play or use the following sources with this product.

- Radio
- CD
- ROM (compressed audio files)
- DVD-Video
- USB

The following sources can be played back or used by connecting an auxiliary device.

- iPod
- Bluetooth audio (AVH-X7750BT)
- TV
- AV input (AV)
- AUX

Displaying the AV operation screen

- 1 Press .
- 2 Touch the **AV** operation key.



- ① Displays the source list.

Selecting a source

Source on the AV source selection screen

- 1 Display the "AV source selection" screen.



- 2 Touch the source icon you want to select.
 - ☐ When you select "OFF", the AV source is turned off.

Source on the source list

- 1 Display the source list.
 - Displaying the AV operation screen on page 12

- 2 Touch the source key you want to select.

Changing the display order of sources

Changing the display order of source icons

- 1 Display the "AV source selection" screen.



- 2 Touch and hold a source icon, and drag the icon to the desired position.

Changing the display order of source keys

- 1 Display the source list.

➤ Displaying the AV operation screen on page 12

- 2 Touch .


 
- 3 Drag the source key to the desired position.

Using the touch panel


You can operate this product by touching the keys on the screen directly with your fingers.

- ☐ To protect the LCD screen from damage, be sure to touch the screen only with your finger gently.

Using the common touch panel keys

-  Returns to the previous screen.
-  Closes the screen.

Operating list screens

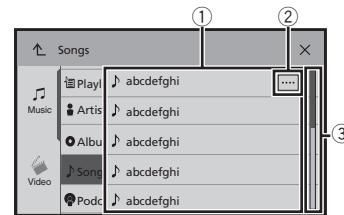


- ① Touching an item on the list allows you to narrow down the options and proceed to the next operation.
- ② Appears when all characters are not displayed on the display area.

Basic operation

- If you touch the key, the rest are scrolled for display.
- ③ Appears when items cannot be displayed on a single page.
Drag the scrubber bar or the list to view any hidden items.

 Operating the time bar



- ① You can change the playback point by dragging the key.
- Playback time corresponding to the position of the key is displayed while dragging the key.

Switching the operation panel

- **[Func.]**: Switches the operation panel of AV sources.

This key is not available on all sources.

Registration and connection of Bluetooth device

X7750BT

Displaying the "Bluetooth" screen

- 1 Press **[Menu]**.
- 2 Touch **[Bluetooth]**, and then **[On]**.
The "Bluetooth" screen appears.

Registering your Bluetooth devices

- If three devices are already paired, "Memory Full" is displayed. Delete a paired device first.
- *Deleting a registered device on page 13*
- 1 **Activate the Bluetooth wireless technology on your devices.**
- 2 **Display the "Bluetooth" screen.**
➤ *Displaying the "Bluetooth" screen on page 13*
- 3 **Touch [Connection].**
- 4 **Touch [Q].**
The system searches for Bluetooth devices waiting for a connection and displays them in the list if a device is found.
- 5 **Touch the Bluetooth device name you want to register.**
 - If your device supports SSP (Secure Simple Pairing), a six-digit number appears on the display of this product. Touch **[Yes]** to pair the device.
 - Once the connection is established, the device name is displayed. Touch the device name to disconnect.
After the device is successfully registered, a Bluetooth connection is established from the system.
 - The Bluetooth connection can be also made by detecting this product from the Bluetooth device. Before registration, make sure that "Visibility" in the "Bluetooth" menu is set to "On". For details on a Bluetooth device operations, refer to the operating instructions supplied with the Bluetooth device.
- *Switching visibility on page 14*

Connecting to a Bluetooth device automatically

This function connects the last connected Bluetooth device to this product automatically as soon as the two devices are less than a few meters apart.

- 1 **Display the "Bluetooth" screen.**
➤ *Displaying the "Bluetooth" screen on page 13*
- 2 **Touch [Auto Connect] to switch "On" (default) or "Off".**

Deleting a registered device

⚠CAUTION

Never turn this product off while the paired Bluetooth device is being deleted.

- 1 **Display the "Bluetooth" screen.**
➤ *Displaying the "Bluetooth" screen on page 13*
- 2 **Touch [Connection].**
- 3 **Touch [Delete].**

Connecting a registered Bluetooth device manually

Connect the Bluetooth device manually in the following cases:

- Two or more Bluetooth devices are registered, and you want to manually select the device to be used.
- You want to reconnect a disconnected Bluetooth device.
- Connection cannot be established automatically for some reason.

- 1 **Activate the Bluetooth wireless technology on your devices.**
- 2 **Display the "Bluetooth" screen.**
➤ *Displaying the "Bluetooth" screen on page 13*
- 3 **Touch [Connection].**
- 4 **Touch the name of the device that you want to connect.**

Registration and connection of Bluetooth device

Switching visibility

This function sets whether or not to make this product visible to the other device.

1 Display the “Bluetooth” screen.

➤ Displaying the “Bluetooth” screen on page 13

2 Touch [Visibility] to switch “On” (default) or “Off”.

Entering the PIN code for Bluetooth wireless connection

To connect your Bluetooth device to this product, you need to enter a PIN code.

You can change the PIN code with this function.

1 Display the “Bluetooth” screen.

➤ Displaying the “Bluetooth” screen on page 13

2 Touch [PIN Code Input].

3 Touch [0] to [9] to input the pin code (up to 8 -digits).

4 Touch .

☐ The default PIN code is “0000”.

Displaying the device information

1 Display the “Bluetooth” screen.

➤ Displaying the “Bluetooth” screen on page 13

2 Touch [Device Information].

The device name and address of the Bluetooth device and this product are displayed.

Clearing the Bluetooth memory

☐ This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

⚠CAUTION

Never turn this product off while the Bluetooth memory is being cleared.

1 Display the “Bluetooth” screen.

➤ Displaying the “Bluetooth” screen on page 13

2 Touch [Bluetooth Memory Clear].

3 Touch [Clear].

The confirmation screen appears.

Updating Bluetooth software

This function is used to update this product with the latest Bluetooth software. For details on Bluetooth software and updating, refer to our website.

☐ The source is turned off and the Bluetooth connection is disconnected before the process starts.

☐ This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

☐ You need to store the version up file to the USB storage device in advance.

⚠CAUTION

Never turn this product off and never disconnect the phone while the software is being updated.

1 Connect the USB storage device stored the version up file to this unit.

➤ Plugging and unplugging a USB storage device on page 10

2 Display the “Bluetooth” screen.

➤ Displaying the “Bluetooth” screen on page 13

3 Touch [BT Software Update].

4 Touch [Start].

Follow the on-screen instructions to finish updating the Bluetooth software.

Displaying the Bluetooth software version

If this product fails to operate properly, you may need to consult your dealer for repair.

In such cases, perform the following procedure to check the software version on this unit.

1 Display the “Bluetooth” screen.

➤ Displaying the “Bluetooth” screen on page 13

2 Touch [Bluetooth Version Information].

The version of this product’s Bluetooth module appears.


Hands-free phoning

X7750BT

Bluetooth telephone connected indicator

The device number of the connected device is displayed.

Reception status of the cellular phone
Battery status of the cellular phone

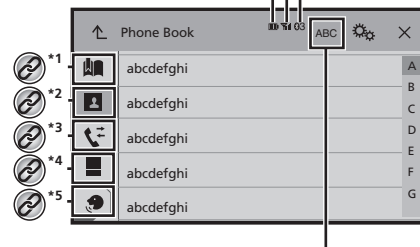

Switches the search language to English or system language.

- *1 Displays the preset dial screen.
➤ Using the preset dial lists on page 15
- *2 Switches to the phone book list.
➤ Calling a number in the phone book on page 15
- *3 Switches to the missed, received and dialed call lists.
➤ Dialing from the history on page 15
- *4 Switches the mode to enter the phone number directly.
➤ Direct dialing on page 15
- *5 Switches to the voice recognition function (for iPhone).
➤ Using the voice recognition function (for iPhone) on page 16

Hands-free phoning

⚠CAUTION

For your safety, avoid talking on the phone as much as possible while driving.
To use this function you need to connect your cellular phone to this product via Bluetooth in advance.
➡ *Registration and connection of Bluetooth device on page 13*

Displaying the Phone menu screen




- 1 Press .
- 2 Touch .

The Phone menu screen appears.

Making a phone call


You can make a phone call in many different ways.

Direct dialing

- 1 Display the "Phone menu" screen.
➡ *Displaying the Phone menu screen on page 15*
 - 2 Touch .
 - 3 Touch the number keys to enter the phone number.
 - 4 Touch  to make a call.
 - 5 Touch  to end the call.
- ☐ You may hear a noise when you hang up the phone.





Calling a number in the phone book

- ☐ The contacts on your phone will be automatically transferred to this product.
- ☐ "Visibility" of the "Bluetooth" screen should be on.
➡ *Switching visibility on page 14*

- 1 Display the "Phone menu" screen.
➡ *Displaying the Phone menu screen on page 15*
 - 2 Touch .
 - 3 Touch the desired name on the list.
 - 4 Touch the phone number you want to dial.
- The dial screen appears and dialing starts.

- 5 Touch  to end the call.

Dialing from the history

- 1 Display the "Phone menu" screen.
➡ *Displaying the Phone menu screen on page 15*
- 2 Touch .
- 3 Touch the item to switch the history list.
The following items are available:
 -  Received call list
 -  Dialed call list
 -  Missed call list
- 4 Touch the desired entry on the list to make a call.



The dial screen appears and dialing starts.

- 5 Touch  to end the call.


Using the preset dial lists

Registering a phone number



You can easily store up to six phone numbers per device as presets.



- 1 Display the "Phone menu" screen.
➡ *Displaying the Phone menu screen on page 15*
 - 2 Touch  or .
- On the "Phone Book" screen, touch the desired name.
- 3 Touch .

Dialing from the preset dial list



- 1 Display the "Phone menu" screen.
➡ *Displaying the Phone menu screen on page 15*
 - 2 Touch .
 - 3 Touch the desired item you want to dial.
- The dial screen appears and dialing starts.

Receiving a phone call

- 1 Touch  to answer the call.
 - If you touch  while getting a call waiting, you can switch to the talking person.

- Touch  to reject the call.
- 2 Touch  to end the call.

Minimizing the dial confirmation screen

- ☐ The dial confirmation screen cannot be minimized on the AV operation screen.
- ☐ AV sources cannot be selected even if the dial confirmation screen is minimized while talking on the phone or receiving an incoming call.
- Touch .
 - Touch  to display the dial confirmation screen again.

Changing the phone settings

Answering a call automatically

- 1 Display the "Bluetooth" screen.
➡ *Displaying the "Bluetooth" screen on page 13*
- 2 Touch [Auto Answer] to switch "On" or "Off" (default).

Switching the ring tone

You can select whether or not to use this product's ring tone.

- 1 Display the "Bluetooth" screen.
➡ *Displaying the "Bluetooth" screen on page 13*
- 2 Touch [Ring Tone] to switch "On" (default) or "Off".



Inverting names in the phone book

- 1 Display the "Bluetooth" screen.
➡ *Displaying the "Bluetooth" screen on page 13*
- 2 Touch [Invert Name].

Hands-free phoning

 
Setting the private mode

During a conversation, you can switch to private mode (talk directly on your cellular phone).

- Touch  or  to turn private mode on or off.

Adjusting the other party's listening volume

This product can be adjusted to the other party's listening volume.

- Touch  to switch between the three volume levels.

□ Settings can be stored for each device.

Using the voice recognition function (for iPhone)

By connecting your iPhone to this unit, you can use the voice recognition function (Siri Eyes Free Mode) on this unit.


- When an iPhone running iOS 6.1 or higher is used, Siri Eyes Free Mode is available with this product.

1 Display the "Phone menu" screen.

☞ *Displaying the Phone menu screen on page 15*

2 Touch .

The voice recognition function launches and the voice control screen appears.

- You can also launch the voice recognition function by pressing and holding .

Notes for hands-free phoning

General notes

- Connection to all cellular phones featuring Bluetooth wireless technology is not guaranteed.
- The line-of-sight distance between this product and your cellular phone must be 10 meters or less when sending and receiving voice and data via Bluetooth technology.
- With some cellular phones, the ring sound may not be output from the speakers.
- If private mode is selected on the cellular phone, hands-free phoning may be disabled.

Registration and connection

- Cellular phone operations vary depending on the type of cellular phone. Refer to the instruction manual that came with your cellular phone for detailed instructions.
- When phone book transfer does not work, disconnect your phone and then perform pairing again from your phone to this product.

Making and receiving calls

- You may hear a noise in the following situations:
 - When you answer the phone using the button on the phone.
 - When the person on the other end of the line hangs up the phone.
- If the person on the other end of the line cannot hear the conversation due to an echo, decrease the volume level for hands-free phoning.
- With some cellular phones, even after you press the accept button on the cellular phone when a call comes in, hands-free phoning may not be performed.
- The registered name will appear if the phone number is already registered in the phone book. When one phone number is registered under different names, only the phone number will be displayed.

The received call and the dialed number histories

- You cannot make a call to the entry of an unknown user (no phone number) in the received call history.
- If calls are made by operating your cellular phone, no history data will be recorded in this product.

Phone book transfers

- If there are more than 1 000 phone book entries on your cellular phone, not all entries may download completely.
- Depending on the phone, this product may not display the phone book correctly.
- If the phone book in the phone contains image data, the phone book may not be transferred correctly.
- Depending on the cellular phone, phone book transfer may not be available.

Setup for iPod / iPhone or smartphone

When using an iPod / iPhone or a smartphone with this product, configure the settings of this product according to the device to be connected.

This section describes the settings required for each device.

The basic flow of iPod / iPhone or smartphone setup

- ① Select the method for connecting your device.
- ➡ *Setting the device connection method on page 17*
- ② Connect your device to this product.
- ➡ *Connection on page 45*
- ③ If necessary, connect your device to this product via Bluetooth connection.
- ➡ *Registration and connection of Bluetooth device on page 13*

Setting the device connection method

To use the application for iPhone or smartphone on this product, select the method for connecting your device.

Settings are required according to the connected device.

1 Display the “System” setting screen.



2 Touch [Input/Output Settings].

3 Touch [Smartphone Setup].

4 Touch the following settings.

- **Device:** Select the device to be connected.
- **Connection:** Select the connection method.
- ➡ *Information on the connections and functions for each device on page 18*
The setting will change after the following processes are automatically executed.
 - The source is turned off.
 - **AppRadioMode** and **MirrorLink** mode are exited.
 - The smartphone connection (USB and Bluetooth) is disconnected.

iPod compatibility

This product supports only the following iPod models and iPod software versions. Others may not work correctly.

- iPhone 4, 4s, 5, 5s, 5c: iOS 7.0 or later.
- iPhone 3GS: iOS 6.0.1
- iPod touch (4th, 5th generation): iOS 6.0.1
- iPod touch (3rd generation): iOS 5.1.1
- iPod touch (2nd generation): iOS 4.2.1
- iPod classic 160GB (2009): Ver. 2.0.4
- iPod classic 160GB (2008): Ver. 2.0.1
- iPod classic 80GB: Ver. 1.1.2
- iPod nano (7th generation)
- iPod nano (6th generation): Ver. 1.2
- iPod nano (5th generation): Ver. 1.0.2
- iPod nano (4th generation): Ver. 1.0.4
- iPod nano (3rd generation): Ver. 1.1.3
- ☐ You can connect and control an iPod compatible with this product by using separately sold connector cables.
- ☐ Operation methods may vary depending on the iPod model and the software version.
- ☐ Depending on the software version of the iPod, it may not be compatible with this product.

For details about iPod compatibility with this product, refer to the information on our website.

This manual applies to the following iPod models.

iPod with 30-pin connector

- iPhone 3GS, 4, 4s
- iPod touch 2nd, 3rd, 4th generation
- iPod classic 80GB, 160GB
- iPod nano 3rd, 4th, 5th, 6th generation

iPod with Lightning connector

- iPhone 5, 5s, 5c
- iPod touch 5th generation
- iPod nano 7th generation

Android™ device compatibility

- ☐ Operation methods may vary depending on the Android device and the software version of the Android OS.
 - ☐ Depending on the version of the Android OS, it may not be compatible with this product.
 - ☐ Compatibility with all Android devices is not guaranteed.
- For details about Android device compatibility with this product, refer to the information on our website.

MirrorLink device compatibility

- ☐ This product is compatible with **MirrorLink** version 1.1.
- ☐ Compatibility with all **MirrorLink** devices is not guaranteed.

For details about **MirrorLink** device compatibility with this product, refer to the information on our website.

Setup for iPod / iPhone or smartphone

Information on the connections and functions for each device


The settings and cables required for connecting each device, and the available sources are as follows.

iPod / iPhone with a 30-pin connector			
Device connection method		When connecting via Bluetooth (AVH-X7750BT)	When connecting via CD-IU201V (sold separately)
Smartphone Setup	Device	iPhone / iPod	iPhone / iPod
	Connection	Wireless via BT	USB
Bluetooth connection		Bluetooth connection is required.	—
Available sources	iPod (audio)	✓	✓
	iPod (video)	—	—
	AppRadioMode	—	✓

iPod / iPhone with a Lightning connector			
Device connection method		When connecting via Bluetooth (AVH-X7750BT)	When connecting via CD-IU52 (sold separately)
Smartphone Setup	Device	iPhone / iPod	iPhone / iPod
	Connection	Wireless via BT	USB
Bluetooth connection		Bluetooth connection is required.	—
Available sources	iPod (audio)	✓	✓
	iPod (video)	—	—
	AppRadioMode	—	✓

Android, MirrorLink device			
Device connection method		When connecting via CD-MU200 (sold separately)	
Smartphone Setup	Device	Others	
	Connection	MirrorLink/AppRadioMode	
Bluetooth connection		—	
Available sources	MirrorLink	✓ When "Connection" of "Smartphone Setup" is set to "MirrorLink".	
	AppRadioMode	✓ When "Connection" of "Smartphone Setup" is set to "AppRadioMode".	

Radio

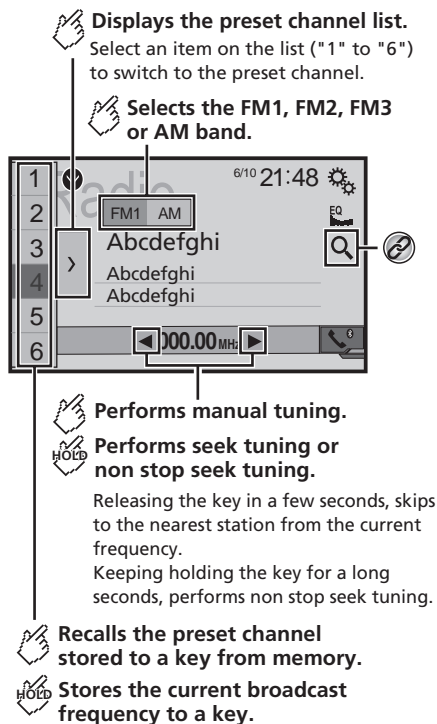

- Searches for a broadcast by PTY information.
 ➔ *Searching by PTY information on page 19*
- By pressing **◀◀** or **▶▶**, you can also switch the preset channels.
 - By pressing and hold **◀◀** or **▶▶** and release, you can also perform seek tuning.
 - By keeping touching and holding **◀◀** or **▶▶**, you can perform non stop seek tuning. Touch again to cancel.

Starting procedure

- 1 Display the "AV source selection" screen.



- 2 Touch [Radio].
The "Radio" screen appears.

Searching by PTY information

You can tune into a station using PTY (Program Type Identification) information.

- This function is available when the FM tuner is selected.

- 1 Touch .
- 2 Touch or to select the item.
The following items are available:
News&Info (default), **Popular**, **Classics**, **Others**.
- 3 Touch to start searching.

- If you touch [Cancel], the searching process is canceled.

Storing the strongest broadcast frequencies

The BSM (best stations memory) function automatically stores the six strongest broadcast frequencies under the preset tuning keys "1" to "6".

- Storing broadcast frequencies with BSM may replace those you have already saved.
- Previously stored broadcast frequencies may remain stored if the number of frequencies stored has not reached the limit.

- 1 Touch .
- 2 Touch to begin a search.

While the message is displayed, the six strongest broadcast frequencies will be stored under the preset tuning keys in order of their signal strength.

- If you touch [Cancel], the storage process is canceled.

Displaying the "Radio settings" screen

- 1 Press .
- 2 Touch , and then .
- 3 Touch [AV Source Settings].
- 4 Touch [Radio settings].

Tuning into strong frequencies

- You can use this function when "Radio" is selected as the source.

Local seek tuning allows you to only tune into those radio stations with sufficiently strong signals.

- 1 Display the "Radio settings" screen.
 ➔ *Displaying the "Radio settings" screen on page 19*
- 2 Touch [Local].
- 3 Touch the item you want to set.
 - Off** (default):
Turns the seek tuning setting off.
 - Level1 to Level4**:
Sets the level of sensitivity for FM to **Level1** to **Level4** (for AM **Level1** or **Level2**).
- The FM "Level4" (AM "Level2") setting allows reception of only stations with the strongest signals.

Setting the FM or AM tuning step

You can switch the tuning step for FM or AM band.

- For FM band, the seek tuning step is fixed to 50 kHz.

- 1 **Turn the source off.**
 ➔ *Source on the AV source selection screen on page 12*
- 2 Display the "Radio settings" screen.
 ➔ *Displaying the "Radio settings" screen on page 19*
- 3 Touch [FM Step] or [AM Step] to switch the tuning step.

The following items are available for each setting:

- FM Step**
- 100kHz**(default)
 - 50kHz**
- AM Step**
- 9kHz** (default)
 - 10kHz**

Radio

Setting the alternative frequency search

When the tuner cannot get a good reception, tunes to another broadcast station that supports the same program in the current network.

1 Display the "Radio settings" screen.

☞ Displaying the "Radio settings" screen on page 19

2 Touch [Alternative FREQ] to switch "On" or "Off" (default).

Setting the Auto PI search

When you switch to the broadcast station containing RDS data, searches for the same PI (Program Identification) code broadcast station from all frequency band automatically.

1 Display the "Radio settings" screen.

☞ Displaying the "Radio settings" screen on page 19

2 Touch [Auto PI] to switch "On" or "Off" (default).

☐ Even if you set to "Off", the PI search is automatically performed when the tuner cannot get a good reception.

Limiting stations to regional programing

You can switch whether the area code is checked during the auto PI search.

1 Display the "Radio settings" screen.

☞ Displaying the "Radio settings" screen on page 19

2 Touch [Regional] to switch "On" (default) or "Off".

Receiving traffic announcements (TA)

The traffic announcement can be received from the last selected frequency, interrupting the other sources.

1 Display the "Radio settings" screen.

☞ Displaying the "Radio settings" screen on page 19

2 Touch [TA Interrupt] to switch "On" or "Off" (default).

Receiving news announcements

The news can be received from the last selected frequency, interrupting the other sources.

1 Display the "Radio settings" screen.

☞ Displaying the "Radio settings" screen on page 19

2 Touch [News Interrupt] to switch "On" or "Off" (default).

Receiving alarm broadcasts

The alarm broadcast can be received from the last selected frequency, interrupting the other sources.

1 Display the "Radio settings" screen.


☞ Displaying the "Radio settings" screen on page 19

2 Touch [Alarm Interrupt] to switch "On" (default) or "Off".

TV tuner



Hides the tuner control keys.
To display again the keys, touch anywhere on the screen.

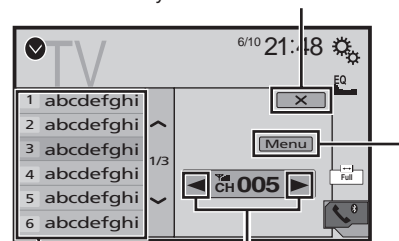

Switches the preset channels upward or downward.



Displays the TV tuner menu.



Recalls the preset channel.

☐ By pressing [◀◀] or [▶▶], you can also switch the preset channels.

☐ Changing the wide screen mode.

☞ Common operations on page 44

You can control a TV tuner, such as GEX-1550TV (sold separately).

☞ The following description is differ from the TV tuner operation manual.

Starting procedure

1 Display the "AV source selection" screen.



2 Touch [TV].

The "TV" screen appears.

Storing stations

This function stores stations automatically.

TV tuner

Broadcast frequencies stored during this step may replace those saved previously.

1 Touch [Menu].

2 Touch [Channel Search].


Preset channels are listed in order of channel frequency.

- If you touch [Cancel], the storage process is canceled.

Disc

Track number indicator

Audio source screen 1

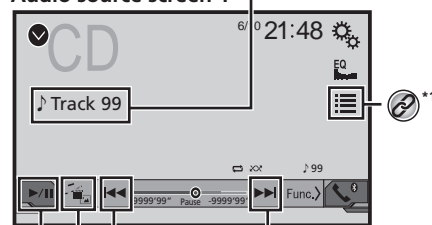

Skips files forward or backward.


Switches between playback and pause.

Plays files in random order.
This function is available for music CD.

: Does not play tracks in random order.

: Plays all tracks in random order.

Audio source screen 2

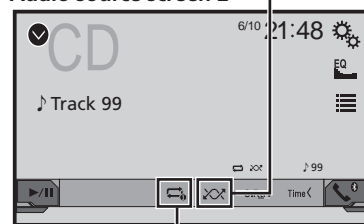

Sets a repeat play range.

: Repeats the current disc.

: Repeats the current track.


Hides the touch panel keys.
To display again the keys, touch anywhere on the screen.

Performs frame-by-frame playback.

Performs slow-motion playback.

Each time you touch it changes the speed in four steps in the following order: 1/16 1/8 1/4 1/2

Video source screen 1

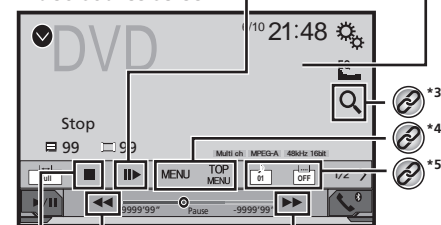


Performs fast reverse or fast forward.

Touch again to change play back the speed.

Stops playback.

Video source screen 2

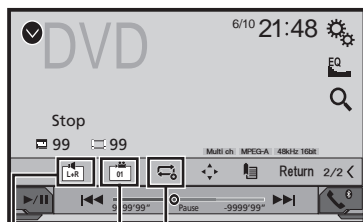

Sets a repeat play range.

: Repeats all files.

: Repeats the current chapter.

: Repeats the current title.


Changes the viewing angle (Multi-angle).

This function is available for DVDs featuring multi-angle recordings.

Selects the audio output from [L+R], [Left], [Right], [Mix].

This function is available for Video-CDs and DVDs recorded with LPCM audio.

Video source screen 2

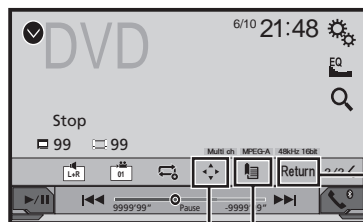

Resumes playback (Bookmark).

This function is available for DVD-Video. You can memorize one point as a Bookmark for a disc (up to five discs). To clear the bookmark on the disc, touch and hold this key.

Returns and begins playback from the specified point.

This function is available for DVD-Video and Video-CDs featuring PBC (playback control).

- *1 Selects a track from the list.
→ *Selecting files from the file name list on page 22*
- *2 Switches the media file type.
→ *Switching the media file type on page 22*
- *3 Searches for the part you want to play.
→ *Searching for the part you want to play on page 23*
- *4 Displays the DVD menu.
→ *Operating the DVD menu on page 23*
- *5 Switches the subtitle/audio language.
→ *Switching the subtitle/audio language on page 23*
- *6 Displays the DVD menu keypad.
→ *Operating the DVD menu using touch panel keys on page 23*

- By pressing or , you can also skip files/chapters forward or backward.
 - By pressing and holding or , you can also perform fast reverse or fast forward.
 - If a Video-CD with PBC On is being played, [PBCOn] appears.
 - Changing the wide screen mode.
 - *Common operations on page 44*
- You can play a normal music CD, Video-CD or DVD-Video using the built-in drive of this product.

CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

Starting procedure

- 1 Display the "AV source selection" screen.



- 2 Insert the disc you want to play.

The source changes and then playback will start.

→ *Inserting and ejecting a disc on page 10*

- If the disc is already set, select [Disc] as the playing source.

Selecting files from the file name list

- 1 Touch .
- 2 Touch a track on the list to play back.

Switching the media file type

When playing a digital media containing a mixture of various media file types you can switch between media file types to play.

- 1 Touch .
- 2 Touch the item you want to set.

- **Music:**
Switches the media file type to music (compressed audio).
- **Video:**
Switches the media file type to video.
- **CD-DA:**
Switches the media file type to CD (audio data (CD-DA)).

Disc

Searching for the part you want to play


- ❑ For DVD-Videos, you can select [Title], [Chapter] or [10Key].
- ❑ For Video-CDs, you can select [Track] or [10Key] (PBC only).

1 Touch .

2 Touch the item to select the search function.

3 Touch [0] to [9] to input the desired number.

- ❑ To cancel an input number, touch [Clear].

4 Touch  to start playback from the number you registered.

Operating the DVD menu

You can operate the DVD menu by touching the menu item on the screen directly.

- ❑ This function may not work properly with some DVD disc content. In that case, use touch panel keys to operate the DVD menu.

1 Touch  or [MENU].

2 Touch the desired menu item.

Switching the subtitle/audio language

● Touch  or  to change the language.

- : Changes the subtitle language.

- : Changes the audio language.




- You can also switch the subtitle/audio languages using the "DVD/DivX Setup" menu.

☞ *Setting the top-priority languages on page 42*


Operating the DVD menu using touch panel keys

If items on the DVD menu appear, the touch panel keys may overlay them. If so, select an item using those touch panel keys.

1 Touch .


2 Touch , ,  or  to select the desired menu item.

3 Touch .

- ❑ The way to display the menu differs depending on the disc.
- If you touch , you can operate the DVD menu directly.

Compressed audio files

Playback screen 1 (Example: USB)

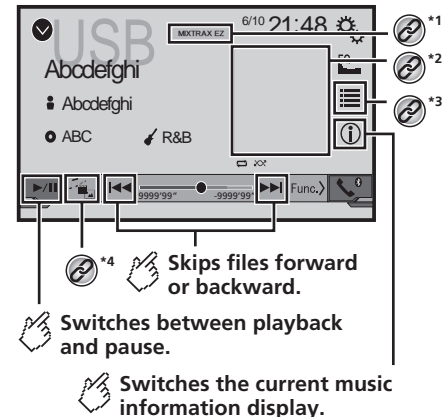

This function is available only for USB.

Compressed audio files



Plays files in random order.



: Does not play files in random order.



: Plays all files within the repeat range in random order.

Playback screen 2 (Example: USB)



Sets a repeat play range.



or : Repeats all files.



: Repeats the current folder.



: Repeats the current file.



Selects the previous folder or the next folder.



Constructs the database for using the Music Browse mode.

This function is available only for USB.



- *1** Displays the MIXTRAX screen.
This function is available for the USB storage device only.
➔ MIXTRAX on page 33



- *2** Selects a file from the list.
➔ *Selecting files from the file name list* on page 24
☐ When you use a USB storage device, you can search a file by Music Browse.
➔ *Selecting a file by Music Browse* on page 24



- *3** Displays the link search screen.
This function is available for the USB storage device only.
➔ *Selecting a song in the album (link search)* on page 24



- *4** Switches the media file type.
➔ *Switching the media file type* on page 24

- ☐ By pressing **◀◀** or **▶▶**, you can also skip files forward or backward.
- ☐ By pressing and holding **◀◀** or **▶▶**, you can perform fast reverse or fast forward.

You can play compressed audio files stored in a disc or a USB storage device.

- ➔ *Media compatibility chart* on page 57

Starting procedure (for Disc)

- 1 Display the "AV source selection" screen.



- 2 Insert the disc you want to play.

The source changes and then playback will start.

- ➔ *Inserting and ejecting a disc* on page 10
- ☐ If the disc is already set, select **[Disc]** as the playing source.

Starting procedure (for USB)

- 1 Display the "AV source selection" screen.



- 2 Plug the USB storage device.

- ➔ *Plugging and unplugging a USB storage device* on page 10

- 3 Touch **[USB]**.

- ☐ Play back is performed in order of folder numbers. Folders are skipped if they contain no playable files.

Selecting files from the file name list

You can find files or folders to play back using the file name or folder name list.

- 1 Touch

- 2 Touch a file on the list to play back.

- ☐ Files are played back in file number order.

Selecting a file by Music Browse

You can select files to play back using the file list related to the song currently playing.

- ☐ This function is available for the USB storage device only.

- 1 Touch to switch to the Music Browse mode and construct the database.

- 2 Touch

- 3 Touch the desired category to display the file list.

- 4 Touch the item that you want to refine.

Refine the item until the desired song title or file name is displayed on the list.

- 5 Touch the desired song title or file name to play back.

Selecting a song in the album (link search)

- 1 Touch the artwork to open the list of songs.

- 2 Touch the song to play back.

Switching the media file type

When playing a digital media containing a mixture of various media file types you can switch between media file types to play.


- 1 Touch

- 2 Touch the item you want to set.


Compressed audio files






- **Music:**
Switches the media file type to music (compressed audio).
- **Video:**
Switches the media file type to video.
- **CD-DA:**
Switches the media file type to CD (audio data (CD-DA)).
- **Photo:**
Switches the media file type to still image (JPEG data).

Compressed video files

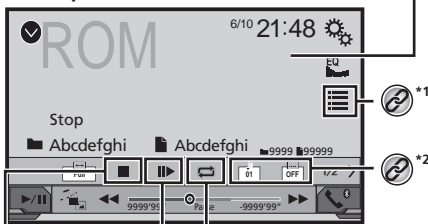 **Hides the touch panel keys.**
To display again the keys,
touch anywhere on the screen.

(Example: Disc)



 **Sets a repeat play range.**
 or  : Repeats all files.
 : Repeats the current folder.
 : Repeats the current file.


 **Performs frame-by-frame playback.**

 **Performs slow-motion playback.**

 **Stops playback.**




 
(Example: Disc)



 **Performs fast reverse or fast forward.**
Touch again to change the
playback speed.

 **Switches between
playback and pause.**

- *1 Selects a file from the list.
↳ Selecting files from the file name list on page 26
- *2 Switches the subtitle/audio language.
↳ Switching the subtitle/audio language on page 23
- *3 Switches the media file type.
↳ Switching the media file type on page 24

- By pressing  or , you can also skip files forward or backward.
 - By pressing and holding  or , you can perform fast reverse or fast forward.
 - Changing the wide screen mode.
↳ Common operations on page 44
- You can play compressed video files stored on a disc or in an USB storage device.
- ↳ Media compatibility chart on page 57

⚠CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

Compressed video files

Starting procedure

☞ Compressed audio files on page 23

Selecting files from the file name list

You can select files to view using the file name list.


1 Touch .

2 Touch a file on the list to play back.

- ☐ Files are played back in file number order and folders are skipped when they contain no files.

- Touch the playback sign of the thumbnail to preview the file.

Still image files

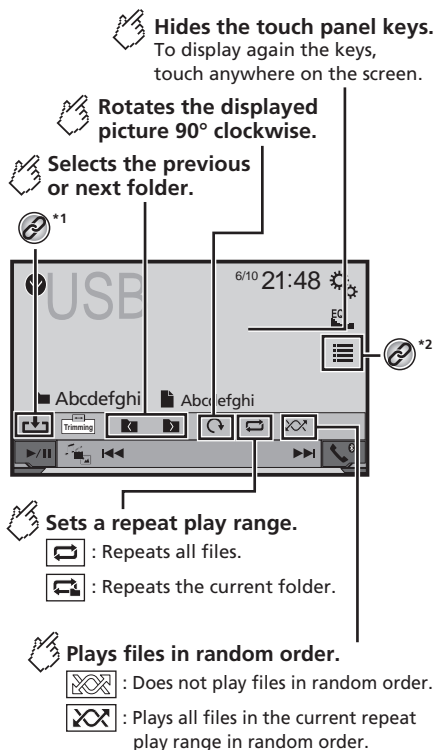

- *1 Saves the current image as the wallpaper.
☞ Saving the image as the wallpaper on page 27
- *2 Selects a file from the list.
☞ Selecting files from the file name list on page 26
- *3 Switches the media file type.
☞ Switching the media file type on page 27

- ☐ JPEG images are not displayed in the rear display.
- ☐ By pressing or , you can also skip files forward or backward.
- ☐ By pressing and holding or , you can search 10 JPEG files at a time. If the file currently being played is the first or last file in the folder, the search is not performed.
- ☐ Changing the wide screen mode.
☞ Common operations on page 44
- You can view still images stored in an USB storage device.
☞ Media compatibility chart on page 57

Starting procedure

1 Display the “AV source selection” screen.



2 Plug the USB storage device.

Still image files

- *Plugging and unplugging a USB storage device on page 10*
- ❑ Playback is performed in order of folder numbers. Folders are skipped if they contain no playable files.

3 Touch [USB].

The image is displayed on the screen.

Selecting files from the file name list

You can select files to view using the file name list.

1 Touch [List].

2 Touch a file on the list to play back.

- ❑ Touching a folder on the list shows its contents. You can play a file on the list by touching it.

Switching the media file type

When playing a digital media containing a mixture of various media file types you can switch between media file types to play.

1 Touch [Media].

2 Touch the item you want to set.

- **Music:**
Switches the media file type to music (compressed audio).
- **Video:**
Switches the media file type to video.
- **Photo:**
Switches the media file type to still image (JPEG data).

Saving the image as the wallpaper

You can save the current displayed image in the memory of this unit and set as the wallpaper as the AV screen or the Home screen.

1 Touch [Wallpaper] on the image that you want to save.

2 Touch the following items to set as the wallpaper.

- **As AVScreen:**
Saves the image as the wallpaper of AV screen.
- **As HomeScreen:**
Saves the image as the wallpaper of Home screen.
- **As Both:**
Saves the image as the both wallpaper of AV screen and Home screen.

3 Touch “Yes” to overwrite the image.

- ❑ Each one image can be saved for AV screen or Home screen. If you save the other image, the current wallpaper is overwritten.

Setting the slideshow interval

JPEG files can be viewed as a slideshow on this product. In this setting, the interval between each image can be set.

- ❑ This setting is available during playback of the JPEG files.

1 Display the “Video Setup” screen.




2 Touch [Time Per Photo Slide].

3 Touch the item you want to set.

The following items are available:
“10sec” (default), “5sec”, “15sec”, “Manual”.

iPod

Audio source screen 1

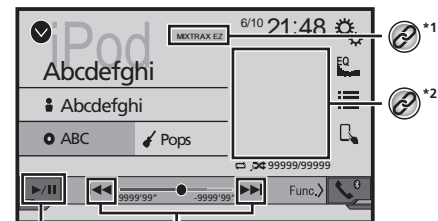

- *1 Skips files forward or backward.
- *2 Switches between playback and pause.



Plays files in random order.




: Plays randomly songs or videos within the selected list.



: Plays album randomly.

Audio source screen 2

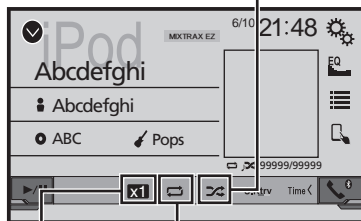

Sets a repeat play range.



: Repeats all in the selected list.



: Repeats the current song or video.



Changes the audiobook speed.



: Normal playback



: Fast playback



: Slow-motion playback

Video source screen



Performs fast reverse or fast forward.

- *1 Displays the "MIXTRAX" screen.
➔ MIXTRAX on page 33
 - *2 Selects a file from the list.
➔ Selecting a song in the album (link search) on page 29
 - *3 Selects a track from the list.
➔ Selecting song or video sources from the playlist screen on page 28
 - *4 Switches the control mode to "App Mode".
➔ Using this product's iPod function from your iPod on page 29
- ☐ By pressing the or , you can also skip files forward or backward.
 - ☐ By pressing and hold the or , you can also perform fast reverse or fast forward.
 - ☐ Changing the wide screen mode.
 - ➔ Common operations on page 44

Connecting your iPod

When connecting an iPod to this product, select the method for connecting your device. Settings are required according to the connected device.

➔ Setup for iPod / iPhone or smartphone on page 17

For iPod with a 30-pin connector users

Via USB cable

- ☐ Depending on your iPod, a USB interface cable for iPod / iPhone (CD-IU201V) (sold separately), is required to connect.

iPod audio and/or video sources are enabled if either of the cables is connected.

➔ iPhone with 30-pin connector on page 48

Via Bluetooth wireless technology

➔ Registering your Bluetooth devices on page 13

For iPod / iPhone with a Lightning connector users

Via USB cable

- ☐ With a USB interface cable for iPod/iPhone (CD-IU52) (sold separately), iPod audio source is available.

However, functions related to iPod video files are not available.

➔ iPhone with Lightning connector on page 48

When you want to play audio and/or video files on your iPod with a Lightning connector, first install "CarMediaPlayer" on your iPod and then launch "CarMediaPlayer" while in "AppRadioMode".

For details about the "CarMediaPlayer" refer to the information on our website.

Via Bluetooth wireless technology

➔ Registering your Bluetooth devices on page 13

CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

Starting procedure

1 Connect your iPod.

➔ Connecting your iPod on page 28

The source changes and then playback will start.

- ☐ If connecting an iPhone or iPod touch, quit applications before.

2 Display the "AV source selection" screen.



3 Touch [iPod].

Selecting song or video sources from the playlist screen

You can search for the song or video you want to play from the playlist screen.

1 Touch

- 2 Touch or to switch the music or video category list.
- 3 Touch the category you want to search for.
If you use English as the system language, the alphabet search function is available. Touch the initial search bar to use this function.
- 4 Touch the title of the list that you want to play.
If you can not find the desired song or video, try to search again according to the above steps.
- 5 Start playback of the selected list.
 - ☐ Depending on the generation or version of the iPod, some functions may not be available.
 - ☐ You can play playlists created with the **MusicSphere** application. The application is available on our website.


Using this product's iPod function from your iPod

You can control this product's iPod function from the iPod on "App Mode". The application screen of the iPod can be displayed on this product, and the music files and video files are played back with this product.

- ☐ While this function is in use, the iPod will not turn off even if the ignition key is turned off. Operate the iPod to turn off the power.
- 1 Touch .
 - 2 Operate the connected iPod to select a video or song and play.
 - ☐ Some functions are still accessible from this product even if the control mode is set to "App Mode". However, the operation will depend on your applications.
 - ☐ Touch to switch the control mode.

Selecting a song in the album (link search)

- 1 Touch the artwork to open the list of songs.
- 2 Touch the song to play back.

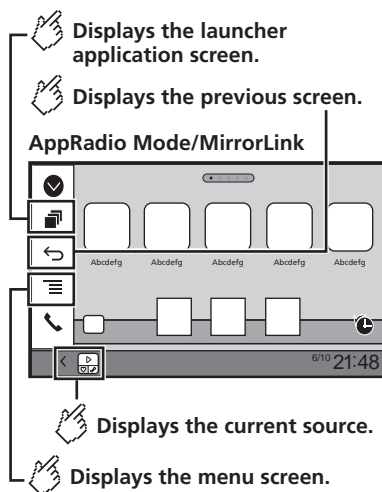

- ☐ In **AppRadioMode** and **MirrorLink Mode**, App control side bar will appear.
- ☐ Press the **DISP** button to hide the App control side bar. Press the **DISP** button again to display it again.
- ☐ and are not available depending on the type of device.

⚠ WARNING

Certain uses of an iPhone or a smartphone may not be legal while driving in your jurisdiction, so you must be aware of and obey any such restrictions. If in doubt as to a particular function, only perform it while the car is parked.
No feature should be used unless it is safe to do so under the driving conditions you are experiencing.

Using AppRadioMode

You can control applications for an iPhone or a smartphone directly from the screen (**AppRadioMode**). In **AppRadioMode**, you can operate applications with finger gestures such as tapping, dragging, scrolling or flicking on the screen of this product.

- ☐ In this chapter, iPhone and iPod touch will be referred to as "iPhone".
- ☐ The compatible finger gestures vary depending on the application for an iPhone or a smartphone.
- ☐ Even though an application is not compatible with **AppRadioMode**, depending on the application an image may be displayed. But you can not operate the application. To use **AppRadioMode**, install the AppRadio app on the iPhone or smartphone in advance. For details about the AppRadio app, visit the following site:
<http://www.pioneer.eu/AppRadioMode>
 - ☐ Be sure to read Using app-based connected content before you perform this operation.
 - Using app-based connected content on page 60

- Pioneer is not liable for any issues that may arise from incorrect or flawed app-based content.
- The content and functionality of the supported applications are the responsibility of the App providers.
- In **AppRadioMode**, functionality through the product is limited while driving, with available functions determined by the App providers.
- Availability of **AppRadioMode** functionality is determined by the App provider, and not determined by Pioneer.
- **AppRadioMode** allows access to applications other than those listed (subject to limitations while driving), but the extent to which content can be used is determined by the App providers.

Starting procedure

When connecting an iPhone or smartphone to this product, you must select the method for connecting your device. Settings are required according to the connected device.

- Setup for iPod / iPhone or smartphone on page 17

For iPhone users

- 1 **Connect your iPhone.**
 - iPhone with 30-pin connector on page 48
 - iPhone with Lightning connector on page 48

2 Press .

3 Touch [APPS].

When the application is ready to launch, messages appear on the screen of this product and your iPhone.

- 4 **Use your iPhone to launch the application.**
The AppRadio app is launched.

iPhone or smartphone applications

5 Touch [OK].

The AppRadio Mode screen (Application menu screen) appears.

For smartphone users

- Be sure that the registered device is selected as the priority device.

➤ *Registering your Bluetooth devices on page 13*

1 Unlock your smartphone and connect it to this product via USB.

- The cable connection method varies depending on your device.

➤ *Android™ device compatibility on page 17*

2 Press **⏮**.

3 Touch [APPS].

The **AppRadio app** is launched, and the **AppRadioMode** screen (Application menu screen) appears.

Common operation of all device

- If you connect your device while an **AppRadioMode** compatible application is already running, the application operation screen will appear on this product.
- Touch the desired application icon after The AppRadio app is launched.
- The desired application is launched, and the application operation screen appears.
- Press **⏮** to go back to the Top menu screen.

Using the keyboard

When you tap the text input area of an application for iPhone, a keyboard will be displayed on the screen. You can input the desired text directly from this product.

⚠CAUTION

For your safety, the keyboard functionality is only available when the vehicle is stopped and the parking brake is engaged.

- This function is only available in **AppRadioMode** on the iPhone.

1 Start up the AppRadioMode.

➤ *Starting procedure on page 29*

2 Touch the text input area on the application operation screen.

A keyboard for entering text appears.

- The language of the keyboard can be changed.
- *Setting the keyboard language with the application for iPhone on page 35*

Displaying the image of your application

You can set an image of an application for your device, which is not compatible with **[AppRadioMode]**, to be shown on the screen.

- Depending on the type of application, you may not be able to see the image on the screen.
- When you use this function on iPhone with Lightning connector, do not connect other devices via Bluetooth wireless technology.
- You can only control the application on the connected device.
- When you touch the display in this function, "Don't Touch" mark appears on the upper right corner of the screen.

1 Connect your device.

- *iPhone with 30-pin connector on page 48*
- *iPhone with Lightning connector on page 48*
- *Android™ device compatibility on page 17*

2 Press **⏮**.

3 Touch [APPS].

When the application is ready to launch, messages appear on the screen of this product and your iPhone.

- For iPhone with 30-pin connector user, refuse to launch the application on your iPhone and then touch **[OK]** on this product.

4 Launch the application on your device.

An image of the application appears on the screen.

- Press **⏮** to return to the Top menu screen.

Using MirrorLink

When you connect a **MirrorLink** device with compatible applications installed, you can control the applications for the mobile device directly from this product (**MirrorLink** mode).

You can view and operate the compatible applications via the display with multi-touch gestures like tapping, dragging, scrolling, and flicking.

- Multi-touch gestures may be disabled depending on the **MirrorLink** device model that is connected.

Starting procedure

When connecting a **MirrorLink** device to this product, you must select the method for connecting your device. Settings are required according to the connected device.

➤ *Setup for iPod / iPhone or smartphone on page 17*

1 Unlock your MirrorLink device.

2 Connect your MirrorLink device to this product via the separately sold USB interface cable for use with MirrorLink devices (CD-MU200).

➤ *MirrorLink device compatibility on page 17*

3 Press **⏮**.

4 Touch [APPS].

If the launcher application is installed in the **MirrorLink** device, the application launches.

If not, the Application menu screen will appear.

5 Touch the desired application icon.

The desired application is launched, and the application operation screen appears.

- Some applications may not launch depending on the state of the connected device. If it does not launch, launch the application according to the application startup message.
- Press **⏮** to go back to the Top menu screen.


Using the audio mix function

You can output audio mixing AV source and an application for iPhone or smartphone when the **AppRadioMode** or **MirrorLink** mode is used.

1 Start up the AppRadioMode or MirrorLink mode.


2 Press the Volume (+/-) button.

The audio mix menu will be displayed on the screen.

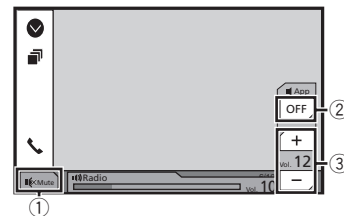

- ① Touch to mute. Touch again to unmute.
- ② Sets whether to switch the sound mix function off.
- ③ Adjusts the application audio volume. Each touch of **[+]** or **[-]** increases or decreases the volume level.


iPhone or smartphone applications

- ❑ The AV operation screen and the Application screen can be switched by pressing .
- ❑ You cannot adjust the volume of the main sound on the screen. Press the **Volume (+/-)** button to adjust the volume of the main sound.

Bluetooth audio player


X7750BT

Playback screen 1

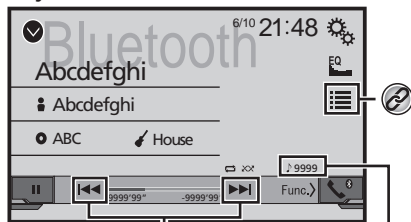


 Skips files forward or backward.


Track number indicator

 Plays files in random order.

Playback screen 2

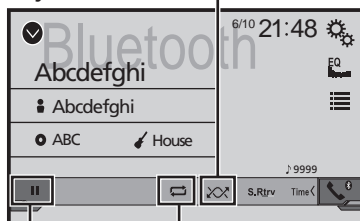




 
 Sets a repeat play range.

 Switches between playback and pause.



Selects a file from the list.

➞ *Selecting files from the file name list on page 31*

- ❑ By pressing the  or  button, you can also skip files forward or backward.
- ❑ By pressing and hold the  or  button, you can also perform fast reverse or fast forward.
- ❑ Before using the Bluetooth audio player, register and connect the device to this product.
- ➞ *Registering your Bluetooth devices on page 13*
- ❑ Depending on the Bluetooth device connected to this product, the available operations with this product may be limited or differ from the descriptions in this manual.
- ❑ While you are listening to songs on your Bluetooth device, please refrain from operating the phone function as much as possible. If you try operating, the signal may cause noise for song playback.
- ❑ When you are talking on the Bluetooth device connected to this product via Bluetooth, it may pause playback.

Starting procedure

1 Pull out the connecting cable for using AppRadioMode.

- ❑ You cannot use Bluetooth device when the connecting cable for using **AppRadioMode** is connected.

2 Display the "System" setting screen.



3 Touch [AV Source Settings].

4 Confirm that "Bluetooth Audio" is turned on.

5 Display the "AV source selection" screen.



6 Touch [Bluetooth Audio] on the AV source selection screen.

Selecting files from the file name list


- ❑ This function may not be available depending on some Bluetooth device.


1 Touch .

2 Touch a file or a folder on the list to play back.

AUX source



 Switches between the screen to operate video files and that to operate music files.

- ☐  is only available when there are both audio and video files on the auxiliary equipment.
- ☐ A Mini-jack AV cable (CD-RM10) (sold separately) is required for connection.
 - ➔ *External video component and the display on page 49*

⚠CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

Starting procedure

You can display the video image output by the device connected to video input.

- 1 Display the “System” setting screen.



- 2 Touch [Input/Output Settings].
- 3 Confirm that “AUX Input” is turned on.
- 4 Display the “AV source selection” screen.



- 5 Touch [AUX].

The image is displayed on the screen.

Setting the video signal

When you connect this product to an AUX equipment, select the suitable video signal setting.

- ☐ You can operate this function only for the video signal input into the AUX input.

- 1 Display the “Video Setup” screen.



- 2 Touch [Video Signal Setting].
- 3 Touch [AUX].
- 4 Touch the item you want to set.

The following items are available:

Auto (default), PAL, NTSC, PAL-M, PAL-N, SECAM.

AV input

You can display the video image output by the device connected to this product.

➔ *External video component and the display on page 49*

⚠CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

Starting procedure

You can display the video image output by the device connected to video input.

- 1 Display the “System” setting screen.




- 2 Touch [Input/Output Settings].
- 3 Set the setting to “On”.
- 4 Display the AV source selection screen.



- 5 Touch [AV].

The image is displayed on the screen.

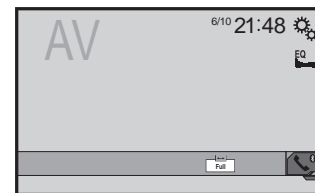

Setting the video signal

When you connect this product to an AV equipment, select the suitable video signal setting.

- ☐ You can operate this function only for the video signal input into the AV input.


- 1 Display the “Video Setup” screen.

AV input



- 2 Touch [Video Signal Setting].
- 3 Touch [AV].
- 4 Touch the item you want to set.
The following items are available:
Auto (default), PAL, NTSC, PAL-M, PAL-N, SECAM.

MIXTRAX

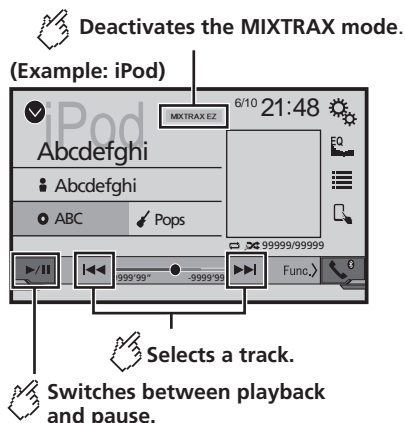

- By pressing the **◀◀** or **▶▶** button, you can also skip files forward or backward.
- By pressing and hold the **◀◀** or **▶▶** button, you can also perform fast reverse or fast forward.

MIXTRAX operation

MIXTRAX is original technology for creating non-stop mixes of selections from your audio library, complete with DJ effects that make them sound.

MIXTRAX EZ operation

You can use this unit to play iPod/USB audio files. MIXTRAX EZ is used to add a variety of sound effects between songs for arranging the pauses between songs. It allows you to enjoy listening to music non-stop.

- This function is only available when a file on a USB storage device or a song on an iPod is being played.
- This function is not available when the control mode is set to App Mode.
- Depending on the file/song, sound effects may not be available.
- Depending on the file/song, non-stop playback may not be available.

Displaying the “MIXTRAX Settings” screen

- 1 Press **⏏**.
- 2 Touch **[II]**, and then [AV Source Settings].
- 3 Touch [MIXTRAX Settings].

Setting the playback portion

You can specify the playback portion.

- 1 Display the “MIXTRAX Settings” screen.
○ Displaying the “MIXTRAX Settings” screen on page 33
- 2 Touch [Short Playback Mode].
- 3 Touch the item you want to set.
The following items are available:
60s (default), 90s, 120s, 150s, 180s, Off, Random.

Setting the display effect

You can set the effect display for MIXTRAX.

- 1 Display the “MIXTRAX Settings” screen.
○ Displaying the “MIXTRAX Settings” screen on page 33
- 2 Touch [Display Effect] to switch “On” (default) or “Off”.

Setting the cut-in effect

You can set the effect tone that sounds when you skip tracks forward or backward.

- 1 Display the “MIXTRAX Settings” screen.
○ Displaying the “MIXTRAX Settings” screen on page 33
- 2 Touch [Cut-In Effect] to switch “On” (default) or “Off”.

Setting the MIXTRAX effect

You can set and play back the MIXTRAX effect that you want.

- 1 Display the “MIXTRAX Settings” screen.
○ Displaying the “MIXTRAX Settings” screen on page 33
- 2 Touch [Effect Setting].

3 Touch the item you want to set.

The following items are available:

Standard (default), **Simple**, **Custom**

■ When you select "Custom", check the effect that you want.

Setting the flash pattern

The flashing color changes with the changes in the sound and bass levels.

1 Display the "MIXTRAX Settings" screen.

➤ Displaying the "MIXTRAX Settings" screen on page 33

2 Touch [Flash Pattern].

3 Touch the item you want to set.

● Sound1 (default) to Sound6:

The flash pattern changes according to the sound level. Select a desired mode.

● L-Pass1 to L-Pass6:

The flash pattern changes according to the bass level. Select a desired mode.

● Random1:

The flash pattern changes randomly according to the sound level mode and low pass mode.

● Random2:

The flash pattern changes randomly according to the sound level mode.

● Random3:

The flash pattern changes randomly according to the low pass mode.

● Off:

The flash pattern does not flash.

Displaying the "System" setting screen

1 Press .

2 Touch , and then .

The "System" setting screen appears.

Setting the steering wheel control

You can set the steering wheel control on the display via a wired remote cable.

➤ Power cord on page 47

☐ This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

☐ This setting is available when turn all the sources off.

This setting is required for using the steering wheel remote control function.

☐ You can set a function key to more than one steering wheel key.

☐ You can set only one function key to a steering wheel key.

☐ If you make a mistake after connecting this product with the supplied wired remote cable, please reset it.

☐ If this function does not work correctly, contact your dealer or an authorized Pioneer Service Station.

☐ When you start to set, all the default key settings is automatically cleared.

For steering wheel control adapter for Pioneer users

1 Display the "System" setting screen.

➤ Displaying the "System" setting screen on page 34

2 Touch [Steering Wheel Control].

3 Touch [W/o Adapter].

4 Touch [OK].

Registering function to each key manually

1 Display the "System" setting screen.

➤ Displaying the "System" setting screen on page 34

2 Touch [Steering Wheel Control].

3 Touch [W/o Adapter].

4 Touch the item to select the brand of your vehicle.

5 Touch the item to set.

Follow the on-screen instructions to register the function setting.

■ If you touch [Clear], all the settings is cleared.

Activating the Bluetooth audio source

X7750BT

1 Display the "System" setting screen.

➤ Displaying the "System" setting screen on page 34

2 Touch [AV Source Settings].

3 Touch [Bluetooth Audio] to switch "On" (default) or "Off".

Setting the ever scroll

When "Ever Scroll" is set to "On", the recorded text information scrolls continuously in the display.

1 Display the "System" setting screen.

➤ Displaying the "System" setting screen on page 34

2 Touch [Ever Scroll] to switch "On" or "Off" (default).

Setting the rear view camera

A separately sold rear view camera (e.g. ND-BC6) is required for utilizing the rear view camera function. (For details, consult your dealer.)

Rear view camera

This product features a function that automatically switches to the full-screen image of the rear view camera installed on your vehicle, when the shift lever is in the REVERSE (R) position.

☐ When the shift lever is aligned to the REVERSE (R) position immediately after the system of this product is started up, only the camera image will be displayed and the parking assist guidelines and the message, "The video may appear reversed" will not be displayed.

System settings

⚠CAUTION

Pioneer recommends the use of a camera which outputs mirror reversed images, otherwise the screen image may appear reversed.

- ❑ Immediately verify whether the display changes to a rear view camera image when the shift lever is moved to REVERSE (R) from another position.
- ❑ When the screen changes to full-screen rear view camera image during normal driving, switch to the opposite setting in "Camera Polarity".

Setting rear view camera activation

1 Display the "System" setting screen.

➡ *Displaying the "System" setting screen on page 34*

2 Touch [Camera Settings].

3 Touch [Back Camera Input] to switch "On" or "Off" (default).

Setting the polarity of the rear view camera

- ❑ This function is available when "Back Camera Input" is "On".
- ➡ *Setting rear view camera activation on page 35*

1 Display the "System" setting screen.

➡ *Displaying the "System" setting screen on page 34*

2 Touch [Camera Settings].

3 Touch [Camera Polarity].

- **Battery** (default):
The polarity of the connected lead is positive.
- **Ground**:
The polarity of the connected lead is negative.

Turning off the demo screen

1 Display the "System" setting screen.

➡ *Displaying the "System" setting screen on page 34*

2 Touch [Demo Mode] to switch "On" (default) or "Off".

Selecting the system language

- If the embedded language and the selected language setting are not the same, text information may not display properly.
- Some characters may not be displayed properly.

1 Display the "System" setting screen.

➡ *Displaying the "System" setting screen on page 34*

2 Touch [System Language].

3 Touch the language that you want to use.

After the language is selected, the previous screen returns.

Setting the keyboard language with the application for iPhone

You can use the keyboard in **AppRadioMode** by setting the language of the keyboard for iPhone.

- ❑ This function is only available in **AppRadioMode** on the iPhone.

1 Display the "System" setting screen.

➡ *Displaying the "System" setting screen on page 34*

2 Touch [Keyboard].

3 Touch the language that you want to use.

After the language is selected, the previous screen returns.

Adjusting the response positions of the touch panel (touch panel calibration)

If you feel that the touch panel keys on the screen deviate from the actual positions that respond to your touch, adjust the response positions of the touch panel screen.

- ❑ This setting is available only when you stop your vehicle in a safe place and apply the parking brake.
- ❑ Do not use sharp pointed tools such as a ballpoint or mechanical pen, which could damage the screen.
- ❑ Do not turn off the engine while saving the adjusted position data.

1 Display the "System" setting screen.

➡ *Displaying the "System" setting screen on page 34*

2 Touch [Touch Panel Calibration].

3 Touch two corners of the screen along the arrows, and then touch the centers of two + marks at the same time twice.

4 Press .



The adjustment results are saved.

5 Press once again.

Proceed to 16-point adjustment.

6 Gently touch the center of the "+" mark displayed on the screen.

The target indicates the order.

- When you press , the previous adjustment position returns.
- When you press and hold , the adjustment is canceled.

7 Press and hold .

The adjustment results are saved.

Setting the dimmer

Setting the dimmer trigger

- ❑ This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

1 Display the "System" setting screen.

➡ *Displaying the "System" setting screen on page 34*

2 Touch [Dimmer Settings].

3 Touch [Dimmer Trigger].

4 Touch the item.

- **Auto** (default):
Switches the dimmer to on or off automatically according to your vehicle's headlight turning on or off.
- **Manual**:
Switches the dimmer to on or off manually.
- **Time**:
Switches the dimmer to on or off at the time you adjusted.

Setting the dimmer duration in day or night

- ❑ You can use this function when "Dimmer Trigger" is set to "Manual".
- ❑ This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

1 Display the "System" setting screen.

➡ *Displaying the "System" setting screen on page 34*

System settings

2 Touch [Dimmer Settings].

3 Touch [Day/Night] to switch the following items.

- **Day** (default):
Turns the dimmer manually to off.
- **Night**:
Turns the dimmer manually to on.

Setting the dimmer duration optional

You can adjust the time that the dimmer is turned on or off.

- You can use this function when "Dimmer Trigger" is set to "Time".
- This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

1 Display the "System" setting screen.





- *Displaying the "System" setting screen on page 34*

2 Touch [Dimmer Settings].

3 Touch [Dimmer Duration].

The "Duration Setting" screen appears.

4 Drag the cursors to set the dimmer duration.

- You can also set the dimmer duration touching  or .
- Each touch of  or  moves the cursor backward or forward in the 15 minute width.
- The default setting is 18:00-6:00 (6:00 PM-6:00 AM).
When the cursors are placed on the same point, the dimmer available time is 0 hours.
When the cursor for off time setting is placed on the left end and the cursor for on time setting is placed on the right end, the dimmer available time is 0 hours.
- When the cursor for on time setting is placed on the left end and the cursor for off time setting is placed on the right end, the dimmer available time is 24 hours.
The time display of the dimmer duration adjusting bar is depending on the clock display setting.
- *Setting the time and date on page 44*

Adjusting the picture

You can adjust the picture for each source and rear view camera.

⚠CAUTION

For safety reasons, you cannot use some of these functions while your vehicle is in motion. To enable these functions, you

must stop in a safe place and apply the parking brake. Refer to Important Information for the User (a separate manual).

1 Display the screen you wish to adjust.

2 Display the "System" setting screen.

- *Displaying the "System" setting screen on page 34*

3 Touch [Picture Adjustment].

4 Touch the item to select the function to be adjusted.

- **Brightness**:
Adjusts the black intensity. (-24 to +24)
 - **Contrast**:
Adjusts the contrast. (-24 to +24)
 - **Color**:
Adjusts the color saturation. (-24 to +24)
 - **Hue**:
Adjusts the tone of color (which color is emphasized, red or green). (-24 to +24)
 - **Dimmer**:
Adjusts the brightness of the display. (+1 to +48)
 - **Temperature**:
Adjusts the color temperature, resulting in a better white balance. (-3 to +3)
 - With some pictures, you cannot adjust Hue and Color.
When you touch [Rear View], the mode changes to the selected camera mode. By touching [Source], [Navi] or [Apps], you can return to the selected mode.
- ## 5 Touch , , , to adjust.
- The adjustments of "Brightness", "Contrast" and "Dimmer" are stored separately when your vehicle's headlights are off (daytime) and on (nighttime).
"Brightness" and "Contrast" are switched automatically depending on whether the vehicle's headlights are on or off.
"Dimmer" can be changed the setting or the time to switch it to on or off.
 - *Setting the dimmer on page 35*
The picture adjustment may not be available with some rear view cameras.
The setting contents can be memorized separately.

Displaying the firmware version

1 Display the "System" setting screen.

- *Displaying the "System" setting screen on page 34*

2 Touch [System Information].

3 Touch [Firmware Information].

The "Firmware Information" screen appears.

Updating firmware

⚠CAUTION

- The USB storage device for updating must contain only the correct update file.
- Never turn this product off, disconnect the USB storage device while the firmware is being updated.
- You can only update the firmware when the vehicle is stopped and the parking brake is engaged.

1 Download the firmware update files.

2 Connect a blank (formatted) USB storage device to your computer, and then locate the correct update file and copy it onto the USB storage device.

3 Connect the USB storage device to this product.

4 Turn the source off.

- *Source on the AV source selection screen on page 12*

5 Display the "System" setting screen.

- *Displaying the "System" setting screen on page 34*

6 Touch [System Information].

7 Touch [Firmware Update].

8 Touch [Continue] to display the data transfer mode.

- Follow the on-screen instructions to finish updating the firmware.
- This product will reset automatically after the firmware update is completed if the update is successful.
- If an error message appears on the screen, touch the display and perform the above steps again.

Audio adjustments

Displaying the “Audio” setting screen

- 1 Press **⏏**.
- 2 Touch **[⏏]**, and then **[🔊]**.
The “Audio” setting screen appears.

Using fader adjustment

- 1 Display the “Audio” setting screen.
➤ Displaying the “Audio” setting screen on page 37
- 2 Touch **[Fader]**.
- 3 Touch **[▲]** or **[▼]** to adjust the front/rear speaker balance.
 - ❑ “Front25” to “Rear25” is displayed as the front/rear speaker balance moves from the front to rear.
 - ❑ The default setting is “F/R 0”.
 - ❑ Set “Front” and “Rear” to “0” when using a dual speaker system.
 - You can also set the fader/balance by dragging the point on the displayed table.

Using balance adjustment

- ❑ This function is available when “Standard Mode” is selected as the speaker mode.
- 1 Display the “Audio” setting screen.
➤ Displaying the “Audio” setting screen on page 37
 - 2 Touch **[Balance]**.
 - 3 Touch **[◀]** or **[▶]** to adjust the left/right speaker balance.
 - ❑ “Left25” to “Right25” is displayed as the left/right speaker balance moves from the left to right.
 - ❑ The default setting is “L/R 0”.
 - You can also set the fader/balance by dragging the point on the displayed table.

Switching sound muting/attenuation

You can automatically mute or attenuate the AV source volume and the iPhone application volume when the navigation outputs the guidance voice.

- 1 Display the “Audio” setting screen.
➤ Displaying the “Audio” setting screen on page 37
- 2 Touch **[Mute Level]**.
- 3 Touch the item you want to set.
 - **ATT** (default):
The volume becomes 20 dB lower than the current volume.
 - **Mute**:
The volume becomes 0.
 - **Off**:
The volume does not change.

Adjusting source levels

SLA (source level adjustment) lets you adjust the volume level of each source to prevent radical changes in volume when switching between sources.

- ❑ Settings are based on the FM tuner volume level, which remains unchanged.
- ❑ This function is not available when the FM tuner is selected as the AV source.

- 1 Compare the FM tuner volume level with the level of the source you want to adjust.
- 2 Display the “Audio” setting screen.
➤ Displaying the “Audio” setting screen on page 37
- 3 Touch **[Source Level Adjuster]**.
- 4 Touch **[▲]** or **[▼]** to adjust the source volume.
 - ❑ If you directly touch the area where the cursor can be moved, the SLA setting will be changed to the value of the touched point.
 - ❑ “+4” to “-4” is displayed as the source volume is increased or decreased.
 - ❑ The default setting is “0”.

Using the auto level control

This function corrects automatically the audio level difference between the music files or the sources.

- 1 Display the “Audio” setting screen.
➤ Displaying the “Audio” setting screen on page 37
- 2 Touch **[Automatic Level Control]**.
- 3 Touch the item.
 - **Off** (default):
Turns the auto level control setting off.
 - **Mode1**:

Corrects a little the audio level difference between the music files or the sources (for the narrow dynamic range audio signal).

- **Mode2**:
Corrects widely the audio level difference between the music files or the sources (for the wide dynamic range audio signal).

Adjusting loudness

This function compensates for deficiencies in the low-frequency and high-frequency ranges at low volume.

- ❑ This function is not available while you make or receive a call using the hands-free function.

- 1 Display the “Audio” setting screen.
➤ Displaying the “Audio” setting screen on page 37
- 2 Touch **[Loudness]**.
- 3 Touch the item.
The following items are available:
Off (default), **Low**, **Mid**, **High**.

Using the subwoofer output

This product is equipped with a subwoofer output mechanism, which can be turned on or off.

- 1 Display the “Audio” setting screen.
➤ Displaying the “Audio” setting screen on page 37
- 2 Touch **[Subwoofer]** to switch “On” (default) or “Off”.

Adjusting the cutoff frequency value

You can adjust the cutoff frequency value of each speaker.

The following speakers can be adjusted:

Standard Mode: Front, Rear, Subwoofer.

Network Mode: High, Mid, Subwoofer.

- ❑ “Subwoofer” is available only when “Subwoofer” is “On”.
- Using the subwoofer output on page 37

- 1 Display the “Audio” setting screen.
➤ Displaying the “Audio” setting screen on page 37
- 2 Touch **[Crossover]** or **[Subwoofer Settings]**.
- 3 Touch **[◀]** or **[▶]** to switch the speaker you want to adjust.

Audio adjustments

4 Drag the graph lines to the position you want to adjust.

□ The following items can also be set.

● Phase []:

Switches the subwoofer phase between normal and reverse position.

● LPF/HPF:

Switches the LPF/HPF setting to "On" or "Off".

- This function is not available when adjusting the High speaker.
- Touch [] or [] to switch the adjusting speaker.

Switching the rear speaker output

1 Turn the source off.

2 Display the "Audio" setting screen.

☞ Displaying the "Audio" setting screen on page 37

3 Touch [Rear Speaker Output].

4 Touch to switch "Rear" (default) or "Subwoofer".

Boosting the bass

1 Display the "Audio" setting screen.

☞ Displaying the "Audio" setting screen on page 37

2 Touch [BASS Boost].

3 Touch to select the bass boost level from 0 to +6.

Selecting the listening position

You can select a listening position that you want to make as the center of sound effects.

1 Display the "Audio" setting screen.

☞ Displaying the "Audio" setting screen on page 37

2 Touch [Listening Position].

3 Touch the desired position to change the listening position.

The following items are available:

Off (default), Front, Front Left, Front Right, All.

□ "All" is not available when "Network Mode" is selected as the speaker mode.

Adjusting the speaker output levels finely

Fine adjustments of the speaker output level can be made by listening to audio output.

□ This function is available when "Subwoofer" is set to "On".

☞ Using the subwoofer output on page 37

1 Display the "Audio" setting screen.

☞ Displaying the "Audio" setting screen on page 37

2 Touch [Speaker Level].

3 Touch [] or [] to select the listening position if necessary.

The following items are available:

Off (default), Front, Front Left, Front Right, All.

□ "All" is not available when "Network Mode" is selected as the speaker mode.

□ If you change the listening position setting, the output levels of all the speakers will change in conjunction with the setting.

4 Touch [] or [] to adjust the speaker output level.

□ "-24" dB to "10" dB is displayed as the distance to be corrected is increased or decreased.

The following speakers are available:

Front Left, Front Right, Rear Left, Rear Right, Subwoofer

- To use this function, the vehicle's acoustics must be measured in advance.

Adjusting the time alignment

By adjusting the distance from each speaker to the listening position, time alignment is able to correct the time required for sound to reach the listening position.

1 Measure the distance between the head of the listener and each speaker unit.

2 Display the "Audio" setting screen.

☞ Displaying the "Audio" setting screen on page 37

3 Touch [Time Alignment].

4 Touch [] or [] to select the listening position if necessary.

The following items are available:

Off (default), Front, Front Left, Front Right, All.

□ "All" is not available when "Network Mode" is selected as the speaker mode.

□ If you change the listening position setting, the output levels of all the speakers will change in conjunction with the setting.

5 Touch [] or [] to input the distance between the selected speaker and the listening position.

□ You can input the value every 2.5 cm (between 0 and 350 cm).

The following speakers are available:

Front Left, Front Right, Rear Left, Rear Right, Subwoofer

- If you touch [TA On], the time alignment is turned off mandatorily.
- This function is available only when the listening position setting is set to "Front Left" or "Front Right".
- To use this function, the vehicle's acoustics must be measured in advance.

Switching the time alignment preset

1 Display the "Audio" setting screen.

☞ Displaying the "Audio" setting screen on page 37

2 Touch [Time Alignment Preset].

3 Touch the item.

● Initial (default):

Sets to the initial setting value.

● ATA:

Reflects the result of "A-EQ&TA Measurement" to the setting value.

● Off:

Resets all setting values to 0.

● Custom:

Sets to the value adjusted at "Time Alignment".

□ When you adjust the time alignment, the preset item will switch automatically to "Custom".

□ "Custom" can be selected only when the listening position is set to "Front Left" or "Front Right".

Audio adjustments

Using the equalizer

Recalling equalizer curves

There are seven stored equalizer curves that you can easily recall at any time. Here is a list of the equalizer curves:

- **S.Bass** is a curve in which only low-pitched sound is boosted.
 - **Powerful** is a curve in which low- and high-pitched sounds are boosted.
 - **Natural** is a curve in which low- and high-pitched sounds are slightly boosted.
 - **Vocal** is a curve in which the midrange, which is the human vocal range, is boosted.
 - **Flat** is a flat curve in which nothing is boosted.
 - **Custom1** is an adjusted equalizer curve that you create. If you select this curve, the effect is applied to all AV sources.
 - **Custom2** is an adjusted equalizer curve that you create. If you select this curve, the effect is applied to all AV sources.
- ☐ The default setting is **"Powerful"**.

- 1 **Display the "Audio" setting screen.**
➔ *Displaying the "Audio" setting screen on page 37*
- 2 **Touch [Graphic EQ].**
- 3 **Touch the equalizer you want.**

Customizing the equalizer curves

You can adjust the currently selected equalizer curve setting as desired. Adjustments can be made with a 13-band graphic equalizer.

- ☐ If you make adjustments when a curve **"S.Bass"**, **"Powerful"**, **"Natural"**, **"Vocal"**, or **"Flat"** is selected, the equalizer curve settings will be changed to **"Custom1"** mandatorily.
- ☐ If you make adjustments when the **"Custom2"** curve is selected for example, the **"Custom2"** curve will be updated.
- ☐ **"Custom1"** and **"Custom2"** curves can be created common to all sources.

- 1 **Display the "Audio" setting screen.**
➔ *Displaying the "Audio" setting screen on page 37*
- 2 **Touch [Graphic EQ].**
- 3 **Select a curve that you want to use as the basis of customizing.**
- 4 **Touch the frequency for which you want to adjust the level.**

- ☐ If you trail a finger across the bars of multiple equalizer bands, the equalizer curve settings will be set to the value of the touched point on each bar.

Using the auto-adjusted equalizer

You can set the auto-adjusted equalizer to suit the vehicle's acoustics. To use this function, the vehicle's acoustics must be measured in advance.

- ➔ *Adjusting the equalizer curve automatically (Auto EQ) on page 39*
- ☐ To manually adjust the equalizer curve, set **"Auto EQ&TA"** to **"Off"**.

- 1 **Display the "Audio" setting screen.**
➔ *Displaying the "Audio" setting screen on page 37*
- 2 **Touch "[Auto EQ&TA] to switch "On" or "Off" (default).**

Adjusting the equalizer curve automatically (Auto EQ)

By measuring the vehicle's acoustics, the equalizer curve can be adjusted automatically to suit the vehicle interior.

⚠WARNING

A loud tone (noise) may be emitted from the speakers when measuring the vehicle's acoustics. Never perform Auto EQ measurement while driving.


⚠CAUTION

- Thoroughly check the conditions before performing Auto EQ, as the speakers may be damaged if this is performed under the following conditions:
- When the speakers are incorrectly connected. (For example, when a rear speaker is connected as a subwoofer output.)
- When a speaker is connected to a power amp delivering output higher than the speaker's maximum input power capability.
- If a microphone for acoustical measurement (sold separately) is not placed in an appropriate location, the measurement tone may become loud and measurement may take a long time, resulting in battery drainage. Be sure to place the microphone in the specified location.

Before operating the Auto EQ function

- Perform Auto EQ in as quiet a place as possible, with the vehicle engine and air conditioning switched off. Also, cut power to car phones or cellular phones in the vehicle, or remove them in advance. Surrounding sounds may prevent correct measurement of the vehicle's acoustics.
- Be sure to use the microphone for acoustical measurement (sold separately). Using another microphone may prevent measurement, or result in incorrect measurement of the vehicle's acoustics.
- To perform Auto EQ, the front speakers must be connected.
- When this product is connected to a power amp with input level control, Auto EQ may be impossible if the power amp's input level is set below the standard level.
- When this product is connected to a power amp with an LPF (low pass filter), turn the LPF off before performing Auto EQ. Also, set the cut-off frequency for the built-in LPF of an active subwoofer to the highest frequency.
- The distance has been calculated by a computer to provide optimum delay to ensure accurate results. Do not change this value.
 - The reflected sound within the vehicle is strong and delays occur.
 - The LPF on active subwoofers or external amps delay the lower sounds.
- If an error occurs during measurement, check the following before measuring the vehicle's acoustics.
 - Front speakers (left/right)
 - Rear speakers (left/right)
 - Noise
 - Microphone for acoustical measurement (sold separately)
 - Low battery

Performing Auto EQ

- ☐ Auto EQ changes the audio settings as follows:
- The fader/balance settings return to the center position.
- ➔ *Using balance adjustment on page 37*
- **"Mute Level"** is set to **"Off"**.
- ➔ *Switching sound muting/attenuation on page 37*
- ☐ Previous settings for Auto EQ will be overwritten.
- ☐ Do not press  to open or close the panel when you are using the microphone.

⚠CAUTION

Do not turn off the engine while the measurement is in progress.

Audio adjustments

- 1 **Stop the vehicle in a quiet place, close all the doors, windows and sun roof, and then turn the engine off.**

If the engine is left running, engine noise may prevent correct Auto EQ.

- ☐ If driving restrictions are detected during measurement, measurement is canceled.

- 2 **Fix the microphone for acoustical measurement (sold separately) in the center of the headrest of the driver's seat, facing forward.**

The Auto EQ may differ depending on where you place the microphone. If desired, place the microphone on the front passenger seat and perform Auto EQ.

- 3 **Disconnect the iPhone or smartphone device.**

- 4 **Turn on the ignition switch (ACC ON).**

If the vehicle's air conditioner or heater is turned on, turn it off.

- 5 **Switch the AV source to "OFF".**

➔ *Displaying the AV operation screen on page 12*

- 6 **Display the "Audio" setting screen.**

➔ *Displaying the "Audio" setting screen on page 37*

- 7 **Touch [A-EQ&TA Measurement].**

The "A-EQ&TA Measurement" screen appears.

- 8 **Connect the microphone for acoustical measurement (sold separately) with this product.**

Plug the microphone into the AUX input jack on this product. Use an extension cable (sold separately) if the cord of the Microphone (sold separately) is not long enough.

- 9 **Touch [Front Left] or [Front Right] to select the current listening position.**

- 10 **Touch [Start].**

A 10-second countdown starts.

- ☐ The Bluetooth connection is disconnected before the process starts.

- 11 **Exit the vehicle and keep the doors closed until the countdown finishes.**

When the countdown finishes, a measurement tone (noise) is emitted from the speakers and the Auto EQ measurement begins.

- 12 **Wait until the measurement is completed.**

When Auto EQ is completed, a message is displayed.

- ☐ The measurement time varies depending on the type of vehicle.
- ☐ To stop the measurement, touch [Stop].

- 13 **Store the microphone carefully in the glove compartment or another safe place.**

If the microphone is subjected to direct sunlight for an extended period, high temperatures may cause distortion, color change or malfunction.

Saving the sound settings

You can save to recall the following current sound settings: fader, balance, speaker level, Graphic EQ, HPF/LPF, listening position, crossover, time alignment.

- 1 **Display the "Audio" setting screen.**

➔ *Displaying the "Audio" setting screen on page 37*

- 2 **Touch [Save Settings].**

- 3 **Touch [OK].**

All of the current sound settings are saved.

- When you touch [Cancel], return to the "Audio" setting screen.

Loading the sound settings

- 1 **Display the "Audio" setting screen.**

➔ *Displaying the "Audio" setting screen on page 37*

- 2 **Touch [Load Settings].**

- 3 **Touch the item you want to load.**

The following items are available:

AEQ Setting Sound Setting.

- ☐ "AEQ Setting" is available only when you have already performed Auto EQ measurement.
- ➔ *Adjusting the equalizer curve automatically (Auto EQ) on page 39*
- ☐ "Sound Setting" is available only when you have already saved the sound settings.
- ➔ *Saving the sound settings on page 40*

Theme menu

Selecting the background display

The background display can be selected from 9 different preset displays for the AV operation screen and 6 different preset displays for the Top menu screen. Furthermore, you can change the background display to other images imported from an USB storage device.

- 1 **Display the "Theme" screen.**





- 2 **Touch [Background].**

- You can also change the screen for settings by touching [Illumination], [Theme] or [Utility] on this screen.

- 3 **Touch [Home] or [AV] to switch the screen displays.**

The setting contents can be memorized separately for the AV operation screen and the Top menu screen.

- 4 **Touch the item you want to set.**

- Preset displays: Selects the desired preset background display.
-  (custom): Displays the background display image imported from the USB storage device.
- ➔ *Saving the image as the wall/screen on page 27*
-  (off): Hides the background display.

Setting the illumination color

The illumination color can be selected from 7 different colors. Furthermore, the illumination can be switched between these 7 colors in order.

Selecting the color from the preset colors

You can select an illumination color from the color list.

- 1 **Display the "Theme" screen.**



Theme menu



2 Touch [Illumination].

- You can also change the screen for settings by touching **[Theme]**, **[Background]** or **[Utility]** on this screen.

3 Touch the color you want.

- Colored keys: Selects the desired preset color.
-  (custom): Displays the screen to customize the illumination color.
 Creating a user-defined color on page 41
-  (rainbow): Shifts gradually between the five default colors in sequence.
- You can preview the Top menu screen or the AV operation screen by touching **[Home]** or **[AV]** respectively.

Creating a user-defined color

You can create a user-defined color. The created color is stored, and you can select the color when setting the illumination color the next time.

1 Display the "Theme" screen.



2 Touch [Illumination].

- You can also change the screen for settings by touching **[Theme]**, **[Background]** or **[Utility]** on this screen.

3 Touch the following key.



Displays the screen to create a user-defined color and store it to memory.

4 Touch the following keys.



Adjusts the brightness and the level of red, green and blue to create a favorite color.



- You can also adjust the color tone by dragging the color bar.

5 Touch and hold [Memo] to store the customized color in the memory.

The customized color is stored in the memory. The set color will be recalled from the memory the next time you touch the same key.

Selecting the theme color

A theme color can be selected from 5 different colors.

1 Display the "Theme" screen.



2 Touch [Theme].

- You can also change the screen for settings by touching **[Illumination]**, **[Background]** or **[Utility]** on this screen.
- ## 3 Touch the color you want.
- You can preview the Top menu screen or the AV operation screen by touching **[Home]** or **[AV]** respectively.

Selecting the clock image

The clock on the AV operation screen and the Top menu screen can be selected from 3 different images.


1 Display the "Theme" screen.



2 Touch [Utility].

- You can also change the screen for settings by touching **[Illumination]**, **[Theme]** or **[Background]** on this screen.

3 Touch the item you want to set.

- Preset images: Selects the desired preset clock image.
-  (off): Hides the clock display.
- You can preview the Top menu screen or the AV operation screen by touching **[Home]** or **[AV]** respectively.

Setting up the video player

Setting the top-priority languages

You can assign the top-priority language to the top-priority subtitle, audio and menu in initial playback. If the selected language is recorded on the disc, subtitles, audio and menu are displayed or output in that language.

- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

Setting the subtitle language

You can set a desired subtitle language. When available, the subtitles will be displayed in the selected language.

1 Display the "Video Setup" screen.




2 Touch [DVD/DivX Setup].

3 Touch [Subtitle Language].

The pop-up menu appears.

4 Touch the desired language.

When you select "Others", a language code input screen is shown. Input the four-digit code of the desired language then touch .

- If the selected language is not available, the language specified on the disc is displayed.
- You can also switch the subtitle language by touching the switch subtitle languages key during playback.
- The setting made here will not be affected even if the subtitle language is switched during playback using the switch subtitle languages key.

Setting the audio language

You can set the preferred audio language.

1 Display the "Video Setup" screen.




2 Touch [DVD/DivX Setup].

3 Touch [Audio Language].

The pop-up menu appears.

4 Touch the desired language.

When you select "Others", a language code input screen is shown. Input the four-digit code of the desired language then touch .

- If the selected language is not available, the language specified on the disc is displayed.
- You can also switch the audio language by touching the switch audio languages key during playback.
- The setting made here will not be affected even if the audio language is switched during playback using the switch audio languages key.

Setting the menu language

You can set the preferred language in which the menus recorded on a disc are displayed.

1 Display the "Video Setup" screen.




2 Touch [DVD/DivX Setup].

3 Touch [Menu Language].

The pop-up menu appears.

4 Touch the desired language.

When you select "Others", a language code input screen is shown. Input the four-digit code of the desired language then touch .


- If the selected language is not available, the language specified on the disc is displayed.

Setting the angle icon display

The angle icon can be set so it appears on scenes where the angle can be switched.

- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

 1 Display the "Video Setup" screen.



2 Touch [DVD/DivX Setup].

3 Touch [Multi Angle] repeatedly until the desired setting appears.

- **On** (default): Turns the multi-angle setting on.
- **Off**: Turns the multi-angle setting off.

Setting the aspect ratio

There are two kinds of displays. A wide screen display has a width-to-height ratio (TV aspect) of 16:9, while a regular display has a TV aspect of 4:3. If you use a regular rear display with a TV aspect of 4:3, you can set the aspect ratio suitable for your rear display. (We recommend use of this function only when you want to fit the aspect ratio to the rear display.)

- When using a regular display, select either "Letter Box" or "Pan Scan". Selecting "16:9" may result in an unnatural image.
- If you select the TV aspect ratio, this product's display will change to the same setting.
- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

1 Display the "Video Setup" screen.



2 Touch [DVD/DivX Setup].

 
3 Touch [TV Aspect].

The pop-up menu appears.

4 Touch the item you want to set.

- **16:9** (default): Displays the wide screen image (16:9) as it is (initial setting).

Setting up the video player

- **Letter Box:** Makes the image in the shape of a letterbox with black bands on the top and bottom of the screen.
- **Pan Scan:** Cuts the image short on the right and left sides of the screen.
- When playing discs that do not have a panscan system, the disc is played back with "Letter Box" even if you select the "Pan Scan" setting. Confirm whether the disc package bears the  mark.
- The TV aspect ratio cannot be changed for some discs. For details, refer to the disc's instructions.

Setting parental lock

Some DVD/DivX discs let you use parental lock to set restrictions so that children cannot watch violent or adult-oriented scenes. You can set the parental lock level in steps as desired.

- When you set a parental lock level and then play a disc featuring parental lock, code number input indications may be displayed. In this case, playback will begin when the correct code number is input.
- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

Setting the code number and level

When you first use this function, register your code number. If you do not register a code number, the parental lock will not operate.

1 Display the "Video Setup" screen.



2 Touch [DVD/DivX Setup].

3 Touch [Parental].

The "Parental" screen appears.

4 Touch [0] to [9] to input a four-digit code number.

5 Touch the following key.



Registers the code number, and you can now set the level.

6 Touch any number between [1] to [8] to select the desired level.

- [8]: Enables playback of the entire disc (initial setting).
- [7] to [2]: Enables playback of discs for children and non-adult oriented discs.
- [1]: Enables only playback of discs for children.

7 Touch the following key.



Sets the parental lock level.

- We recommend to keep a record of your code number in case you forget it.
- The parental lock level is recorded on the disc. You can confirm it by looking at the disc package, the included literature or the disc itself. You cannot use parental lock with discs that do not feature a recorded parental lock level.
- With some discs, parental lock operates to skip certain scenes only, after which normal playback resumes. For details, refer to the disc's instructions.

Displaying your DivX VOD registration code

If you want to play DivX® VOD (video on demand) content on this product, you must first register this product with your DivX VOD content provider. You do this by generating a DivX VOD registration code, which you submit to your provider.

- Keep a record of the code as you will need it when you register this product to the DivX VOD provider.
- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

1 Display the "Video Setup" screen.



2 Touch [DVD/DivX Setup].

3 Touch [DivX® VOD].

The "DivX® VOD" screen appears.

- If a registration code has already been activated, it cannot be displayed.

4 Touch [Registration Code].

Your 10-digit registration code is displayed.

- Make a note of the code as you will need it when you deregister from a DivX VOD provider.

Displaying your DivX VOD deregistration code

A registration code registered with a deregistration code can be deleted.

- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

1 Display the "Video Setup" screen.



2 Touch [DVD/DivX Setup].

3 Touch [DivX® VOD].

The "DivX® VOD" screen appears.

4 Touch [Deregistration Code].

Your 8-digit deregistration code is displayed.

- Make a note of the code as you will need it when you deregister from a DivX VOD provider.

Automatic playback of DVDs

When a DVD disc with a DVD menu is inserted, this product will cancel the menu automatically and start playback from the first chapter of the first title.

- Some DVDs may not operate properly. If this function is not fully operable, turn this function off and start playback.
- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

1 Display the "Video Setup" screen.



2 Touch [DVD/DivX Setup].

3 Touch [DVD Auto Play] repeatedly until the desired setting appears.

- **Off** (default): Turns the DVD Auto Play setting off
- **On:** Turns the DVD Auto Play setting on

Setting up the video player

Setting the video signal for the rear view camera

When you connect a rear view camera to this product, select the suitable video signal setting.

- ❑ You can operate this function only for the video signal input into the AV input.

1 Display the "Video Setup" screen.



2 Touch [Video Signal Setting].

3 Touch [Camera].

The pop-up menu appears.

4 Touch the item you want to set.

- **Auto** (default): Adjusts the video signal setting automatically.
- **PAL**: Sets the video signal to PAL.
- **NTSC**: Sets the video signal to NTSC.
- **PAL-M**: Sets the video signal to PAL-M.
- **PAL-N**: Sets the video signal to PAL-N.
- **SECAM**: Sets the video signal to SECAM.

Favorite menu

Registering your favorite menu items in shortcuts allows you to quickly jump to the registered menu screen by a simple touch on the "Favorites" screen.

- ❑ Up to 12 menu items can be registered in the favorite menu.

Creating a shortcut

1 Display the "Settings" screen.



2 Touch the star icon of the menu item that you want to add to the favorite menu.

The star icon for the selected menu is filled in.

- To cancel the registration, touch the star icon in the menu column again.

Selecting a shortcut

1 Display the "Favorites" screen.



2 Touch the desired menu item.

Removing a shortcut

1 Display the "Favorites" screen.





2 Touch the favorite menu column you want to remove.

The selected menu item is removed from the "Favorites" screen.

- You can also remove a shortcut by touching the star icon in the registered menu column.

Common operations

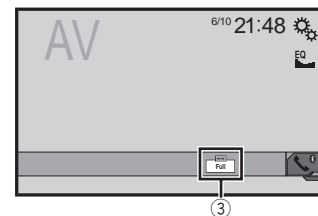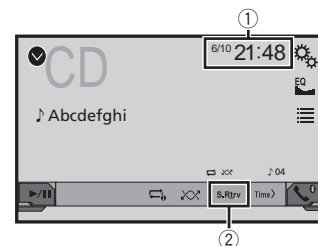

① Clock display

Displays the time and date setting screen

- ➔ *Setting the time and date* on page 44

② S.Rtrv key

Switches the sound retriever setting

- ➔ *Setting the "Sound Retriever" function* on page 45

③ Screen display mode key

Changes the wide screen mode

- ➔ *Changing the wide screen mode* on page 45

Setting the time and date

1 Touch the current time on the screen.

2 Touch or to set the correct time and date.

You can operate the following items: Year, month, date, hour, minute.

- ❑ You can change the time display format to "12hour" (default) or "24hour".
- ❑ You can change the order of date display format: Day-month-year, Month-day-year, Year-month-date.

Common operations

Setting the “Sound Retriever” function

The “**Sound Retriever**” function automatically enhances compressed audio and restores rich sound.

- Touch [S.Rtrv] to switch the settings.
- [S.Rtrv] (Mode1) (default), [S.Rtrv] (Mode2): Activates the “**Sound Retriever**” function.
- [S.Rtrv] (Off): Deactivates the “**Sound Retriever**” function.
- Mode1 has a stronger effect than Mode2.

Changing the wide screen mode

You can set the screen size for the video and JPEG images.

- The default setting is “**Full**”, and for JPEG images is “**Normal**”.

1 Touch the screen display mode key.

- The appearance of this key changes according to the current setting.

2 Touch the desired mode.

- **Full**
A 4:3 picture is enlarged in the horizontal direction only, enabling you to enjoy an image without any omissions.
 - This setting is for video only.
- **Zoom**
A 4:3 picture is enlarged in the same proportion both vertically and horizontally.
 - This setting is for video only.
- **Normal**
A 4:3 picture is displayed normally, without changing its proportion.
 - This setting is for video and JPEG images.
- **Trimming**
An image is displayed across the entire screen with the horizontal-to-vertical ratio left as is. If the screen ratio differs from the image, the image may be displayed partly cut off either at the top/bottom or sides.
 - This setting is for JPEG images only.
- You cannot operate this function while driving.
- Different settings can be stored for each video source.
- When a video is viewed in a wide screen mode that does not match its original aspect ratio, it may appear different.
- The video image will appear coarser when viewed in “**Zoom**” mode.

Other functions

Restoring this product to the default settings

You can restore settings or recorded content to the default settings. Various methods are used to clear user data.

Method 1: Remove the vehicle battery

Resets various settings registered to this product.

- The settings configured on the “**Theme**” screen are not reset.

Method 2: Initialize from the “System” menu

Method 3: Press the RESET button

- *Resetting the microprocessor on page 6*

Restoring the default settings

- This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

⚠CAUTION

Do not turn off the engine while restoring the settings.

1 Display the “System” setting screen.



2 Touch [Restore Settings].

A message confirming whether to initialize the settings appears.

3 Touch [Restore].

- The source is turned off and the Bluetooth connection is disconnected before the process starts.

Connection

Precautions

Your new product and this manual

- Do not operate this product, any applications, or the rear view camera option (if purchased) if doing so will divert your attention in any way from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating this product or reading the display, park your vehicle in a safe location and apply the parking brake before making the necessary adjustments.
- Do not install this product where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems of safety features, including airbags, hazard lamp buttons, or (iii) impair the driver's ability to safely operate the vehicle. In some cases, it may not be possible to install this product because of the vehicle type or the shape of the vehicle interior.

Important safeguards

⚠WARNING

Pioneer does not recommend that you install this product yourself. This product is designed for professional installation only. We recommend that only authorized Pioneer service personnel, who have special training and experience in mobile electronics, set up and install this product. NEVER SERVICE THIS PRODUCT YOURSELF. Installing or servicing this product and its connecting cables may expose you to the risk of electric shock or other hazards, and can cause damage to this product that is not covered by warranty.

Precautions before connecting the system

⚠WARNING

Do not take any steps to tamper with or disable the parking brake interlock system which is in place for your protection. Tampering with or disabling the parking brake interlock system could result in serious injury or death.

Connection

⚠ CAUTION

- Secure all wiring with cable clamps or electrical tape. Do not allow any bare wiring to remain exposed.
- Do not directly connect the yellow lead of this product to the vehicle battery. If the lead is directly connected to the battery, engine vibration may eventually cause the insulation to fail at the point where the wire passes from the passenger compartment into the engine compartment. If the yellow lead's insulation tears as a result of contact with metal parts, short-circuiting can occur, resulting in considerable danger.
- It is extremely dangerous to allow cables to become wound around the steering column or shift lever. Be sure to install this product, its cables, and wiring away in such so that they will not obstruct or hinder driving.
- Make sure that the cables and wires will not interfere with or become caught in any of the vehicle's moving parts, especially the steering wheel, shift lever, parking brake, sliding seat tracks, doors, or any of the vehicle's controls.
- Do not route wires where they will be exposed to high temperatures. If the insulation heats up, wires may become damaged, resulting in a short circuit or malfunction and permanent damage to the product.
- Do not shorten any leads. If you do, the protection circuit (fuse holder, fuse resistor or filter, etc.) may fail to work properly.
- Never feed power to other electronic products by cutting the insulation of the power supply lead of this product and tapping into the lead. The current capacity of the lead will be exceeded, causing overheating.

Before installing this product


- Use this unit with a 12-volt battery and negative grounding only. Failure to do so may result in a fire or malfunction.
- To avoid shorts in the electrical system, be sure to disconnect the (-) battery cable before installation.

To prevent damage

⚠ WARNING

- Use speakers over 50 W (output value) and between 4 Ω to 8 Ω (impedance value). Do not use 1 Ω to 3 Ω speakers for this unit.
- The black cable is ground. When installing this unit

or power amp (sold separately), make sure to connect the ground wire first. Ensure that the ground wire is properly connected to metal parts of the car's body. The ground wire of the power amp and the one of this unit or any other device must be connected to the car separately with different screws. If the screw for the ground wire loosens or falls out, it could result in fire generation of smoke or malfunction.

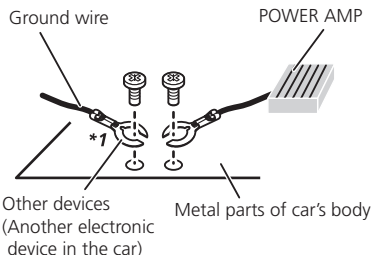

***1 Non supplied for this unit**

- When replacing the fuse, be sure to only use a fuse of the rating prescribed on this product.
- This product cannot be installed in a vehicle without ACC (accessory) position on the ignition switch.



ACC position




No ACC position

- To avoid short-circuiting, cover the disconnected lead with insulating tape. It is especially important to insulate all unused speaker leads, which if left uncovered may cause a short circuit.
- For connecting a power amp or other devices to this product, refer to the manual for the product to be connected.

Notice for the blue/white lead

- When the ignition switch is turned on (ACC ON), a control signal is output through the blue/white lead. Connect to an external power amp's system remote control terminal, the auto-antenna relay control terminal, or the antenna booster power control terminal (max. 300 mA 12 V DC). The control signal is output through the blue/white lead, even if the audio source is switched off.


This product

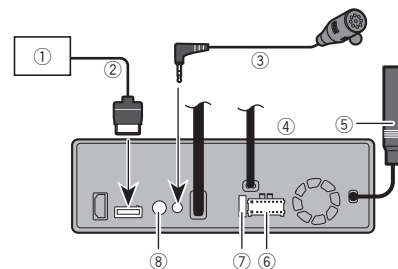

- ① Hideaway TV tuner (GEX-1550TV (sold separately))
 - ② RGB cable (Supplied with Navigation system)
 - ③ Microphone 4 m (AVH-X7750BT)
 - ④ This product
 - ⑤ Antenna jack
 - ⑥ Power supply
 - ⑦ Fuse (10 A)
 - ⑧ Wired remote input
- Hard-wired remote control adapter can be connected (sold separately).

Connection


Power cord

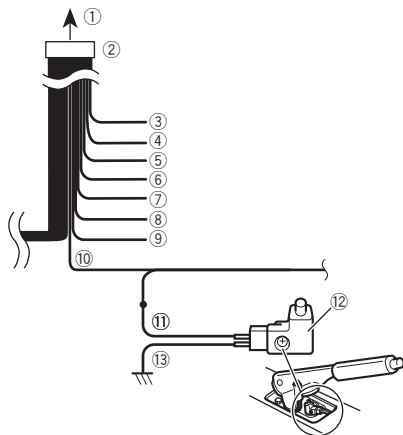


- ① To power supply
- ② Power cord
- ③ Yellow
- To terminal supplied with power regardless of ignition switch position.
- ④ Red
- To electric terminal controlled by ignition switch (12 V DC) ON/OFF.
- ⑤ Orange/white
- To lighting switch terminal.
- ⑥ Black (ground)
- To vehicle (metal) body.
- ⑦ Violet/white
- Of the two lead wires connected to the back lamp, connect the one in which the voltage changes when the gear shift is in the REVERSE (R) position. This connection enables the unit to sense whether the car is moving forwards or backwards.
- ⑧ Yellow/black
- If you use an equipment with Mute function, wire this lead to the Audio Mute lead on that equipment. If not, keep the Audio Mute lead free of any connections.

- ⑨ Blue/white
- Connect to system control terminal of the power amp (max. 300 mA 12 V DC).
- ⑩ Light green
- Used to detect the ON/OFF status of the parking brake. This lead must be connected to the power supply side of the parking brake switch.
- ⑪ Power supply side
- ⑫ Parking brake switch
- ⑬ Ground side

Speaker leads

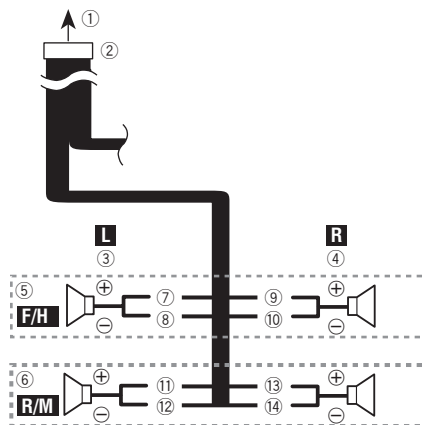

Perform these connections when using a subwoofer without the optional amplifier.

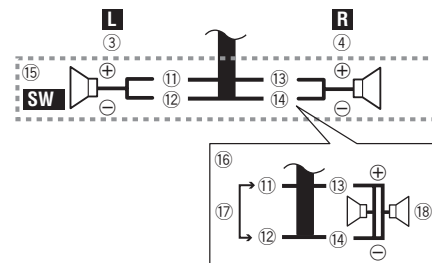

- ① To power supply
- ② Power cord
- ③ Left
- ④ Right
- ⑤ Front speaker (STD) or high range speaker (NW)
- ⑥ Rear speaker (STD) or middle range speaker (NW)
- ⑦ White
- ⑧ White/black
- ⑨ Gray
- ⑩ Gray/black
- ⑪ Green
- ⑫ Green/black
- ⑬ Violet
- ⑭ Violet/black
- ⑮ Subwoofer (4Ω)
- ⑯ When using a subwoofer of 70W (2Ω), be sure to connect the subwoofer to the violet and violet/black leads of this unit. Do not connect anything to the green and green/black leads.
- ⑰ Not used.
- ⑱ Subwoofer (4Ω) x 2
- When a subwoofer is connected to this product instead of a rear speaker, change the rear output setting in the initial setting. The subwoofer output of this product is monaural.
- *Switching the rear speaker output on page 38*
- With a two-speaker system, do not connect anything to the speaker leads that are not connected to speakers.


Power amp (sold separately)

Without internal amp

Important

The speaker leads are not used when this connection is in use.


Connection

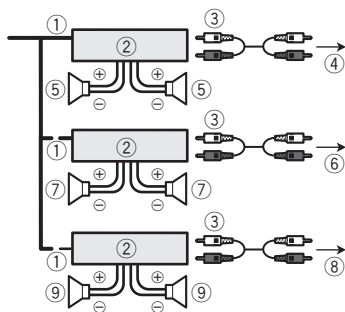

With internal amp

Important

 Front speaker and Rear speaker signals (STD) or middle range speaker and high range speaker signals (NW) are output from the speaker leads when this connection is in use.



- ① System remote control
Connect to Blue/white cable.
 - ② Power amp (sold separately)
 - ③ Connect with RCA cable (sold separately)
 - ④ To Rear output (STD)
To middle range output (NW)
 - ⑤ Rear speaker (STD)
Middle range speaker (NW)
 - ⑥ To Front output (STD)
To high range output (NW)
 - ⑦ Front speaker (STD)
High range output (NW)
 - ⑧ To subwoofer output (STD)
To low range output (NW)
 - ⑨ Subwoofer (STD)
Low range speaker (NW)
- Change the speaker mode to standard mode (STD) or network mode (NW).

➡ On first-time startup on page 10

- You can change the RCA output of the subwoofer depending on your subwoofer system.
- The subwoofer output of this product is monaural.


iPhone and smartphone

- For details on how to connect an external device using a separately sold cable, refer to the manual for the cable.
- For details concerning the connection, operations and compatibility of iPhone, refer to *Setup for iPod / iPhone or smartphone* on page 17.
- For details concerning the connection and operations of Android device, refer to *Setup for iPod / iPhone or smartphone* on page 17.

iPhone with Lightning connector

Connecting via the USB port

The USB interface cable for iPod / iPhone (CD-IU52) (sold separately) is required for the connection.

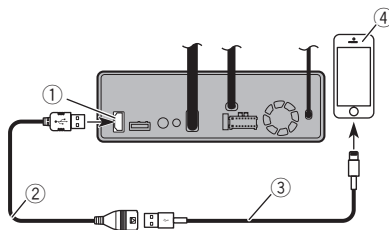


- ① USB port
- ② USB cable 1.5 m
- ③ USB interface cable for iPod / iPhone (CD-IU52) (sold separately)
- ④ iPhone with Lightning connector

iPhone with 30-pin connector

Connecting via the AUX input

The USB interface cable for iPod / iPhone (CD-IU201V) (sold separately) is required for the connection.

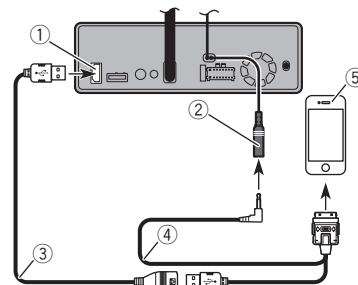


- ① USB port
- ② AUX input
- ③ USB cable 1.5 m
- ④ USB interface cable for iPod / iPhone (CD-IU201V) (sold separately)
- ⑤ iPhone with 30-pin connector

Android or MirrorLink device

Connecting via the USB port

The USB interface cable for Android or MirrorLink™ devices (CD-MU200) (sold separately) is required for the connection.

Connection

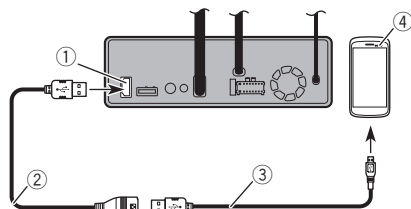

- ① USB port
- ② USB cable (supplied with CD-MU200)
- ③ USB - micro USB cable (Type USB A - micro USB B) (supplied with CD-MU200)
- ④ Android or MirrorLink device

Camera

About rear view camera


When you use the rear view camera, the rear view image is automatically switched from the video by moving the shift lever to **REVERSE (R)**. **Camera View** mode also allows you to check what is behind you while driving.

⚠ WARNING

USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.


⚠ CAUTION

- The screen image may appear reversed.
- With the rear view camera you can keep an eye on trailers, or back into a tight parking spot. Do not use for entertainment purposes.
- Objects in rear view may appear closer or more distant than in reality.
- The image area of full-screen images displayed while backing or checking the rear of the vehicle may differ slightly.

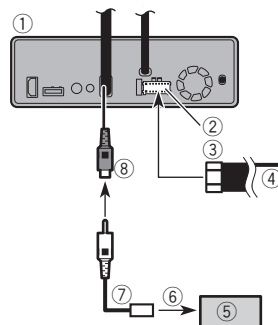

- ① This product
- ② Power supply
- ③ Power cord
- ④ Violet/white (**REVERSE-GEAR SIGNAL INPUT**)
 ➔ *Power cord* on page 47
- ⑤ Rear view camera (ND-BC6) (sold separately)
- ⑥ To video output
- ⑦ RCA cable (supplied with ND-BC6)
- ⑧ Brown (**REAR VIEW CAMERA IN**)
- Connect only the rear view camera to **REAR VIEW CAMERA IN**. Do not connect any other equipment.
- Some appropriate settings are required to use rear view cameras.
- ➔ *Setting the rear view camera* on page 34

External video component and the display

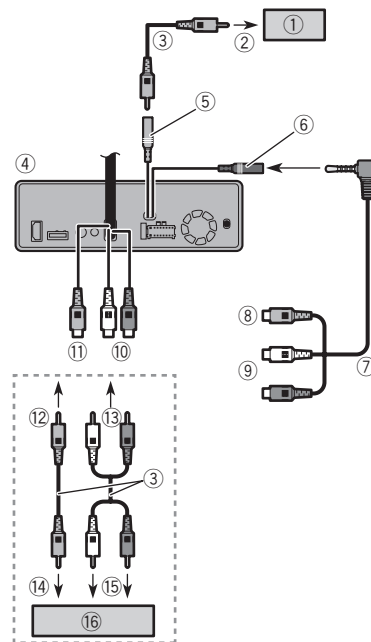

- ① Rear display with RCA input jacks
- ② To video input
- ③ RCA cables (sold separately)
- ④ This product
- ⑤ Yellow (**REAR MONITOR OUTPUT**)
- ⑥ AUX input
- ⑦ Mini-jack AV cable (CD-RM10) (sold separately)
- ⑧ Yellow
- ⑨ Red, white
- ⑩ Red, white (**AUDIO INPUT**)
- ⑪ Yellow (**VIDEO INPUT**)
- ⑫ To Yellow

Connection

- ⑬ To Red, white
- ⑭ To video output
- ⑮ To audio outputs
- ⑯ External video component (sold separately)
- The appropriate setting is required to use the external video component.
- ➡ AV input on page 32

⚠ WARNING

NEVER install the rear display in a location that enables the driver to watch the video source while driving.

This product's rear video output is for connection of a display to enable passengers in the rear seats to watch the video source.

Installation

Precautions before installation

⚠ CAUTION

Never install this product in places where, or in a manner that:

- Could injure the driver or passengers if the vehicle stops suddenly.
- May interfere with the driver's operation of the vehicle, such as on the floor in front of the driver's seat, or close to the steering wheel or shift lever.
- To ensure proper installation, be sure to use the supplied parts in the manner specified. If any parts are not supplied with this product, use compatible parts in the manner specified after you have the parts' compatibility checked by your dealer. If parts other than supplied or compatible ones are used, they may damage internal parts of this product or they may work loose and the product may become detached.
- Do not install this product where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including airbags, hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle.
- Never install this product in front of or next to the place in the dashboard, door, or pillar from which one of your vehicle's airbags would deploy. Please refer to your vehicle's owner's manual for reference to the deployment area of the frontal airbags.

 
Before installing

- Consult with your nearest dealer if installation requires drilling holes or other modifications of the vehicle.
- Before making a final installation of this product, temporarily connect the wiring to confirm that the connections are correct and the system works properly.


Installation notes

- Do not install this product in places subject to high temperatures or humidity, such as:
 - Places close to a heater, vent or air conditioner.
 - Places exposed to direct sunlight, such as on top of the dashboard.
 - Places that may be exposed to rain, such as close to the door or on the vehicle's floor.
- Install this product horizontally on a surface within 0 to 30 degrees tolerance (within 5 degrees to the left or right). Improper installation of the unit with the surface tilted more


than these tolerances increases the potential for errors in the vehicle's location display, and might otherwise cause reduced display performance.



- When installing, to ensure proper heat dispersal when using this unit, make sure you leave ample space behind the rear panel and wrap any loose cables so they are not blocking the vents.

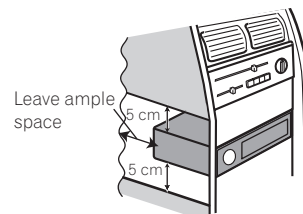


- The cords must not cover up the area shown in the figure below. This is necessary to allow the amplifiers to radiate freely.

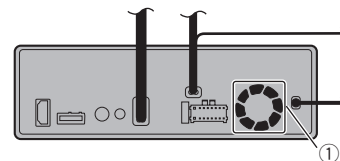

- ① Do not cover this area.
- Make sure you leave enough gap between the dashboard and the LCD panel of this unit so the LCD panel can be opened and closed without contacting with the dashboard.

Installation

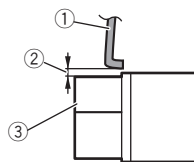

- ① Dashboard
- ② Leave gap
- ③ LCD panel


DIN front/rear-mount

This unit can be properly installed using either front-mount or rear-mount installation. Use commercially available parts when installing.

DIN Front-mount

1 Decide the position of the side brackets.


When installing in a shallow space, change the position of side brackets (small).

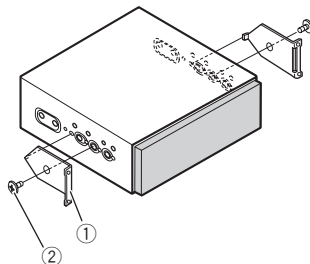

- ① Side bracket (small)
- ② Flush surface screw (5 mm × 6 mm)

2 Install the unit into the dashboard.

Insert the mounting sleeve into the dashboard. And then secure the mounting sleeve by using a screwdriver to bend the metal tabs (90°) into place.

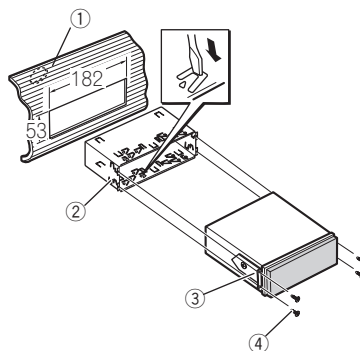


- ① Dashboard
- ② Mounting sleeve
- ③ Side bracket
- ④ Screw (2 mm × 3 mm)

DIN Rear-mount

1 Determine the appropriate position where the holes on the bracket and the side of the unit match.


When installing in a shallow space, use the following screw holes.

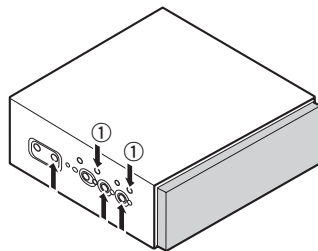

- ① Use binding screws (4 mm × 3 mm) only.

2 Tighten two screws on each side.

Use any of binding screws (4 mm × 3 mm), binding screws (5 mm × 6 mm) or flush surface screws (5 mm × 6 mm), depending on the shape of screw holes in the bracket.

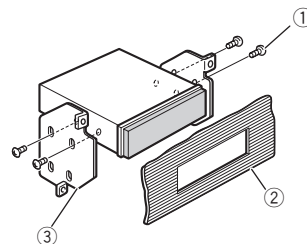


- ① Screw
- ② Dashboard or console
- ③ Factory radio mounting bracket
- In some types of vehicles, discrepancy may occur between the unit and the dashboard. If this happens, use the supplied frame to fill the gap.

Removing the unit

Extend top and bottom of the trim ring outwards to remove the trim ring. And then loosen the screws (2 mm × 3 mm) to remove the mounting sleeve.

- When reattaching the trim ring, push the trim ring onto the unit until it clicks. (If the trim ring is attached upside down, the trim ring will not fit properly.)

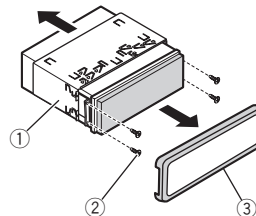

- ① Mounting sleeve
- ② Screw (2 mm × 3 mm)
- ③ Trim ring

Installation


Installing the microphone

X7750BT

- Install the microphone in a place where its direction and distance from the driver make it easiest to pick up the driver's voice.
- Be sure to turn off (ACC OFF) the product before connecting the microphone.


Mounting on the sun visor

- 1 Fit the microphone lead into the groove.

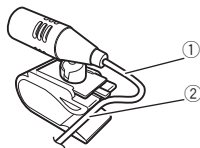

- ① Microphone lead
- ② Groove

- 2 Attach the microphone clip to the sun visor.

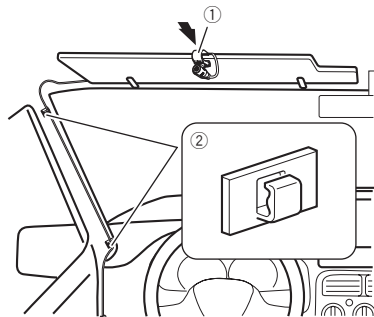


- ① Microphone clip
 - ② Clamps
- Use separately sold clamps to secure the lead where necessary inside the vehicle.

Install the microphone on the sun visor when it is in the up position. It cannot recognize the driver's voice if the sun visor is in the down position.


Installation on the steering column

- 1 Detach the microphone base from the microphone clip by sliding the microphone base while pressing the tab.

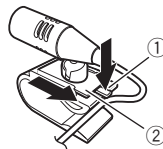

- ① Tab
- ② Microphone base

- 2 Mount the microphone on the steering column.

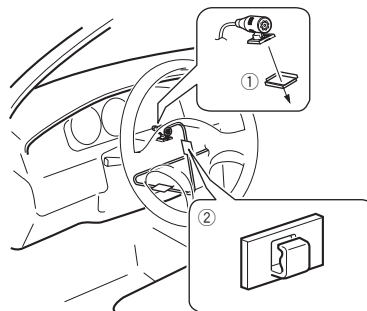

- ① Double-sided tape
 - ② Clamps
- Use separately sold clamps to secure the lead where necessary inside the vehicle.
- Keeping it away from the steering wheel.

Adjusting the microphone angle



Troubleshooting

If you have problems operating this product, refer to this section. The most common problems are listed below, along with likely causes and solutions. If a solution to your problem cannot be found here, contact your dealer or the nearest authorized Pioneer service facility.

Problems with the AV screen

CD or DVD playback is not possible.

- The disc is inserted upside down.
 - Insert the disc with the label upward.
- The disc is dirty.
 - Clean the disc.
- The disc is cracked or otherwise damaged.
 - Insert a normal, round disc.
- The files on the disc are in an irregular file format.
 - Check the file format.
- The disc format cannot be played back.
 - Replace the disc.
- The loaded disc is a type this product cannot play.
 - Check what type of disc it is.

The screen is covered by a caution message and the video cannot be shown.

- The parking brake lead is not connected or applied.
 - Connect the parking brake lead correctly, and apply the parking brake.
- The parking brake interlock is activated.
 - Park your vehicle in a safe place and apply the parking brake.

No video output from the connected equipment.

- The "AV Input" setting is incorrect.
 - Correct the settings.

The audio or video skips.

- This product is not firmly secured.
 - Secure this product firmly.

No sounds are produced. The volume level will not rise.

- Cables are not connected correctly.
 - Connect the cables correctly.
- The system is performing still, slow motion, or frame-by-frame playback with DVD-Video.
 - There is no sound during still, slow motion, or frame-by-frame playback with DVD-Video.
- The system is paused or performing, fast reverse or forward during the disc playback.
 - For the media other than music CD (CD-DA), there is no sound on fast reverse or forward.

The icon is displayed, and operation is impossible.

- The operation is not compatible with the video configuration.
 - This operation is not possible. (For example, the DVD playing does not feature that angle, audio system, subtitle language, etc.)

The picture stops (pauses) and this product cannot be operated.

- The reading of data is impossible during disc playback.
 - Stop playback once, then restart.

The picture is stretched, with an incorrect aspect ratio.

- The aspect setting is incorrect for the display.
 - Select the appropriate setting for that image.

A parental lock message is displayed and DVD playback is not possible.

- The parental lock is on.
 - Turn the parental lock off or change the level.

The parental lock for DVD playback cannot be canceled.

- The code number is incorrect.
 - Input the correct code number.

Playback is not with the audio language and subtitle language settings selected in "DVD/DivX Setup".

- The DVD playing does not feature dialog or subtitles in the language selected in "DVD/DivX Setup".
 - Switching to a selected language is not possible if the language selected in "DVD/DivX Setup" is not recorded on the disc.

The picture is extremely unclear/distorted and dark during playback.

- The disc features a signal to prohibit copying. (Some discs may have this.)
 - Since this product is compatible with the copy guard analog copy protect system, the picture may suffer from horizontal stripes or other imperfections when a disc with that kind of protection signal is viewed on some displays. This is not a malfunction.

iPod cannot be operated.

- The iPod is frozen.
 - Reconnect the iPod with the USB interface cable for iPod / iPhone.
 - Update the iPod software version.
- An error has occurred.
 - Reconnect the iPod with the USB interface cable for iPod / iPhone.
 - Park your vehicle in a safe place, and turn off the engine. Turn the ignition key back to off (ACC OFF). Then restart the engine, and turn the power to this product back on.
 - Update the iPod software version.
- Cables are not connected correctly.
 - Connect the cables correctly.

Sound from the iPod cannot be heard.

- The audio output direction may switch automatically when the Bluetooth and USB connections are used at the same time.
 - Use the iPod to change the audio output direction.


Problems with the phone screen

Dialing is impossible because the touch panel keys for dialing are inactive.

- Your phone is out of range for service.
 - Retry after re-entering the range for service.
- The connection between the cellular phone and this product cannot be established now.
 - Perform the connection process.

Problems with the Application screen

A black screen is displayed.

- While operating an application, the application was ended on the smartphone side.
 - Press  to display the Top menu screen.
- The smartphone OS may be awaiting screen operation.
 - Stop the vehicle in a safe place and check the screen on the smartphone.

The screen is displayed, but operation does not work at all.

- An error has occurred.
 - Park your vehicle in a safe place, and then turn off the ignition switch (ACC OFF). Subsequently, turn the ignition switch to on (ACC ON) again.
 - When an Android device is connected, disconnect the Bluetooth connection from this product and then reconnect it.

Appendix

The smartphone was not charged.

- Charging stopped because the temperature of the smartphone rose due to prolonged use of the smartphone during charging.
 - Disconnect the smartphone from the cable, and wait until the smartphone cools down.
- More battery power was consumed than was gained from charging.
 - This problem may be resolved by stopping any unnecessary services on the smartphone.

Error messages

When problems occur with this product, an error message appears on the display. Refer to the table below to identify the problem, then take the suggested corrective action. If the error persists, record the error message and contact your dealer or your nearest Pioneer service center.

Common

AMP Error

- This product fails to operate or the speaker connection is incorrect; the protective circuit is activated.
 - Check the speaker connection. If the message fails to disappear even after the engine is switched off/on, contact your dealer or an authorized Pioneer Service Station for assistance.

Product overheat. System will be shut down automatically in 1 minute. Restart the product by ACC Off/On may fix this problem. If this message keep showing up, it is possible that some problem occurred in the product.

- The temperature is too high for this product to operate.
 - Follow the instructions displayed on the screen. If this does not solve the problem, contact your dealer or an authorized Pioneer Station for assistance.

Disc

Error-02-XX/FF-FF

- The disc is dirty.
 - Clean the disc.
- The disc is scratched.
 - Replace the disc.
- The disc is loaded upside down.
 - Check that the disc is loaded correctly.
- There is an electrical or mechanical error.
 - Press the **RESET** button.

Different Region Disc

- The disc does not have the same region number as this product.
 - Replace the DVD with one bearing the correct region number.

Unplayable Disc

- This type of disc cannot be played on this product.
 - Replace the disc with one that can be played on this product.

Unplayable File

- This type of file cannot be played on this product.
 - Select a file that can be played.

Skipped

- The inserted disc contains DRM protected files.
 - The protected files are skipped.

Protect

- All the files on the inserted disc are embedded with DRM.
 - Replace the disc.

TEMP

- The temperature of this product is outside the normal operating range.
 - Wait until this product returns to a temperature within the normal operating limits.

This DivX rental has expired.

- The inserted disc contains expired DivX VOD content.
 - Select a file that can be played.

Video resolution not supported

- Files that cannot be played on this product are included in the file.
 - Select a file that can be played.

Unable to write to flash memory.

- The playback history for VOD contents cannot be saved for some reason.
 - Retry.
 - If the message appears frequently, consult your dealer.

Your device is not authorized to play this DivX protected video.

- This product's DivX registration code has not been authorized by the DivX VOD contents provider.
 - Register this product to the DivX VOD contents provider.

Video frame rate not supported

- DivX file's frame rate is more than 30 fps.
 - Select a file that can be played.

Audio Format not supported

- This type of file is not supported on this product.
 - Select a file that can be played.

USB storage device

Error-02-9X/-DX

- Communication failed.
 - Turn the ignition switch OFF and back ON.
 - Disconnect the USB storage device.
 - Change to a different source. Then, return to the USB storage device.

Unplayable File

- This type of file cannot be played on this product.
 - Select a file that can be played.
- Security for the connected USB storage device is enabled.
 - Follow the USB storage device instructions to disable security.

Skipped

- The connected USB storage device contains DRM protected files.
 - The protected files are skipped.

Protect

- All the files on the connected USB storage device are embedded with DRM.
 - Replace the USB storage device.

Incompatible USB

- The connected USB storage device is not supported by this product.
 - Disconnect your device and replace it with a compatible USB storage device.

Check USB

- The USB connector or USB cable is short-circuited.
 - Check that the USB connector or USB cable is not caught in something or damaged.
- The connected USB storage device consumes more than maximum allowable current.
 - Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect a compliant USB storage device.

Video resolution not supported

- Files that cannot be played on this product are included in the file.
 - Select a file that can be played.

USB was disconnected for device protection. Do not re-insert this USB memory into the unit. Please reset the unit.

- The USB connector or USB cable is short-circuited.
 - Check that the USB connector or USB cable is not caught in something or damaged.
- The connected USB storage device consumes more than maximum allowable current.
 - Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect a compliant USB storage device.
- The USB interface cable for iPod / iPhone is short-circuited.
 - Confirm that the USB interface cable for iPod / iPhone or USB cable is not caught in something or damaged.

Audio Format not supported

- This type of file is not supported on this product.
 - Select a file that can be played.

iPod

Error-02-6X/-9X/-DX

- iPod failure.
 - Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.

Error-02-67

- The iPod firmware version is old.
 - Update the iPod version.

iTunes tagging

Error-8D

- Built-in FLASH ROM encountered an error.
 - Turn the ignition switch to OFF and then to ON.

Tag store failed.

- Tag information cannot be stored in this product.
 - Try again.

Already stored.

- This tag information is already stored in memory.
 - Tag information can only be saved once for any given song. Tag information cannot be saved for the same song more than once.

Memory full. Connect iPod.

- The tag information is successfully stored. The flash memory of this product has become full.
 - The tag information on this product is transferred to the iPod automatically when an iPod is connected.

Memory full. Tags not stored. Connect iPod.

- This product's flash memory used as the temporary storage area is full.
 - The tag information on this product is transferred to the iPod automatically when an iPod is connected.

iPod full. Tags not transferred.

- Memory used for tag information on the iPod is full.
 - Sync the iPod with iTunes and clean up the tagged playlist.

Tag transfer failed. Reconnect your iPod.

- This product's tag information cannot transfer to the iPod.
 - Check the iPod and try again.

Bluetooth

Error-10

- The power failed for the Bluetooth module of this product.
 - Turn the ignition switch to OFF and then to ON.
- If the error message is still displayed after performing the above action, please contact your dealer or an authorized Pioneer Service Station.

MirrorLink

The application list could not be read out.

- Failed to load the application list.
 - Disconnect the cable from the smartphone, and then connect the smartphone again after a few seconds.
- Turn the ignition switch to OFF and then to ON.
- If the error message is still displayed after performing the above action, reset the smartphone.
- If the error message is still displayed after performing the above action, please contact your dealer or an authorized Pioneer Service Station.

There is no supported application on your MirrorLink device.

- No supported applications can be found.
 - Install **MirrorLink** compliant applications to your **MirrorLink** device.

Communication error occurred.

- There was a communication error.
 - Disconnect the cable from the smartphone, and then connect the smartphone again after a few seconds.
- Turn the ignition switch to OFF and then to ON.
- If the error message is still displayed after performing the above action, reset the smartphone.
- If the error message is still displayed after performing the above action, please contact your dealer or an authorized Pioneer Service Station.

Launching the application failed.

- Failed to launch the application.
 - Try again.

Failed to display the screen of your device because of irregular resolution.

- The image size is too large.
 - The size of the images transferred from the device exceeds 800 × 480.

Handling and care of discs

Some basic precautions are necessary when handling your discs.

Built-in drive and care

- Use only conventional, fully circular discs. Do not use shaped discs.
- Do not use cracked, chipped, warped, or otherwise damaged discs as they may damage the built-in drive.
- Use 12-cm discs. Do not use 8-cm discs or an adapter for 8-cm discs.
- When using discs that can be printed on label surfaces, check the instructions and the warnings of the discs. Depending on the discs, inserting and ejecting may not be possible. Using such discs may result in damage to this equipment.
- Do not attach labels, write on or apply chemicals to the surface of the discs.
- Do not attach commercially available labels or other materials to the discs.
- To clean a disc, wipe it with a soft cloth, moving outward from the center.
- Condensation may temporarily impair the built-in drive's performance.
- Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions and so on.
- Road shocks may interrupt disc playback.
- Read the precautions for discs before using them.

Ambient conditions for playing a disc

- At extremely high temperatures, a temperature cutout protects this product by switching it off automatically.
- Despite our careful design of the product, small scratches that do not affect actual operation may appear on the disc surface as a result of mechanical wear, ambient conditions

Appendix

for use or handling of the disc. This is not a sign of the malfunction of this product. Consider it to be normal wear and tear.

Playable discs

DVD-Video



- **DVD** is a trademark of DVD Format/Logo Licensing Corporation.
- It is not possible to play DVD-Audio discs. This DVD drive may not be able to play all discs bearing the marks shown above.

CD



AVCHD recorded discs

This unit is not compatible with discs recorded in AVCHD (Advanced Video Codec High Definition) format. Do not insert AVCHD discs. If inserted, the disc may not be ejected.

Playing DualDisc

- DualDiscs are two-sided discs that have a recordable CD for audio on one side and a recordable DVD for video on the other.
- Playback of the DVD side is possible with this product. However, since the CD side of DualDiscs is not physically

compatible with the general CD standard, it may not be possible to play the CD side with this product.

- Frequent loading and ejecting of a DualDisc may result in scratches to the disc.
- Serious scratches can lead to playback problems on this product. In some cases, a DualDisc may become stuck in the disc-loading slot and will not eject. To prevent this, we recommend you refrain from using DualDisc with this product.
- Please refer to the manufacturer for more detailed information about DualDiscs.

Dolby Digital

This product will down-mix Dolby Digital signals internally and the sound will be output in stereo.

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Detailed information for playable media

Compatibility

Common notes about disc compatibility

- Certain functions of this product may not be available for some discs.
- Compatibility with all discs is not guaranteed.
- It is not possible to playback DVD-ROM/DVD-RAM discs.
- Playback of discs may become impossible with direct exposure to sunlight, high temperatures, or depending on the storage conditions in the vehicle.

DVD-Video discs

- DVD-Video discs that have incompatible region numbers cannot be played on this DVD drive. The region number of the player can be found on this product's chassis.

DVD-R/DVD-RW/DVD-R SL (Single Layer)/DVD-R DL (Dual Layer) discs

- Unfinalized discs which have been recorded with the Video format (video mode) cannot be played back.
- Discs which have been recorded with the Video Recording format (VR mode) cannot be played back.
- DVD-R DL (Dual Layer) discs which have been recorded with Layer Jump recording cannot be played back.
- For detailed information about recording mode, please contact the manufacturer of media, recorders, or writing software.

CD-R/CD-RW discs

- Unfinalized discs cannot be played back.
- It may not be possible to playback CD-R/CD-RW discs recorded on a music CD recorder or a computer because of disc characteristics, scratches or dirt on the disc, or dirt, scratches or condensation on the lens of the built-in drive.
- Playback of discs recorded on a computer may not be possible, depending on the recording device, writing software, their settings, and other environmental factors.
- Please record with the correct format. (For details, please contact manufacturer of media, recorders, or writing software.)
- Titles and other text information recorded on a CD-R/CD-RW disc may not be displayed by this product (in the case of audio data (CD-DA)).
- Read the precautions with CD-R/CD-RW discs before using them.

Common notes about the USB storage device

- Do not leave the USB storage device in any location with high temperatures.
- Depending on the kind of the USB storage device you use, this product may not recognize the storage device or files may not be played back properly.
- The text information of some audio and video files may not be correctly displayed.
- File extensions must be used properly.
- There may be a slight delay when starting playback of files on an USB storage device with complex folder hierarchies.
- Operations may vary depending on the kind of an USB storage device.

Appendix

- It may not be possible to play some music files from USB because of file characteristics, file format, recorded application, playback environment, storage conditions, and so on.

USB storage device compatibility

- For details about USB storage device compatibility with this product, refer to *Specifications* on page 61.
 - Protocol: bulk
 - You cannot connect a USB storage device to this product via a USB hub.
 - Partitioned USB storage device is not compatible with this product.
 - Firmly secure the USB storage device when driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or gas pedal.
 - There may be a slight delay when starting playback of audio files encoded with image data.
 - Some USB storage devices connected to this product may generate noise on the radio.
 - Do not connect anything other than the USB storage device.
- The sequence of audio files on USB storage device
For USB storage device, the sequence is different from that of USB storage device.

Handling guidelines and supplemental information

- This product is not compatible with the Multi Media Card (MMC).
- Copyright protected files cannot be played back.

Common notes about DivX files

Notes specific to DivX files

- Only DivX files downloaded from DivX partner sites are guaranteed for proper operation. Unauthorized DivX files may not operate properly.
- DRM rental files cannot be operated until playing back is started.
- This product corresponds to a DivX file display of up to 1 590 minutes 43 seconds. Search operations beyond this time limit are prohibited.
- DivX VOD file playback requires supplying the ID code of this product to the DivX VOD provider. Regarding the ID code, refer to *Displaying your DivX VOD registration code* on page 43.
- For details on the DivX video versions that can be played on this product, refer to *Specifications* on page 61.
- For more details about DivX, visit the following site:
<http://www.divx.com/>

DivX subtitle files

- Srt format subtitle files with the extension ".srt" can be used.
- Only one subtitle file can be used for each DivX file. Multiple subtitle files cannot be associated.

- Subtitle files that are named with the same character string as the DivX file before the extension are associated with the DivX file. The character strings before the extension must be exactly the same. However, if there is only one DivX file and one subtitle file in a single folder, the files are associated even if the file names are not the same.
- The subtitle file must be stored in the same folder as the DivX file.
- Up to 255 subtitle files may be used. Any more subtitle files will not be recognized.
- Up to 64 characters can be used for the name of the subtitle file, including the extension. If more than 64 characters are used for the file name, the subtitle file may not be recognized.
- The character code for the subtitle file should comply with ISO-8859-1. Using characters other than ISO-8859-1 may cause the characters to be displayed incorrectly.
- The subtitles may not be displayed correctly if the displayed characters in the subtitle file include control code.
- For materials that use a high transfer rate, the subtitles and video may not be completely synchronized.
- If multiple subtitles are programmed to display within a very short time frame, such as 0.1 seconds, the subtitles may not be displayed at the correct time.

Media compatibility chart

General

- Maximum playback time of audio file stored in the disc: 60 h
- Maximum playback time of audio file stored on an USB storage device: 7.5 h (450 minutes)

CD-R/-RW

File system: ISO9660 level 1.ISO9660 level 2.Romeo, Joliet.UDF 1.02/1.50/2.00/2.01/2.50
Maximum number of folders: 700
Maximum number of files: 999
Playable file types: MP3, WMA, AAC, DivX, MPEG1, MPEG2, MPEG4

DVD-R/-R SL/-R DL/ DVD-RW

File system: ISO9660 level 1.ISO9660 level 2.Romeo, Joliet.UDF 1.02/1.50/2.00/2.01/2.50
Maximum number of folders: 700
Maximum number of files: 3 500
Playable file types: MP3, WMA, AAC, DivX, MPEG1, MPEG2, MPEG4

USB storage device

File system: FAT16/FAT32
Maximum number of folders: 1 500

Maximum number of files: 15 000

Playable file types: MP3, WMA, AAC, WAVE, H.264, MPEG4, MKV, JPEG

MP3 compatibility

- Ver. 2.x of ID3 tag is prioritized when both Ver. 1.x and Ver. 2.x exist.
- This product is not compatible with the following: MP3i (MP3 interactive), mp3 PRO, m3u playlist

CD-R/-RW

File extension: .mp3
Bit rate: 8 kbps to 320 kbps (CBR), VBR
Sampling frequency: 16 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)
ID3 tag: ID3 tag Ver. 1.0, 1.1, 2.2, 2.3

DVD-R/-R SL/-R DL/ DVD-RW

File extension: .mp3
Bit rate: 8 kbps to 320 kbps (CBR), VBR
Sampling frequency: 16 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)
ID3 tag: ID3 tag Ver. 1.0, 1.1, 2.2, 2.3

USB storage device

File extension: .mp3
Bit rate: 8 kbps to 320 kbps (CBR), VBR
Sampling frequency: 8 kHz to 48 kHz
ID3 tag: ID3 tag Ver. 1.0, 1.1, 2.2, 2.3, 2.4

WMA compatibility

- This product is not compatible with the following: Windows Media™ Audio 9 Professional, Lossless, Voice

CD-R/-RW

File extension: .wma
Bit rate: 5 kbps to 320 kbps (CBR), VBR
Sampling frequency: 8 kHz to 48 kHz

DVD-R/-R SL/-R DL/ DVD-RW

File extension: .wma
Bit rate: 5 kbps to 320 kbps (CBR), VBR
Sampling frequency: 8 kHz to 48 kHz

USB storage device

File extension: .wma
Bit rate: 5 kbps to 320 kbps (CBR), VBR
Sampling frequency: 8 kHz to 48 kHz

WAV compatibility

- The sampling frequency shown in the display may be rounded.

- WAV files on the CD-R/-RW, DVD-R/-RW/-R SL/-R DL cannot be played.

USB storage device

File extension: .wav
Format: Linear PCM (LPCM)
Sampling frequency: 16 kHz to 48 kHz
Quantization bits: 8 bits and 16 bits

AAC compatibility

- This product plays back AAC files encoded by iTunes.

CD-R/-RW

File extension: .m4a
Bit rate: 8 kbps to 320 kbps (CBR)
Sampling frequency: 8 kHz to 44.1 kHz

DVD-R/-R SL/-R DL/ DVD-RW

File extension: .m4a
Bit rate: 8 kbps to 320 kbps (CBR)
Sampling frequency: 8 kHz to 44.1 kHz

USB storage device

File extension: .m4a
Bit rate: 8 kbps to 320 kbps (CBR)
Sampling frequency: 8 kHz to 48 kHz

DivX compatibility

- This product is not compatible with the following: DivX Ultra format, DivX files without video data, DivX files encoded with LPCM (Linear PCM) audio codec
- Depending on the file information composition, such as the number of audio streams, there may be a slight delay in the start of playback on discs.
- If a file contains more than 4 GB, playback stops before the end.
- Some special operations may be prohibited because of the composition of DivX files.
- Files with high transfer rates may not be played back correctly. The standard transfer rate is 4 Mbps for CDs and 10.08 Mbps for DVDs.
- DivX files on the USB storage device cannot be played.

CD-R/-RW

File extension: .avi/.divx
Profile (DivX version): Home Theater Ver. 3.11/Ver. 4.x/Ver. 5.x/Ver. 6.x
Compatible audio codec: MP3, Dolby Digital
Bit rate (MP3): 8 kbps to 320 kbps (CBR), VBR
Sampling frequency (MP3): 16 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)
Maximum image size: 720 pixels × 576 pixels
Maximum file size: 4 GB

DVD-R/-R SL/-R DL/ DVD-RW

File extension: .avi/.divx
Profile (DivX version): Home Theater Ver. 3.11/Ver. 4.x/Ver. 5.x/Ver. 6.x
Compatible audio codec: MP3, Dolby Digital
Bit rate (MP3): 8 kbps to 320 kbps (CBR), VBR
Sampling frequency (MP3): 16 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)
Maximum image size: 720 pixels × 576 pixels
Maximum file size: 4 GB

Video files compatibility (USB)

- Files may not be played back properly depending on the environment in which the file was created or on the contents of the file.
- This product may not operate correctly, depending on the application used to encode WMA files.
- Depending on the version of Windows Media™ Player used to encode WMA files, album names and other text information may not be correctly displayed.
- There may be a slight delay when starting playback of audio files encoded with image data.
- This product is not compatible with packet write data transfer.
- This product can recognize up to 32 characters, beginning with the first character, including extension for the file and folder name. Depending on the display area, this product may try to display them with a reduced font size. However, the maximum number of the characters that you can display varies according to the width of each character, and of the display area.
- Folder selection sequence or other operations may be altered, depending on the encoding or writing software.
- Regardless of the length of blank section between the songs of original recording, compressed audio discs play with a short pause between songs.

.avi

Format: MPEG-4/H.264
Compatible video codec: MPEG-4 (Simple Profile)/H.264 (Base Line Profile)
Compatible audio codec: Linear PCM (LPCM) MP3
Maximum resolution: 640 pixels × 360 pixels
Maximum Frame rate: 30 fps
Maximum file size: 2 GB
Maximum playback time: 150 minutes

- Files may not be able to be played back depending on the bit rate.

.mp4

Format: MPEG-4/H.264

Compatible video codec: MPEG-4 (Simple Profile)/H.264 (Base Line Profile)
Compatible audio codec: AAC/Linear PCM (LPCM) MP3
Maximum resolution: 640 pixels × 360 pixels
Maximum Frame rate: 30 fps
Maximum file size: 2 GB
Maximum playback time: 150 minutes

- Files may not be able to be played back depending on the bit rate.

.3gp

Format: MPEG-4/H.264
Compatible video codec: MPEG-4 (Simple Profile)/H.264 (Base Line Profile)
Compatible audio codec: AAC/Linear PCM (LPCM) MP3
Maximum resolution: 640 pixels × 360 pixels
Maximum Frame rate: 30 fps
Maximum file size: 2 GB
Maximum playback time: 150 minutes

- Files may not be able to be played back depending on the bit rate.

.mkv

Format: MPEG-4/H.264
Compatible video codec: MPEG-4 (Simple Profile)/H.264 (Base Line Profile)
Compatible audio codec: AAC/Linear PCM (LPCM) MP3/AC-3
Maximum resolution: 640 pixels × 360 pixels
Maximum Frame rate: 30 fps
Maximum file size: 2 GB
Maximum playback time: 150 minutes

- Files may not be able to be played back depending on the bit rate.

.mov

Format: MPEG-4/H.264
Compatible video codec: MPEG-4 (Simple Profile)/H.264 (Base Line Profile)
Compatible audio codec: AAC/Linear PCM (LPCM) MP3
Maximum resolution: 640 pixels × 360 pixels
Maximum Frame rate: 30 fps
Maximum file size: 2 GB
Maximum playback time: 150 minutes

- Files may not be able to be played back depending on the bit rate.

Example of a hierarchy

- This product assigns folder numbers. The user cannot assign folder numbers.

Copyright and trademark notice

Copyright (c) 1987, 1993, 1994

The Regents of the University of California. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgement:

This product includes software developed by the University of California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE

Bluetooth



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by PIONEER CORPORATION is under license. Other trademarks and trade names are those of their respective owners.

WMA

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.

DivX



DivX is a compressed digital video format created by the DivX video codec from DivX, LLC, a subsidiary of Rovi Corporation. This unit can play DivX video files recorded on CD-R/RW/ROM and DVD-R/RW/ROM discs. Keeping the same terminology as DVD video, individual DivX video files are called "Titles". Keep in mind that when naming files/titles on a CD-R/RW or a DVD-R/RW disc prior to burning, they will be played in written order by default.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX Inc. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in Displaying your DivX VOD registration code. Go to vod.divx.com for more information on how to complete your registration.

➔ *Displaying your DivX VOD registration code on page 43*

AAC

AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG-2 and MPEG-4. Several applications can be used to encode AAC files, but file formats and extensions differ depending on the

application which is used to encode. This unit plays back AAC files encoded by iTunes.

Android™

Android is a trademark of Google Inc.

MirrorLink

MirrorLink Certified™, the Design Only™ Certification Logo, MirrorLink™ and the MirrorLink™ Logo are certification marks and trademarks of the Car Connectivity Consortium LLC. Unauthorized use is strictly prohibited.

Detailed information regarding connected iPod devices

- Pioneer accepts no responsibility for data lost from an iPod, even if that data is lost while using this product. Please back up your iPod data regularly.
- Do not leave the iPod in direct sunlight for extended amounts of time. Extended exposure to direct sunlight can result in iPod malfunction due to the resulting high temperature.
- Do not leave the iPod in any location with high temperatures.
- Firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or gas pedal.

For details, refer to the iPod manuals.

iPod and iPhone

Made for



iPod



iPhone

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.

Appendix

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

Lightning

Lightning is a trademark of Apple Inc.

App Store

App Store is a service mark of Apple Inc.

iOS

iOS is a trademark on which Cisco holds the trademark right in the US and certain other countries.

iTunes

iTunes is a trademark of Apple Inc., registered in the U.S. and other countries.

Using app-based connected content

IMPORTANT

Requirements to access app-based connected content services using this product:

- Latest version of the Pioneer compatible connected content application(s) for the smartphone, available from the service provider, downloaded to your smartphone.
- A current account with the content service provider.
- Smartphone Data Plan.
Note: if the Data Plan for your smartphone does not provide for unlimited data usage, additional charges from your carrier may apply for accessing app-based connected content via 3G, EDGE and/or LTE (4G) networks.
- Connection to the Internet via 3G, EDGE, LTE (4G) or Wi-Fi network.
- Optional Pioneer adapter cable connecting your iPhone to this product.

Limitations:

- Access to app-based connected content will depend on the availability of cellular and/or Wi-Fi network coverage for the purpose of allowing your smartphone to connect to the Internet.
- Service availability may be geographically limited to the region. Consult the connected content service provider for additional information.
- Ability of this product to access connected content is subject to change without notice and could be affected by any of the following: compatibility issues with future firmware versions of smartphone; compatibility issues with future versions of the connected content application(s) for the smartphone; changes to or discontinuation of the connected Content application(s) or service by its provider.

Notice regarding video viewing

Remember that use of this system for commercial or public viewing purposes may constitute an infringement on the author's rights as protected by the Copyright Law.

Notice regarding DVD-Video viewing

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Notice regarding MP3 file usage

Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>.

Using the LCD screen correctly

Handling the LCD screen

- When the LCD screen is subjected to direct sunlight for a long period of time, it will become very hot, resulting in possible damage to the LCD screen. When not using this product, avoid exposing it to direct sunlight as much as possible.
- The LCD screen should be used within the temperature ranges shown in *Specifications* on page 61.
- Do not use the LCD screen at temperatures higher or lower than the operating temperature range, because the LCD screen may not operate normally and could be damaged.
- The LCD screen is exposed in order to increase its visibility within the vehicle. Please do not press strongly on it as this may damage it.
- Do not push the LCD screen with excessive force as this may scratch it.
- Never touch the LCD screen with anything besides your finger when operating the touch panel functions. The LCD screen can scratch easily.

Liquid crystal display (LCD) screen

- If the LCD screen is near the vent of an air conditioner, make sure that air from the air conditioner is not blowing on it. Heat from the heater may break the LCD screen, and cool air from the cooler may cause moisture to form inside this product, resulting in possible damage.
- Small black dots or white dots (bright dots) may appear on the LCD screen. These are due to the characteristics of the LCD screen and do not indicate a malfunction.
- The LCD screen will be difficult to see if it is exposed to direct sunlight.
- When using a cellular phone, keep the antenna of the cellular phone away from the LCD screen to prevent disruption of the video in the form of disturbances such as spots or colored stripes.

Maintaining the LCD screen

- When removing dust from or cleaning the LCD screen, first turn this product off and then wipe the screen with a soft dry cloth.
- When wiping the LCD screen, take care not to scratch the surface. Do not use harsh or abrasive chemical cleaners.

LED (light-emitting diode) backlight

A light emitting diode is used inside the display to illuminate the LCD screen.

- At low temperatures, using the LED backlight may increase image lag and degrade the image quality because of the characteristics of the LCD screen. Image quality will improve with an increase in temperature.
- The product lifetime of the LED backlight is more than 10 000 hours. However, it may decrease if used in high temperatures.
- If the LED backlight reaches the end of its product lifetime, the screen will become dimmer and the image will no longer be visible. In that case, please consult your dealer or the nearest authorized Pioneer Service Station.

Specifications

General

Rated power source.....	14.4 V DC (10.8 V to 15.1 V allowable)
Grounding system.....	Negative type
Maximum current consumption	10.0 A
Dimensions (W × H × D):	
DIN	
Chassis	180 mm × 50 mm × 160 mm
Nose	188 mm × 58 mm × 32 mm
D	
Chassis	178 mm × 50 mm × 165 mm
Nose	170 mm × 46 mm × 27 mm
Weight	2.0 kg

Display

Screen size/aspect ratio	7.0 inch wide/16:9 (effective display area: 154.1 mm × 85.9 mm)
Pixels	1 152 000 (2 400 × 480)
Display method	TFT Active matrix driving
Color system.....	PAL/NTSC/PAL-M/PAL-N/SECAM compatible

Audio

Maximum power output	•50 W × 4 ch/4 Ω •50 W × 2 ch/4 Ω + 70 W × 1 ch/2 Ω (for subwoofer)
Continuous power output	22 W × 4 (50 Hz to 15 kHz, 5 %THD, 4Ω LOAD, Both Channels Driven)
Load impedance	4 Ω (4 Ω to 8 Ω [2 Ω for 1 ch] allowable)
Preout output level (max)	4 V
Equalizer (13-Band Graphic Equalizer):	

Frequency	50 Hz/80 Hz/125 Hz/200 Hz/315 Hz/500 Hz/800 Hz/ 1.25 kHz/2 kHz/3.15 kHz/5 kHz/8 kHz/12.5 kHz
Gain.....	± 12 dB
<Standard Mode>	
HPF:	
Frequency	50 Hz/63 Hz/80 Hz/100 Hz/125 Hz/160 Hz/200 Hz
Slope	-6 dB/oct, -12 dB/oct, -18 dB/oct, -24 dB/oct, OFF
Subwoofer/LPF:	
Frequency	50 Hz/63 Hz/80 Hz/100 Hz/125 Hz/160 Hz/200 Hz
Slope	-6 dB/oct, -12 dB/oct, -18 dB/oct, -24 dB/oct, OFF
Gain.....	+ 10 dB to -24 dB
Phase	Normal/Reverse
Time alignment	0 to 140 step (2.5 cm/step)
Bass boost:	
Gain	+ 12 dB to 0 dB
Speaker level	+ 10 dB to -24 dB (1 dB/step)
<Network Mode>	
HPF (High):	
Frequency	1.25 kHz/1.6 kHz/2 kHz/2.5 kHz/3.15 kHz/4 kHz/ 5 kHz/6.3 kHz/8 kHz/10 kHz/12.5 kHz
Slope	-6 dB/oct, -12 dB/oct, -18 dB/oct, -24 dB/oct
HPF (Mid):	
Frequency	25 Hz/31.5 Hz/40 Hz/50 Hz/63 Hz/80 Hz/100 Hz/ 125 Hz/160 Hz/200 Hz/250 Hz
Slope	-6 dB/oct, -12 dB/oct, -18 dB/oct, -24 dB/oct, OFF
LPF (Mid):	
Frequency	1.25 kHz/1.6 kHz/2 kHz/2.5 kHz/3.15 kHz/4 kHz/ 5 kHz/6.3 kHz/8 kHz/10 kHz/12.5 kHz
Slope	-6 dB/oct, -12 dB/oct, -18 dB/oct, -24 dB/oct, OFF
Subwoofer:	
Frequency	25 Hz/31.5 Hz/40 Hz/50 Hz/63 Hz/80 Hz/100 Hz/ 125 Hz/160 Hz/200 Hz/250 Hz
Slope	-12 dB/oct, -18 dB/oct, -24 dB/oct, -30 dB/oct, -36 dB/oct, OFF
Gain.....	+ 10 dB to -24 dB
Phase.....	Normal/Reverse
Time alignment	0 to 140 step (2.5 cm/step)
Bass boost:	
Gain	+ 12 dB to 0 dB
Speaker level	+ 10 dB to -24 dB (1 dB/step)

DVD drive

System	DVD-Video, VCD, CD, MP3, WMA, AAC, DivX, MPEG player
Usable discs	DVD-VIDEO, VIDEO-CD, CD, CD-R, CD-RW, DVD-R, DVD-RW, DVD-RDL
Region number	3
Signal Format:	
Sampling frequency.....	32 kHz/44.1 kHz/48 kHz/96 kHz
Number of quantization bits.....	16 bit/20 bit/24 bit; linear

Frequency response	5 Hz to 22 000 Hz (with DVD, at sampling frequency 48 kHz)
Signal-to-noise ratio	91 dB (1 kHz) (IEC-A network) (RCA level)
Output level:	
Video	1.0 Vp-p/75Ω (±0.2 V)
Number of channels	2 (stereo)
MP3 decoding format	MPEG-1 & 2 Audio Layer 3
WMA decoding format	Ver.7, 7.1, 8, 9, 10, 11, 12 (2 ch audio) (Windows Media Player)
AAC decoding format	MPEG-4 AAC (iTunes encoded only): .m4a (Ver. 10.6 and earlier)
DivX decoding format	Home Theater Ver. 3, 4, 5, 2, 6 (Except ultra and HD) : .avi, .divx
MPEG video decoding format	MPEG-1, MPEG-2, MPEG-4 (part2), MS MPEG-4 (ver. 3)

USB

USB standard spec	USB 1.1, USB 2.0 full speed, USB 2.0 high speed
Max current supply	1.0 A
USB Class	MSC (Mass Storage Class), MTP (Media Transfer Protocol)
File system	FAT16, FAT32
MP3 decoding format	MPEG-1 & 2 Audio Layer 3
WMA decoding format	Ver. 7, 7.1, 8, 9, 10, 11, 12 (2 ch audio) (Windows Media Player)
AAC decoding format	MPEG-4 AAC (iTunes encoded only) (Ver. 10.6 and earlier)
WAV signal format (MSC Mode only)	Linear PCM
Sampling Frequency	Linear PCM: 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz
JPEG decoding format (MSC Mode only)jpeg, .jpg, .jpe
Pixel Sampling	4:2:2, 4:2:0
Decode Size.....	MAX: 8 192 (H) × 7 680 (W), MIN: 32 (H) × 32 (W)
H.264 video decoding format	Base Line Profile
MPEG4 video decoding format	Simple Profile

Bluetooth

(AVH-X7750BT)	
Version	Bluetooth 3.0 certified
Output power.....	+4 dBm Max. (Power class 2)

FM tuner

Frequency range	87.5 MHz to 108 MHz
Usable sensitivity	12 dBf (0.8 μV/75Ω, mono, S/N: 30 dB)
Signal-to-noise ratio	72 dB (IEC-A network)

AM tuner

Frequency range	530 kHz to 1 640 kHz (10 kHz)
-----------------------	-------------------------------

Appendix

Frequency range531 kHz to 1 602 kHz (9 kHz)
Usable sensitivity $28 \mu V$ (S/N: 20 dB)
Signal-to-noise ratio 62 dB (IEC-A network)

- Specifications and design are subject to possible modifications without notice due to improvements.



目錄

感謝您購買本免費產品。

請詳閱這些說明，瞭解如何正確操作產品。
說明閱讀完畢後，請妥善留存本文件，以供日後參考。

重要事項

範例中顯示的畫面可能與實際畫面不同，如因效能及功能改善而有任何變更，恕不另行通知。

■ 注意事項

授權、保固免費聲明和有限責任	4
重要安全資訊	4
手煞車運動	4
使用連接至 rear monitor output	4
防止電瓶電量耗盡	4
後視攝影機	4
操作USB接頭	5
發生問題時	5
歡迎至本公司網站	5
關於本產品	5
保護液晶面板及螢幕	5
內部記憶體注意事項	5
關於本手冊	5
保護您的裝置免於遺失	5
遙控器之使用與保養	6

■ 基本操作

檢查零件名稱及功能	6
遙控器	7
使用液晶面板的注意事項	7
開啟及關閉液晶面板	7
水平調整液晶面板	7
調整液晶面板滑動位置	7
調整液晶面板角度	8
插入／退出／連接媒體	8
首次啟動時	8
如何使用畫面	9
支援的AV來源	10
顯示AV操作畫面	10
選擇來源	10
變更來源的顯示順序	10
使用觸控面板	10

■ 登錄及連接藍牙裝置

顯示「藍牙」畫面	11
----------	----

登錄您的藍牙裝置	11
手動連接登錄的藍牙裝置	11
切換可視性	11
輸入藍牙無線連線的PIN碼	11
顯示裝置資訊	11
清除藍牙記憶	11
更新藍牙軟體	11
顯示藍牙軟體版本	11

■ 免持聽話

顯示電話選單畫面	12
撥打電話	12
接聽電話來電	12
最小化撥號確認畫面	12
變更電話設定	12
使用語音辨識功能（適用於iPhone）	13
免持聽話的注意事項	13

■ iPod / iPhone或智慧型手機設定

iPod / iPhone或智慧型手機設定的基本流程	14
設定裝置連接方式	14
iPod相容性	14
Android 裝置相容性	14
MirrorLink 裝置相容性	14
有關各裝置連接及功能的資訊	15

■ 廣播

開始程序	16
依PTY資訊搜尋	16
儲存最強的廣播頻率	16
顯示「Radio settings」畫面	16
調頻至訊號良好的頻率	16
設定FM或AM調頻間隔	16
設定備用頻率搜尋	16
設定自動PI搜尋	16
限制電台播放區域節目	17
接收交通廣播（TA）	17
接收新聞廣播	17
接收警報廣播	17

■ 電視選台器

開始程序	17
儲存頻道	17

■ 碟片

開始程序	19
從檔案名稱清單中選擇檔案	19

切換媒體檔類型	19
搜尋要播放的部分	19
操作DVD選單	19
切換字幕／音訊語言	19
使用觸控面板按鍵操作DVD選單	19

■ 壓縮音訊檔案

開始程序（適用碟片）	20
開始程序（適用USB）	20
從檔案名稱清單中選擇檔案	20
利用Music Browse選擇檔案	20
選擇專輯中的歌曲（連結搜尋）	20
切換媒體檔類型	20

■ 壓縮視訊檔案

開始程序	21
從檔案名稱清單中選擇檔案	21

■ 靜態影像檔案

開始程序	22
從檔案名稱清單中選擇檔案	22
切換媒體檔類型	22
將影像另存成背景畫面	22
設定幻燈片播放時間間隔	22

■ iPod

連接iPod	24
開始程序	24
在播放清單畫面中選擇歌曲或視聽來源	24
在您的iPod中使用本產品的iPod功能	24
選擇專輯中的歌曲（連結搜尋）	24

■ iPhone或智慧型手機應用程式

使用AppRadioMode	25
使用MirrorLink	26
使用音訊混音功能	26

■ 藍牙音訊播放器

開始程序	27
從檔案名稱清單中選擇檔案	27

■ AUX來源

開始程序	27
設定視訊訊號	27

■ AV輸入

開始程序	28
設定視訊訊號	28

■ MIXTRAX

MIXTRAX操作	28
MIXTRAX EZ操作	28
顯示「MIXTRAX Settings」畫面	28
設定閃爍圖案	29

■ 系統設定

顯示「系統設定」設定畫面	29
設定方向盤控制鍵	29
啟動藍牙音訊來源	29
設定不斷搖動	30
設定後視攝影機	30
關閉示範畫面	30
選擇系統語言	30
利用iPhone應用程式設定鍵盤語言	30
調整觸控面板的回應位置（觸控面板校正）	30
設定調光器	30
調整影像	31
顯示軟體版本	31
更新軟體	31

■ 音訊調整

顯示「音頻」設定畫面	32
使用淡化器調整	32
使用平衡調整	32
切換靜音／衰減	32
調整來源音量	32
使用自動位準控制	32
調整響度	32
使用重低音揚聲器輸出	32
調整截止頻率值	32
切換後揚聲器輸出	32
增強低音	32
選擇聆聽位置	33
微調揚聲器輸出位準	33
調整時序校正	33
切換時序校正預設	33
使用等化器	33
自動調整等化器曲線（自動EQ）	33
儲存聲音設定	34
載入聲音設定	34

■ 主題選單

選擇背景顯示畫面	35
設定照明色彩	35
選擇主題色彩	35
選擇時鐘影像	35

■ 設定視訊播放機

目錄

設定第一優先語言.....	36	故障排除.....	45
設定角度圖示顯示.....	36	錯誤訊息.....	46
設定長寬比.....	36	操作及保養碟片.....	47
設定家長監控功能.....	36	可播放碟片.....	48
顯示DivX VOD登錄碼.....	37	有關可播放媒體的詳細資訊.....	48
顯示DivX VOD取消登錄碼.....	37	版權與商標聲明.....	50
自動播放DVD.....	37	Bluetooth.....	50
設定後視攝影機的視訊訊號.....	37	WMA.....	50
		DivX.....	50
■最愛選單.....	38	AAC.....	51
建立捷徑.....	38	Android.....	51
選擇捷徑.....	38	MirrorLink.....	51
移除捷徑.....	38	有關連接 iPod 裝置的詳細資訊.....	51
		使用應用程式架構連線內容.....	51
■常用操作.....	38	有關觀看視訊的注意事項.....	51
設定時間與日期.....	38	有關觀看DVD-Video的注意事項.....	51
設定「Sound Retriever」功能.....	38	有關使用MP3檔案的注意事項.....	51
變更寬螢幕模式.....	38	正確使用液晶螢幕.....	52
		規格.....	52
■其他功能.....	39		
將本產品還原成預設設定.....	39		
■連接.....	39		
注意事項.....	39		
連接系統前的注意事項.....	39		
安裝本產品前.....	39		
防止受損.....	39		
藍／白導線注意事項.....	40		
本產品.....	40		
電源線.....	40		
揚聲器導線.....	40		
功率放大器（另售）.....	41		
iPhone和智慧型手機.....	41		
具有Lightning接頭的iPhone.....	41		
具備30針接腳的iPhone.....	41		
Android或MirrorLink裝置.....	42		
攝影機.....	42		
外部視訊組件及顯示器.....	42		
■安裝.....	43		
安裝前注意事項.....	43		
安裝前.....	43		
安裝注意事項.....	43		
DIN 前/後安裝.....	43		
安裝麥克風.....	44		
安裝在遮陽板上.....	44		
安裝在轉向機柱上.....	45		
調整麥克風角度.....	45		
■附錄.....	45		

注意事項

注意

本產品根據IEC 60825-1:2007雷射產品安全性的分類，屬於類別1雷射產品，並內含1M級雷射模組。為了確保安全性，請勿拆下任何護蓋，或碰觸產品內部。所有維修工作都必須交由合格人員處理。

第一級雷射產品

注意一打開時，將產生可見和看不見的1M級雷射線。請勿借助光學設備直視。

授權、保固免責聲明和有限責任

安全性條款

免責聲明

先鋒有限保固中的保證為先鋒與其任何適用授權者唯一承認的保證。其他任何明示或暗示保證，包括但不限於可銷售性保證與特定用途適用性保證，先鋒與其授權者明確表示概不承認。

有限責任

根據適用法令允許的最大範圍，先鋒及其授權人對於您或其他相關方造成之任何間接、從屬、意外、懲罰或特殊傷害，不論訴訟形式、在合約內或侵權行為，包括疏忽，即使該方已建議有該類傷害的可能性，一概不予負責。

根據適用法令允許的最大範圍，先鋒或其授權人需負擔之任何類型的權利或相關使用產品的總責任費用，包括但不限於任何保固索賠，或任何財產損失、死亡或殘障索賠，不論使用場所及任何基於合約、侵權行為（包括但不限於）、產品嚴格責任或任何其他法令條文所提出的訴訟或索賠，均不得超過一千元（USD\$1000）。

在某些司法管轄地區不允許排除傷害或有限責任，因此以上排除或限制情形，根據適用法律允許的最大範圍，可能不適用於您。您的特定權利可能因不同的司法管轄區而有不同。

重要安全資訊

⚠警告

- 請勿嘗試自行安裝或維修本產品。若未經電子設備與汽車配件方面的專門訓練，或具有相關的工作經驗即貿然安裝或維修本產品，則會有導致發生觸電、受傷或其他事故的危險。
- 請勿讓本產品接觸液體。可能會導致觸電。另外，接觸液體也可能會導致產品損壞、冒煙或過熱。
- 液體或異物進入本產品內部時，請將車輛停在安全位置，立即關閉點火開關（ACC OFF），並洽詢經銷商或就近的授權先鋒維修站。發生此情況後，請勿繼續使用本產品，以免造成起火、觸電或其他故障。
- 如果發現本產品冒煙，發出異聲或異味或LCD螢幕上出現任何其他異常現象，應立即關閉電源，並洽詢經銷商或就近的授權先鋒維修站。在此情況下使用本產品，可能導致系統永久損壞。
- 本產品內部具備高電壓元件，請勿拆卸或改裝本產品，以免觸電。進行內部檢查、調整或維修時，請務必洽詢經銷商或就近的授權先鋒維修站。

使用本產品前，請確實詳閱並瞭解下列安全資訊：

- 請勿在會造成您無法專心安全駕駛的情況下，操作本產品、任何應用程式或後視攝影機選購配件（若購買）。務必遵守安全駕駛規則及所有現行交通法規。若無法順利操作本產品或看清顯示器，請將車輛停在安全位置並拉起/踩踏手煞車，再進行必要調整。
- 切勿將本產品的音量調得太高，而無法聽到車外交通與緊急車輛的動靜。
- 為提升安全，除非車輛已停妥及/或拉起/踩踏手煞車，否則會停用某些功能。
- 請將本手冊保存在隨手可取得的地方，以備查閱操作步驟及安全資訊。
- 請勿將本產品安裝在下列位置：（1）阻擋駕駛人員視線的地方；（2）影響車輛操作系統或安全功能（如氣囊或危險警告燈按鈕）的地方；或（3）影響駕駛人員安全駕駛的地方。
- 行駛時，請記得隨時繫上安全帶。否則，若在未繫妥安全帶的情況下發生事故，可能會大幅加重傷勢。
- 切勿在駕駛時使用耳機。

手煞車連動

本產品提供的某些功能（如觀看視訊影像及某些觸控面板按鍵操作）若在行駛時使用可能造成危險（可能導致重傷或死亡）。為了避免在行車時使用這些功能，本產品配備可感應手煞車設定狀態及車輛移動的連動系統。若要在行駛時使用上述功能，您必須將車輛停在安全位置，接著（1）拉起/踩踏手煞車，（2）釋放手煞車，然後（3）再次拉起/踩踏手煞車，連動系統才會停用。請在放開手煞車之前先踩住煞車踏板。

行駛安全注意事項

⚠警告

- 電源接頭的淺綠色導線專為偵測駐車狀態所設計，必須連接至手煞車開關的電源供應側。不當連接或使用這條導線，可能會違反適用法律，並造成重傷或損壞。
- 為了您的安全起見，請勿任意改造或停用手煞車連動系統。改造或停用手煞車連動系統可能會造成重傷或死亡。
- 為避免發生損傷及誤觸相關法令，本產品未配備供駕駛觀看視訊影像。
- 在某些國家中，在車上觀看顯示器所播放的視訊影像可能受到法令禁止，即使是駕駛以外的乘客亦是如此。如有這些法規，駕駛及乘客都必須遵守。

若要在行駛時觀看視訊影像，「行駛中嚴禁駕駛觀看前顯示幕節目。」的警告訊息會出現在畫面上。若要觀看視訊影像，請將車輛停在安全位置並拉起/踩踏手煞車。請在放開手煞車之前先踩住煞車踏板。

使用連接至 rear monitor output

視訊輸出端子（rear monitor output）用於連接顯示器，可讓後座的乘客觀看視訊影像。

⚠警告

不可將後顯示器安裝在駕駛人員駕駛時可以看到視訊影像的位置。

防止電瓶電量耗盡

使用本產品時，請務必讓車輛引擎運轉。使用本產品時，若未讓引擎運轉，可能會使電瓶電量耗盡。

⚠警告

請勿將本產品安裝在無ACC電線或電路的車輛中。

後視攝影機

使用選購的後視攝影機時，您可以使用本產品作為注意拖車或倒車進入狹窄停車地點的輔助。

⚠警告

- 畫面影像的顯示可能顛倒。
- 僅限使用顛倒或鏡射後視攝影機的輸入影像。使用其他輸入影像可能導致受傷或損壞。

⚠注意

本產品的後視模式可作為注意拖車或倒車時的輔助工具。不可將本功能作為娛樂用途。

注意事項

操作USB接頭

▲注意

- 為防止資料遺失並損及儲存裝置，切勿在傳輸資料時將接頭從本產品中取出。
- 先鋒不保證本產品與所有USB大量儲存裝置的相容性，對於使用本產品時導致媒體播放機、iPhone、智慧型手機或其他裝置上遺失的資料概不負責。

發生問題時

若本產品無法正常運作，請聯絡經銷商或就近的授權先鋒維修站。

歡迎至本公司網站

本公司網址如下：

墨西哥

<http://www.pioneer-mexico.com/>

新加坡

<http://www.pioneer.com.sg/>

馬來西亞

<http://www.pioneer.my/>

泰國

<http://pioneer-thailand.co.th/>

菲律賓

<http://www.pioneer.ph/>

越南

<http://www.pioneer.vn/>

印尼

<http://www.pioneer.co.id/>

澳大利亞

<http://www.pioneer.com.au/>

以色列

<http://www.pioneerisrael.co.il/>

中東／非洲

<http://www.pioneer-mea.com/en/>

拉丁美洲

<http://www.pioneer-latin.com/en/about-pioneer.html>

香港

<http://www.pioneerhongkong.com.hk/ct/index.php>

台灣

<http://www.pioneer-twn.com.tw/>

韓國

<http://www.pioneer.co.kr/>

- 本公司網站提供有關先鋒公司的最新資訊。

- 先鋒定期提供軟體更新，以便持續改善產品。請查看先鋒網站的支援部分，瞭解所有可用軟體更新。

關於本產品

- 本產品無法在歐洲以外的地區正常運作。RDS（廣播資料系統）功能只能在有廣播RDS訊號的FM電台的地區使用。RDS-TMC服務也能在有廣播RDS-TMC訊號的電台的區域使用。

保護液晶面板及螢幕

- 本產品未使用時，請勿讓液晶螢幕受到陽光直射。以免因為溫度過高，導致液晶螢幕故障。
- 使用行動電話時，請將行動電話天線保持在遠離液晶螢幕位置，以免視訊因出現壞點、彩色條紋等而受到干擾。
- 若要保護液晶螢幕避免受損，請確定只用手指接觸觸控面板按鈕。

內部記憶體注意事項

取出車輛電瓶之前

- 部分設定及記錄內容將不會重設。

資料消除

中斷連接電瓶的黃色導線（或取出電瓶）即可消除資訊。

- 部分設定及記錄內容將不會重設。

重設微處理器

▲注意

按下 RESET 按鈕將設定與記錄內容重設為原廠設定值。

- 請勿在本產品連接裝置時執行此操作。

- 部分設定及記錄內容將不會重設。

微處理器在以下情形必須重設：

- 安裝本產品後首次使用之前。
- 本產品無法正常運作。
- 系統運轉出現問題。
- 您車輛顯示在地圖上的位置出現明顯的定位錯誤。

1 將點火開關切換至OFF。

2 用筆尖或其他尖銳器具按下 RESET 按鈕。




ⓐ 第6頁上檢查零件名稱及功能

設定及記錄內容皆重設為原廠設定值。

關於本手冊

本手冊使用實際產品畫面的截圖來解說操作。不過視使用的機型而定，部分裝置上的畫面可能與本手冊上顯示的不符。

本手冊所用符號的意義

X7750BT	代表支援所述操作的機型名稱。
	代表觸碰觸控螢幕上適當螢幕按鈕。
	代表按住觸控螢幕上適當螢幕按鈕。
	代表有按鍵或螢幕專用的參考資料或補充資料。

保護您的裝置免於遭竊

可卸除前面板以免遭竊。


●重要事項

- 移除或安裝時，請務必小心拿取前面板。
- 請避免使前面板受到劇烈撞擊。
- 請將前面板遠離陽光直射和高溫。
- 如果前面板已卸下，請在啟動車輛之間將其裝回原位。
- 為避免破壞裝置或車輛內部，在卸除前請先拆卸連接前面板的所有纜線與裝置。

拆卸前面板

- 用手指抓住前面板右側的上下部分，再拉出前面板。

請小心不要抓得太緊或掉落，此外請避免接觸水或其他液體，以防止永久受損。

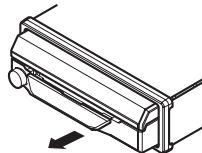


重新安裝前面板

- 1 將前面板滑至左側。

注意事項

前面板及車用資訊娛樂主機皆連接至左側。
請確定前面板已正確連接至車用資訊娛樂主機。

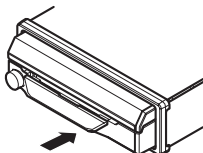

2 按下面板右側直到確實固定。


若您無法順利將前面板安裝至車用資訊娛樂主機，請再試一次。
猛力將前面板壓至定位可能會導致受損。

遙控器之使用與保養

安裝電池

拉出遙控器背面的托盤，以對齊正極（+）、負極（-）的方向
裝入電池。

- 首次使用時，請拉出托盤伸出的薄片。

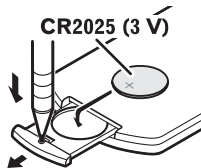

「廢電池請回收」

▲警告

- 請將電池放在遠離兒童的位置。若不慎吞下電池，請立即送醫。
- 電池（已安裝的電池組或電池）不得暴露在陽光直射、火源等類似的過熱環境下。

▲注意

- 遙控器至少一個月不使用時，請取出電池。

- 若更換錯誤的電池，有爆炸的危險。只能更換成相同或同型號的電池。
- 請勿使用金屬工具夾取電池。
- 請勿將電池存放於金屬置物盒中。
- 如果電池漏液，請將遙控器徹底擦拭乾淨並裝上新電池。
- 處理廢舊電池時，請遵守政府條例或適用於貴國或地區的環境公共指令規則。
- 「過氧酸鹽材料 - 可以申請特殊處理。請參閱www.dtsc.ca.gov/hazardouswaste/perchlorate。（適用於美國加州）」

使用遙控器

將遙控器對著前面板進行操作。


- 遙控器在直射陽光下可能無法正常工作。

⚠重要事項

- 請勿將遙控器保存在高溫條件或直射陽光下。
- 請勿讓遙控器墜落在地板上，否則它可能會卡在煞車或油門之下。

基本操作

檢查零件名稱及功能

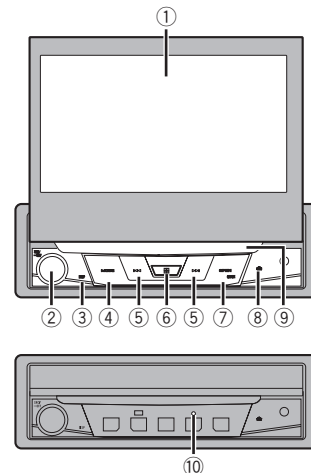


1	液晶螢幕	
2	Volume/ SRC/OFF	按下可切換所有可用播放來源。 在應用程式畫面或導航模式下，按下可顯示側控制列。按住可關閉顯示器。 按住該按鈕可關閉播放來源。
3	DISP 按鈕	在AV操作畫面下，按下可關閉顯示器。 在應用程式畫面或導航模式下，按下可顯示側控制列。按住可關閉顯示器。 □ 關閉顯示器後，觸碰螢幕可返回原始畫面。
4	MODE 按鈕	按下可切換應用程式及AV操作畫面。 按住可切換為攝影機檢視模式。
5	TRK (I-III) 按鈕	執行手動搜尋調頻、快進、倒退和曲目搜尋控制。
6	⌘ 按鈕	按下可顯示最上層選單畫面。 按住可啟動語音辨識功能。 ☞ 第13頁上使用語音辨識功能（適用於iPhone）

基本操作

7	OPEN/CLOSE 按鈕	請按下 OPEN/CLOSE 以開啟液晶面板。 若要關閉液晶面板，請再次按下 OPEN/CLOSE。
8	▲ 按鈕	
9	碟片槽	➡ 第8頁上插入及退出碟片
10	RESET按鈕	➡ 第5頁上重設微處理器

遙控器

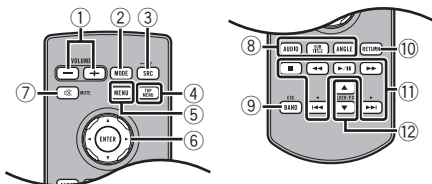

1	Volume (+/-)	
2	MODE	按下可切換應用程式及AV操作畫面。 按住可切換為攝影機檢視模式。
3	SRC	按下可切換所有可用播放來源。 按住該按鈕可關閉播放來源。
4	TOP MENU	在DVD播放時返回頂層選單。
5	MENU	在DVD播放時顯示DVD選單。
6	姆指墊	選擇DVD選單上的選單。
7	MUTE	
8	AUDIO SUBTITLE ANGLE	在DVD播放時變更音訊語言、字幕語言或視角。
9	BAND	當選擇調諧器做為播放來源時，可選擇調諧波段。 取消功能的控制模式。 在播放碟片和USB的資料時，切換不同的媒體檔案類型。
10	Return	返回指定的時間點並自該處開始播放。

11	▶/II 或者 ◀◀ 或者 ▶▶ 或者 ■	暫停或繼續播放。 音訊：按住此按鈕可執行快倒或快進。 視訊：按下可執行快倒或快進。 按下可返回上一個曲目（章節）或前往下一個曲目（章節）。 停止播放。 繼續播放時，將從停止的位置開始播放。再次觸碰按鈕可完全停止播放。
12	FOLDER/P. CH	選擇下一張或上一張碟片或資料夾。 調出已指定給預設頻道按鍵的廣播電台頻率。

使用液晶面板的注意事項

▲警告

- 開啟、關閉或調整液晶面板時，不要用手和手指碰觸本產品。請特別注意兒童的手和手指。
- 請勿在液晶面板維持開啟時使用，以免在發生意外時導致受傷。

▲注意

- 請勿用力開啟或關閉液晶面板。這可能造成故障。
- 液晶面板完全開啟或關閉之前，請勿操作本產品。液晶面板可能會停在特定角度，以確保安全。
- 請勿將玻璃杯或罐子擺放在開啟的液晶面板上。

開啟及關閉液晶面板

將點火開關轉至開啟或關閉時，液晶面板將自動開啟或關閉。您可關閉自動關閉/開啟功能。

- 請勿用手猛力關閉液晶面板。這會造成故障。
- 自動關閉/開啟功能將如下操作顯示器。
 - 點火開關轉至 OFF 且液晶面板同時開啟時，LCD液晶面板將在六秒後關閉。
 - 點火開關重新轉至 ON（或轉至 ACC）後，LCD液晶面板將自動開啟。
 - 拆除或安裝前面板將自動關閉或開啟液晶面板。
- 第5頁上保護您的裝置免於遺漏
- 在關閉液晶面板後將點火開關轉至 OFF，然後將點火開關重新轉至 ON（或轉至 ACC），將不會開啟液晶面板。在此情況下，請按下 OPEN/CLOSE 以開啟液晶面板。
- 關閉液晶面板時，請檢查並確定已徹底關閉液晶面板。若液晶面板已停止且關閉至一半，則不等待徹底關閉可能會導致受損。

- 請按下 OPEN/CLOSE 以開啟液晶面板。
- 若要關閉液晶面板，請再次按下 OPEN/CLOSE。

設定自動開啟功能

為防止顯示器在自排車輛檔位於 P（駐車）位置時，或在您不想自動開啟/關閉顯示器時與排檔桿碰撞，您可將自動開啟功能設為手動模式。

- 1 顯示「系統設定」設定畫面。



- 2 觸碰 [Auto Flap]。

- On（預設）：將點火開關轉至開啟或關閉時，液晶面板將自動開啟或關閉。
- Off：您必須按下 OPEN/CLOSE 才能開啟/關閉液晶面板。

水平調整液晶面板

當液晶面板位於直立位置並阻礙交調操作時，可暫時水平轉動面板。

- 1 按住 OPEN/CLOSE 即可顯示翻轉的選單。
- 2 短暫觸碰向下翻轉按鍵即可將液晶面板向下翻轉至水平位置。



暫時向下翻轉液晶面板至水平位置。

- 若要返回原始位置，請按住 OPEN/CLOSE。
- 液晶面板自動返回原始位置，並在操作 10 秒後發出嗶聲代表完成。

調整液晶面板滑動位置

您可調整液晶面板滑動位置，以便向後或向前設置面板。

- 1 按住 OPEN/CLOSE 即可顯示翻轉的選單。
- 2 觸碰向後滑動按鍵或向前滑動按鍵，以向後及向前移動液晶面板。



液晶面板滑至後側。

基本操作



液晶面板滑至前側。


調整液晶面板角度

●重要事項


- 若您會聽見液晶面板撞擊車輻操縱台或儀表板的聲音，請由翻轉選單中觸碰暫時向下翻轉按鍵，暫時調整液晶面板的水平度。
- 調整液晶面板角度時，請確定從翻轉選單中調整。用手強制調整液晶面板可能會破壞面板。



- 1 按住 OPEN/CLOSE 即可顯示翻轉的選單。
- 2 觸碰向下傾斜或向上傾斜按鍵，將液晶面板調整為方便觀看的角度。

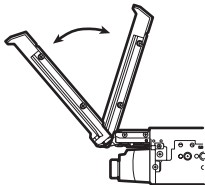

降低面板角度。

 

讓面板返回直立位置。

- 在儲存設定的角度後，液晶面板將自動調整為與下次開啟液晶面板時相同的位置。

插入／退出／連接媒體

▲注意

碟片槽中請勿插入碟片以外的任何其他物品。

插入及退出碟片

插入碟片

- 將碟片插入碟片槽。


退出碟片

- 按下▲按鍵可退出碟片。

插入及拔除USB儲存裝置

- 搭配部分USB儲存裝置使用時，本產品可能無法達到最佳效能。
- 無法透過USB集線器連線。
- 需使用USB纜線進行連線。

- 1 將插頭拉出USB纜線的USB連接埠。
- 2 將USB儲存裝置插入USB纜線中。

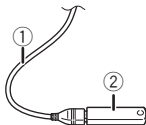

① USB纜線

- ② USB儲存裝置

■ 先確定系統並非正在存取資料，再拔出USB儲存裝置。

首次啟動時

1 動引擎開啟系統。

經過短暫暫停後，啟動畫面會顯示數秒。

「選取程式語言」畫面隨即出現。

- 從第二次開始，顯示的畫面會視先前的條件而異。

2 觸碰您要使用的語言。

「觸碰」。

「揚聲器模式設定」畫面隨即出現。

4 觸碰想要使用的揚聲器模式。

● 標準模式

配備前後揚聲器的4揚聲器系統，或配備前後揚聲器及重低音揚聲器的6揚聲器系統。

● 網路模式

配備高音揚聲器、中音揚聲器及重低音揚聲器的雙向+SW多重擴大機多揚聲器系統，能夠重現高、中、低頻（頻段）。

▲警告

使用 3 路網路模式的揚聲器系統連接本裝置時，請勿在標準模式中使用了本裝置。這可能會造成揚聲器受損。

5 觸碰[確認]。

「智慧型手機設定」畫面隨即出現。

6 觸碰您要設定的項目。

● 第15頁上有關各裝置連接及功能的資訊

7 觸碰「>」。

出現最上層選單畫面。

- 完成揚聲器模式設定後，除非將本產品還原為預設設定，否則無法變更設定。還原預設設定以變更揚聲器模式設定。

● 第39頁上還原預設設定

切換揚聲器模式


- 還原預設設定。

● 第39頁上還原預設設定

基本操作


如何使用畫面

應用程式菜單螢幕  *4

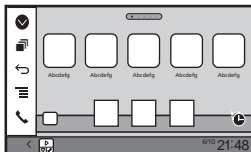


根據不同的連接方法，會顯示「智慧電話設置」螢幕。

應用程式操作螢幕  *4

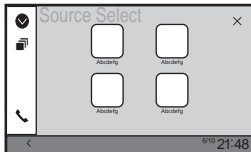


您可以在本產品上直接控制 iPhone 或智慧電話應用程式。

時間和日期設置螢幕

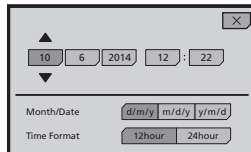


頂部菜單螢幕  *1  *2

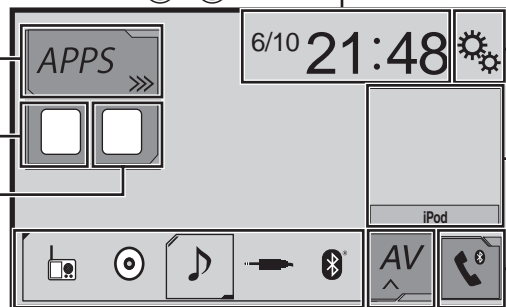


最近應用程式圖標  *5

最喜歡的信號源圖標  *3

AV 信號源選擇螢幕

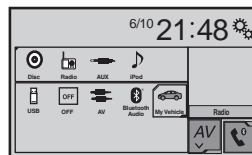


設置菜單螢幕

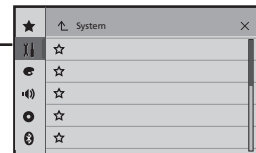


AV 操作螢幕



電話菜單螢幕

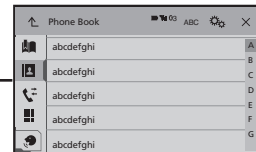

基本操作

- *1 本手冊的最上層選單畫面是使用 AppRadioMode時的畫面。畫面上的項目會視連接裝置或模式而異。經由藍牙無線技術連接 iPhone，或經由 USB 纜線連接智慧型手機時，「智慧型手機設定」畫面會在觸碰 [APPS] 後出現。
- *2 按下任何畫面上的  按鈕，便會顯示最上層選單畫面。
- *3 將外部導航系統連接至本機時，導航模式按鈕會顯示在顯示器左下方。
- *4 按下 MODE 按鈕，即可切換應用程式及 AV 操作畫面。
- *5 將 MirrorLink 裝置連接至本機時，便會顯示目前應用程式圖式，而不會顯示最近應用程式和捷徑應用程式。

支援的AV來源

您可播放或使用下列本產品來源。

- 廣播
- CD
- ROM（壓縮音訊檔案）
- DVD-Video
- USB

連接輔助裝置即可播放或使用下列來源。

- iPod
- 藍牙音訊（AVH-X7750BT）
- 電視
- AV輸入（AV）
- AUX

顯示AV操作畫面

- 1 按下 .
- 2 觸碰AV操作鍵。



選擇來源

AV來源選擇畫面上的來源

- 1 顯示「AV 信號源選擇」畫面。



- 2 觸碰您要選擇的來源圖示。
 - ☐ 選擇「OFF」時，AV來源關閉。

來源清單上的來源

- 1 顯示來源清單。
 - 第10頁上顯示AV操作畫面
- 2 觸碰您要選擇的來源按鈕。

變更來源的顯示順序


變更來源圖示的顯示順序

- 1 顯示「AV 信號源選擇」畫面。



- 2 觸碰來源圖示不放，再拖曳該圖示至所需的位置。

變更來源按鈕的顯示順序



- 1 顯示來源清單。
 - 第10頁上顯示AV操作畫面
- 2 觸碰 .
- 3 將來源按鈕拖曳至所需的位置。

使用觸控面板

您可直接用手指觸碰畫面上的按鈕，以操作本產品。

- ☐ 若要保護液晶螢幕避免受損，請確定只用手指輕觸面板。

使用常用觸控面板按鈕

 
- ：返回上一個顯示畫面。
- ：關閉畫面。

操作清單畫面



- ① 觸碰清單上的項目可讓您縮小選項並繼續下一項操作。
- ② 當所有字元皆未顯示在顯示區域時就會出現。若您觸碰按鈕，可捲動剩餘部分以顯示。
- ③ 無法於單一頁面中顯示所有項目時才會出現。請拖曳刮移控制列或清單以檢視任何隱藏的項目。

操作時間列



- ① 您可拖曳按鈕變更播放時間點。
 - ☐ 對應按鈕位置的播放時間會在拖曳按鈕時顯示。

切換操作面板

- [Func.]：切換AV來源操作面板。此按鈕並非在所有來源均可使用。

登錄及連接藍牙裝置

X7750BT

顯示「藍牙」畫面

- 1 按下 **⏏**。
- 2 依序觸碰 **[Q]**、**[0]**。
「藍牙」畫面隨即出現。

登錄您的藍牙裝置

- ☐ 若已經配對三部裝置，即顯示「記憶體已滿」。請先刪除已配對的裝置。
- 第11頁上刪除已登錄的裝置
- 1 啟動您裝置上的藍牙無線技術。
- 2 顯示「藍牙」畫面。
- 第11頁上顯示「藍牙」畫面
- 3 觸碰[連接]。
- 4 觸碰[Q]。
系統會搜尋等待連線的藍牙裝置，若找到裝置則會在清單中顯示。
- 5 觸碰您要登錄的藍牙裝置名稱。
- ☐ 若您的裝置支援 SSP（安全簡易配對），本產品顯示器上就會出現六位數數字。觸碰[是]配對裝置。
- ☐ 建立連線後，便會顯示裝置名稱。觸碰裝置名稱即可中斷連線。
成功登錄裝置後，就會在系統中建立藍牙連線。
- ☐ 亦可使用藍牙裝置偵測本產品，以建立藍牙連線。登錄之前，請先確定「可見性」（位於「藍牙」選單中）已設為「開啟」。有關藍牙裝置操作的詳細資訊，請參閱藍牙裝置隨附的操作說明。
- 第11頁上切換可視性

自動連線至藍牙裝置

此功能可在兩部裝置彼此距離幾公尺時，自動將上次連線的藍牙裝置連線至本產品。

- 1 顯示「藍牙」畫面。
- 第11頁上顯示「藍牙」畫面
- 2 觸碰[自動連接]可切換「開啟」（預設）或「關閉」。

刪除已登錄的裝置

▲注意

切勿在刪除已配對藍牙裝置時關閉本產品。

- 1 顯示「藍牙」畫面。
- 第11頁上顯示「藍牙」畫面
- 2 觸碰[連接]。
- 3 觸碰[Q]。

手動連接登錄的藍牙裝置

在下列情況下手動連接藍牙裝置：

- 已登錄兩部以上的藍牙裝置，且您想手動選擇要使用的裝置。
 - 您想重新連接已中斷的藍牙裝置。
 - 因某些因素無法自動建立連線。
- 1 啟動您裝置上的藍牙無線技術。
 - 2 顯示「藍牙」畫面。
 - 第11頁上顯示「藍牙」畫面
 - 3 觸碰[連接]。
 - 4 觸碰您要連接的裝置名稱。

切換可視性

此功能可設定是否讓其他裝置也能看見本產品。

- 1 顯示「藍牙」畫面。
- 第11頁上顯示「藍牙」畫面
- 2 觸碰[可見性]可切換「開啟」（預設）或「關閉」。

輸入藍牙無線連線的PIN碼

若要將藍牙裝置連線至本產品，您必須輸入PIN碼。
您可以透過此功能變更PIN碼。

- 1 顯示「藍牙」畫面。
- 第11頁上顯示「藍牙」畫面
- 2 觸碰[PIN碼輸入]。
- 3 觸碰[0]至[9]輸入PIN碼（最多 8 位數）。
- 4 觸碰[Q]。
- ☐ 預設PIN碼為「0000」

顯示裝置資訊

- 1 顯示「藍牙」畫面。
- 第11頁上顯示「藍牙」畫面
- 2 觸碰[設備資訊]。
隨即顯示藍牙裝置和本產品的裝置名稱與位址。

清除藍牙記憶

- ☐ 此設定只有在您停放車輛至安全位置並拉起/踩踏手煞車時才能使用。

▲注意

清除藍牙記憶時，切勿關閉本產品電源。

- 1 顯示「藍牙」畫面。
- 第11頁上顯示「藍牙」畫面
- 2 觸碰[清除藍牙記憶]。
- 3 觸碰[清除]。
確認畫面出現。

更新藍牙軟體

此功能可將本產品的藍牙軟體更新成最新版。有關藍牙軟體及更新的詳細資訊，請參閱本公司網站。

- ☐ 在處理程序開始前來源會關閉且藍牙連線會中斷。
- ☐ 此設定只有在您停放車輛至安全位置並拉起/踩踏手煞車時才能使用。
- ☐ 您必須事先將版本升級檔案儲存USB儲存裝置。

▲注意

更新軟體時，切勿關閉本產品電源及中斷電話連線。

- 1 將儲存版本升級檔案的USB儲存裝置連接至本機。
- 第8頁上插入及拔除USB儲存裝置
- 2 顯示「藍牙」畫面。
- 第11頁上顯示「藍牙」畫面
- 3 觸碰[藍牙軟體更新]。
- 4 觸碰[開始]。
請依照畫面上的指示完成藍牙軟體更新。


顯示藍牙軟體版本

若本產品無法正常運作，請您向經銷商洽詢維修事宜。
在此情況下，請執行下列程序，查看本機的軟體版本。

- 1 顯示「藍牙」畫面。
- 第11頁上顯示「藍牙」畫面
- 2 觸碰[藍牙版本資訊]。
出現本產品的藍牙模組版本。

X7750BT

藍牙電話連接指示器
顯示所連接設備的設備號。

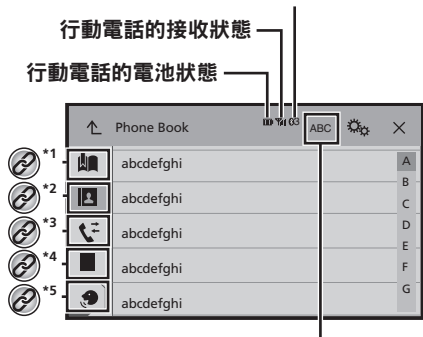

將搜尋語言切換至英語或系統語言。

- *1 顯示預設撥號畫面。
→ 第12頁上 使用預設撥號清單
- *2 切換至電話簿清單。
→ 第12頁上 撥打電話簿中的號碼
- *3 切換未接、已接和已撥電話清單。
→ 第12頁上 從通話記錄中撥號
- *4 切換模式以直接輸入電話號碼。
→ 第12頁上 直接撥號
- *5 切換為語音辨識功能（適用於iPhone）。
→ 第13頁上 使用語音辨識功能（適用於iPhone）

注意

為了您的安全起見，請盡可能避免在駕駛時使用電話交談。
若要使用此功能，您必須事先透過藍牙功能將行動電話連接至本產品。

→ 第11頁上登錄及連接藍牙裝置

顯示電話選單畫面

- 1 按下

- 2 觸碰 。

出現電話選單畫面。

撥打電話

您可使用各種不同的方式撥打電話。

直接撥號

- 1 顯示「電話菜單」畫面。
- 第12頁上顯示電話選單畫面
- 2 觸碰 。
- 3 觸碰數字鍵即可輸入電話號碼。
- 4 觸碰 可撥打電話。
- 5 觸碰 可結束通話。
- 掛斷電話時您可能會聽見雜訊。

撥打電話簿中的號碼

- 電話上的聯絡人會自動轉移至本產品。
- 需要開啟「可見性」（於「藍牙」畫面）。
- 第11頁上 切換可視性

- 1 顯示「電話菜單」畫面。
- 第12頁上顯示電話選單畫面
- 2 觸碰 。
- 3 觸碰清單上所需的姓名。
- 4 觸碰您要撥打的電話號碼。
- 出現撥號畫面並開始撥號。
- 5 觸碰 可結束通話。

從通話記錄中撥號

- 1 顯示「電話菜單」畫面。
- 第12頁上顯示電話選單畫面
- 2 觸碰 。
- 3 觸碰項目可切換通話記錄清單。
- 可使用下列項目：
- ：已接電話清單
- ：已撥電話清單
- ：未接來電清單

- 4 觸碰清單上所需的項目以撥打電話。

出現撥號畫面並開始撥號。

- 5 觸碰 可結束通話。

使用預設撥號清單

登錄電話號碼

在每部裝置上可輕鬆儲存多達六組電話號碼作為預設號碼。

- 1 顯示「電話菜單」畫面。
- 第12頁上顯示電話選單畫面
- 2 觸碰 或 。
- 在「電話簿」畫面上，觸碰所需的姓名。
- 3 觸碰 。

由預設撥號清單中撥號

- 1 顯示「電話菜單」畫面。
- 第12頁上顯示電話選單畫面
- 2 觸碰 。
- 3 觸碰您要撥打的項目。
- 出現撥號畫面並開始撥號。

接聽電話來電

- 1 觸碰 可接聽來電。
- 有來電等待時，若觸碰 ，可切換談話對象。
- 觸碰 可拒接來電。
- 2 觸碰 可結束通話。

最小化撥號確認畫面

- 在AV操作畫面上無法最小化撥號確認畫面。
- 即使在通話或接聽來電時已最小化撥號確認畫面，仍無法選擇AV來源。
- 觸碰 。
- 觸碰 可重新顯示撥號確認畫面。

變更電話設定

自動接聽來電

- 1 顯示「藍牙」畫面。

免持聽話

➤ 第11頁上顯示「藍牙」畫面

2 觸碰[自動接聽]可切換「開啟」或「關閉」（預設）。

切換鈴聲

可選擇是否使用本產品內建的鈴聲。

1 顯示「藍牙」畫面。

➤ 第11頁上顯示「藍牙」畫面

2 觸碰[鈴聲]可切換「開啟」（預設）或「關閉」。

顛倒電話簿中的姓名

1 顯示「藍牙」畫面。

➤ 第11頁上顯示「藍牙」畫面

2 觸碰[反轉名稱]。

設定個人模式

在交談期間，您可以切換至個人模式（直接用您的行動電話通話）。

● 觸碰  或  可開啟或關閉個人模式。

調整對方的收聽音量

本產品可調整對方的收聽音量。

● 觸碰  可切換三種音量等級。

□ 本機可儲存每個裝置的設定。

使用語音辨識功能（適用於iPhone）

將iPhone連接至本機後，即可使用本機的語音辨識功能（Siri Eyes Free Mode）。

□ 使用執行iOS 6.1 以上的iPhone時，可透過本產品使用Siri Eyes Free Mode。

1 顯示「電話菜單」畫面。

➤ 第12頁上顯示電話選單畫面

2 觸碰 。

此時語音辨識功能啟動，且出現語音控制畫面。

■ 您也可按住  啟動語音辨識功能。

免持聽話的注意事項

一般注意事項

- 不保證連線至所有具備藍牙無線技術的行動電話。
- 透過藍牙技術傳送或接收語音和資料時，本產品與行動電話之間的傳輸距離必須低於10公尺。
- 使用某些行動電話時，鈴聲可能不會從喇叭輸出。
- 如果在行動電話上選擇了個人模式，則會停用免持聽話。

登錄及連線

- 行動電話操作視行動電話的類型而異。請參閱行動電話隨附的說明手冊，瞭解詳細說明。
- 若無法轉移電話簿，請中斷行動電話與本產品的連接，然後再次從電話執行配對。

撥打及接聽通話

- 您可能會在下列情形中聽見雜音：
 - 一 使用電話上的按鈕接聽電話時。
 - 一 掛斷線路另一端的電話時。
- 若線路另一端的人因回音而聽不見對話時，請降低免持聽話的音量。
- 使用某些行動電話時，即使您在有來電時按下行動電話上的接受按鈕，仍可能無法執行免持聽話。
- 若電話號碼已登錄在電話簿上，登錄的姓名便會出現。若將相同電話號碼登錄在不同姓名下，則只會顯示電話號碼。

已接電話和已撥電話記錄

- 您無法在已接電話記錄中撥號給未知的使用者（無電話號碼）。
- 若通話是由您的行動電話撥出，則本產品不會記錄任何資料。

電話簿轉移

- 若您的行動電話上有超過 1 000 筆電話簿項目，則不是所有項目都能下載。
- 視行動電話而定，本產品可能不會正確顯示電話簿。
- 若行動電話中的電話簿包含影像資料，電話簿可能無法正確轉移。
- 視行動電話而定，電話簿可能無法轉移。

iPod / iPhone或智慧型手機設定

搭配本產品使用 iPod / iPhone 或智慧型手機時，請依據連接的裝置配置本產品設定。
本節提供各裝置所需設定的說明。

iPod / iPhone 或智慧型手機設定的基本流程

- ① 選擇連接裝置的方式。
 - 第14頁上設定裝置連接方式
- ② 將您的裝置連接至本產品。
 - 第39頁上連接
- ③ 如有必要，請利用藍牙連線將您的裝置連接至本產品。
 - 第11頁上登錄及連接藍牙裝置

設定裝置連接方式

若要在本產品上使用 iPhone 或智慧型手機的應用程式，請選擇連接裝置的方式。
設定需依據連接的裝置為主。

- 1 顯示「系統設定」設定畫面。



- 2 觸碰[輸入/輸出設定]。
- 3 觸碰[智慧型手機設定]。

- 4 觸碰下列設定。

- 裝置：選擇要連接的裝置。
- 連接：選擇連接方式。
- 第15頁上有關各裝置連接及功能的資訊
在自動執行下列程序後，將變更設定。
 - 來源裝置關閉電源。
 - AppRadioMode 與 MirrorLink 模式已退出。
 - 智慧型手機連線（USB與藍牙）中斷。

iPod 相容性

本產品僅支援下列 iPod 機型與 iPod 軟體版本。其他機型或版本可能無法正確執行操作。

- iPhone 4、4s、5、5s、5c：iOS 7.0 以上。
- iPhone 3GS：iOS 6.0.1
- iPod touch（第四代、第五代）：iOS 6.0.1
- iPod touch（第三代）：iOS 5.1.1
- iPod touch（第二代）：iOS 4.2.1
- iPod classic 160GB（2009）：版本 2.0.4

- iPod classic 160GB（2008）：版本 2.0.1
- iPod classic 80GB：版本 1.1.2
- iPod nano（第七代）
- iPod nano（第六代）：版本 1.2
- iPod nano（第五代）：版本 1.0.2
- iPod nano（第四代）：版本 1.0.4
- iPod nano（第三代）：版本 1.1.3
- 您無法使用另售的接頭纜線連接及控制相容本產品的 iPod。
- 操作方式視 iPod 機型和軟體版本而異。
- 視 iPod 的軟體版本而定，iPod 有可能不相容本產品。

有關 iPod 與本產品之間的相容性資訊，請參閱我們網站上的資訊。

本手冊可適用於下列 iPod 機型。

有 30 針接腳的 iPod

- iPhone 3GS、4、4s
- 第二、三、四代 iPod touch
- iPod classic 80GB、160GB
- 第三、四、五、六代 iPod nano

有 Lightning 接頭的 iPod

- iPhone 5、5s、5c
- 第五代 iPod touch
- 第七代 iPod nano

Android 裝置相容性

- 操作方式視 Android 裝置和 Android OS 的軟體版本而異。
 - 視 Android OS 的版本而定，有可能不會與本產品相容。
 - 不保證與所有 Android 裝置的相容性。
- 有關 Android 裝置與本產品之間的相容性資訊，請參閱我們網站上的資訊。

MirrorLink 裝置相容性

- 本產品相容於 MirrorLink 版本 1.1。
 - 不保證相容於所有 MirrorLink 裝置。
- 有關 MirrorLink 裝置與本產品之間的相容性資訊，請參閱我們網站上的資訊。

iPod / iPhone或智慧型手機設定


有關各裝置連接及功能的資訊

連接各裝置所需的纜線和設定，以及可用的來源如下。

有30針接頭的iPod / iPhone			
裝置連接方式		經由藍牙連接 (AVH-X7750BT)	經由 CD-1U201V (另售) 連接
智慧型手機設定	裝置	iPhone / iPod	iPhone / iPod
	連接	透過 BT 無線連接	USB
藍牙連線		需要藍牙連線。	—
可用來源	iPod (音訊)	✓	✓
	iPod (視訊)	—	—
	AppRadioMode	—	✓

有Lightning接頭的iPod / iPhone			
裝置連接方式		經由藍牙連接 (AVH-X7750BT)	經由 CD-1U52 (另售) 連接
智慧型手機設定	裝置	iPhone / iPod	iPhone / iPod
	連接	透過 BT 無線連接	USB
藍牙連線		需要藍牙連線。	—
可用來源	iPod (音訊)	✓	✓
	iPod (視訊)	—	—
	AppRadioMode	—	✓

Android、MirrorLink裝置			
裝置連接方式		透過 CD-MU200 連接時 (另售)	
智慧型手機設定	裝置	其他	
	連接	MirrorLink/AppRadioMode	
藍牙連線		—	
可用來源	MirrorLink	✓ 將「連接」(於「智慧型手機設定」中)設為「MirrorLink」。	
	AppRadioMode	✓ 將「連接」(於「智慧型手機設定」中)設為「AppRadioMode」。	

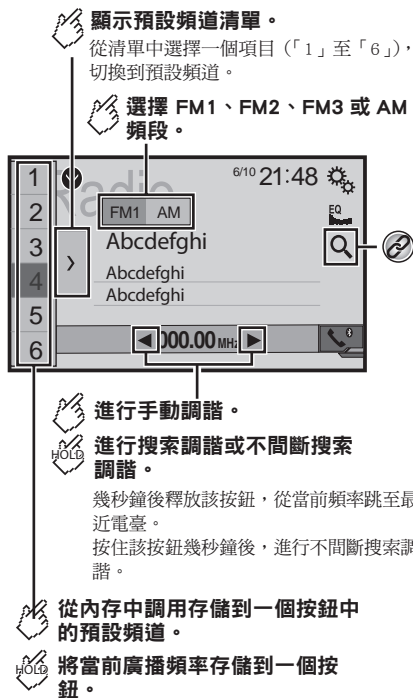

- ☐ 按下 **◀** 或 **▶**，亦可切換預設頻道。
- ☐ 按住 **◀** 或 **▶** 再放開，亦可搜尋調頻。
- ☐ 持續按住 **◀** 或 **▶**，可不間斷搜尋調頻。再觸碰一次即可取消。

開始程序

- 1 顯示「AV 信號源選擇」畫面。



- 2 觸碰 [Radio]。
「Radio」畫面隨即出現。

依PTY資訊搜尋

您可以使用PTY（節目類型識別）資訊搜尋電台。
☐ 此功能可在選擇FM選台器後使用。

- 1 觸碰 **Q**。
- 2 觸碰 **▲** 或 **▼** 可選擇項目。
可使用下列項目：
新聞/資訊（預設）、流行、古典、其他。
- 3 觸碰 **↵** 可開始搜尋。
▪ 觸碰 [取消] 後，便會取消搜尋。

儲存最強的廣播頻率

BSM（最佳電台記憶）功能會將六個最強的廣播頻率儲存於預設調頻按鈕「1」到「6」。
☐ 使用BSM儲存廣播頻率可取代已儲存的廣播頻率。
☐ 若儲存的頻率數量尚未達到上限，先前儲存的廣播頻率可繼續儲存。

- 1 觸碰 **☐**。
- 2 觸碰 **↵** 可開始搜尋。
訊息顯示後，六個最強的廣播頻率會根據訊號強度，依序儲存於預設調頻按鈕。
▪ 觸碰 [取消] 後，便會取消儲存。

顯示「Radio settings」畫面

- 1 按下 **⏏**。
- 2 依序觸碰 **☐**、**Y**。
- 3 觸碰 [AV 輸入]。
- 4 觸碰 [收音機設定]。

調頻至訊號良好的頻率

☐ 選擇「Radio」作為來源後，即可使用此功能。
本地頻道搜尋只能收聽訊號夠強的廣播電台。

- 1 顯示「收音機設定」畫面。

- ➔ 第16頁上顯示「Radio settings」畫面

- 2 觸碰 [本地]。

- 3 觸碰您要設定的項目。

- 關閉（預設）：
關閉搜尋調頻設定。
- 等級 1 到 等級 4：
將FM的靈敏度等級設為 等級 1 到 等級 4（AM為 等級 1 或 等級 2）。
- ☐ FM「等級 4」（AM「等級 2」）設定僅接收訊號最強的電台。

設定FM或AM調頻間隔

您可以切換FM或AM頻帶的調頻間隔。
☐ FM頻帶的搜尋調頻間隔固定為50 kHz。

- 1 關閉播放來源。
- ➔ 第10頁上AV來源選擇畫面上的來源
- 2 顯示「收音機設定」畫面。
- ➔ 第16頁上顯示「Radio settings」畫面
- 3 觸碰 [FM間隔] 或 [AM間隔] 可切換調頻間隔。
每個設定可使用下列項目：

- FM Step
- 100kHz（預設）
- 50kHz
- AM Step
- 9kHz（預設）
- 10kHz

設定備用頻率搜尋

調諧器無法取得良好收訊時，則搜尋目前網路中其他支援相同節目的廣播電台。

- 1 顯示「收音機設定」畫面。
- ➔ 第16頁上顯示「Radio settings」畫面
- 2 觸碰 [替代頻率] 可切換「開啟」或「關閉」（預設）。

設定自動 PI 搜尋

切換至內含RDS資料的廣播電台時，自動從所有頻帶搜尋相同PI（節目識別）代碼的廣播電台。

- 1 顯示「收音機設定」畫面。
- ➔ 第16頁上顯示「Radio settings」畫面
- 2 觸碰 [自動 PI] 可切換「開啟」或「關閉」（預設）。

廣播

□ 即使設為「關閉」，還是在調諧器無法取得良好收訊時自動執行PI搜尋。

限制電台播放區域節目

您可以切換是否在自動 PI 搜尋期間檢查區域代碼。

- 1 顯示「收音機設定」畫面。
- 第16頁上顯示「Radio settings」畫面
- 2 觸碰[地區]可切換「開啟」（預設）或「關閉」。

接收交通廣播（TA）

可中斷其他播放來源，從上次選擇的頻率接收交通廣播。

- 1 顯示「收音機設定」畫面。
- 第16頁上顯示「Radio settings」畫面
- 2 觸碰[切播交通宣告]可切換「開啟」或「關閉」（預設）。

接收新聞廣播

可中斷其他播放來源，從上次選擇的頻率收聽新聞。

- 1 顯示「收音機設定」畫面。
- 第16頁上顯示「Radio settings」畫面
- 2 觸碰[切播新聞]可切換「開啟」或「關閉」（預設）。

接收警報廣播

可中斷其他播放來源，從上次選擇的頻率接收警報廣播。


- 1 顯示「收音機設定」畫面。
- 第16頁上顯示「Radio settings」畫面
- 2 觸碰[報時斷訊]可切換「開啟」（預設）或「關閉」。

電視選台器



隱藏調諧器控制按鈕。

若要再次顯示按鈕，觸摸螢幕上的任意位置。

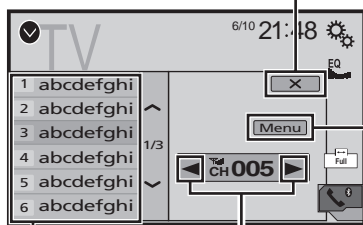

➤ 向上或向下切換預設頻道。

➤ 顯示電視調諧器菜單。

➤ 調用預設頻道。

- 按下◀◀或▶▶，亦可切換預設頻道。
 - 變更寬螢幕模式。
 - 第38頁上常用操作
- 您可以控制電視選台器，如 GEX-1550TV（另售）。
➤ 下列說明依電視選台器操作手冊而異。

開始程序

- 1 顯示「AV 信號源選擇」畫面。



- 2 觸碰[TV]。
「TV」畫面隨即出現。

儲存頻道


此功能可自動儲存頻道。
在此步驟儲存的廣播頻率會取代先前儲存的廣播頻率。

- 1 觸碰[Menu]。
 - 2 觸碰[Channel Search]。
預設頻道依頻道頻率列出。
- 觸碰[Cancel]後，便會取消儲存。

碟片

曲目號碼指示器

音頻信號源螢幕 1

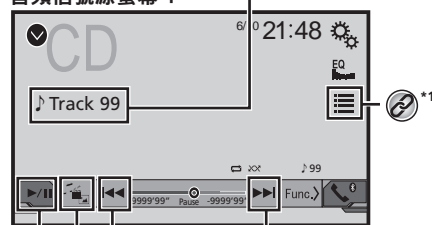

➤ 向前或向後跳過文件。


➤ 在播放和暫停之間進行切換。

➤ 按隨機順序播放文件。
此功能可用於音樂 CD。

◻ : 不按隨機順序播放曲目。

◻ : 按隨機順序播放所有曲目。

音頻信號源螢幕 2

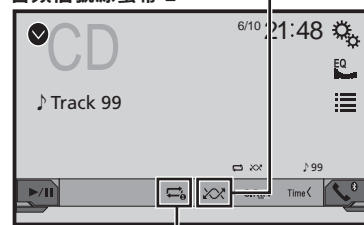

➤ 設置重複播放範圍。

◻ : 重複播放當前光碟。

◻ : 重複播放當前曲目。



隱藏觸摸屏按鈕。


若要再次顯示按鈕，觸摸螢幕上的任意位置。




進行逐幀播放。



進行慢動作播放。

每次觸摸 ，均按以下順序分四步改變速度：1/16 → 1/8 → 1/4 → 1/2

視頻信號源螢幕 1

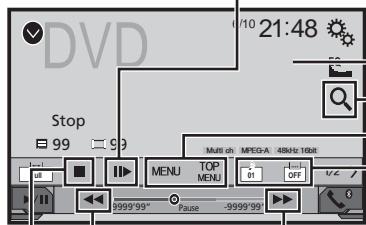


進行快退或快進。

再次觸摸以改變播放速度。






停止播放。

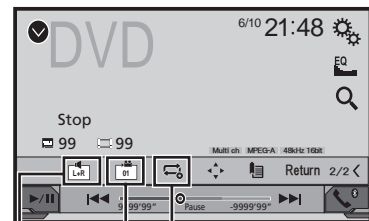視頻信號源螢幕 2



設置重複播放範圍。

- ：重複播放所有文件。
- ：重複播放當前章節。
- ：重複播放當前標題。



改變視角（多角度）。


此功能可用於具有多角度錄影功能的 DVD。



從 [L+R]、[Left]、[Right]、[Mix] 中選擇音頻輸出。

此功能可用於採用 LPCM 音頻錄製的 VCD 和 DVD。

視頻信號源螢幕 2

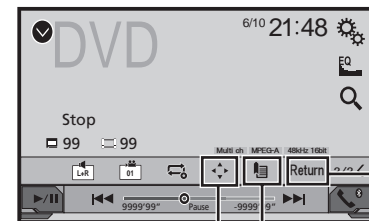

恢復播放（書籤）。


 

 
此功能可用於 DVD-Video。
您可以記住一個點，作為光碟的書籤（最多 5 張光碟）。
若要清除光碟上的書籤，請觸摸並按住該按鈕。



返回並從指定點開始播放。

此功能可用於具有 PBC（播放控制）功能的 DVD-Video 和 VCD。

- *1 選擇清單中的曲目。
 ↳ 第19頁上從檔案名稱清單中選擇檔案
- *2 切換媒體檔案類型。
 ↳ 第19頁上切換媒體檔案類型
- *3 搜尋要播放的部分。
 ↳ 第19頁上搜尋要播放的部分
- *4 顯示DVD選單。
 ↳ 第19頁上操作DVD選單
- *5 切換字幕／音訊語言。
 ↳ 第19頁上切換字幕／音訊語言
- *6 顯示DVD選單鍵盤。
 ↳ 第19頁上使用觸控面板按鍵操作DVD選單

- 按下  或 ，亦可向前或向後略過檔案／章節。
- 按住  或 ，亦可快倒或快進。
- 若正在播放開啟PBC的VCD，則[PBC On]出現。
- 變更寬螢幕模式。

碟片

☞ 第38頁上常用操作

您可利用本產品的內建光碟機播放一般音樂CD、VCD或DVD-Video。

▲注意

基於安全考量，行車時，無法觀看視訊影像。若要觀看視訊影像，請停在安全位置並拉起／踩踏手煞車。

開始程序

- 顯示「AV 信號源選擇」畫面。



- 插入要播放的光碟。

此時來源會變更，然後將開始播放。

☞ 第8頁上插入及退出碟片

- 放入光碟後，選擇[Disc]作為播放來源。

從檔案名稱清單中選擇檔案

- 觸碰[]。
- 觸碰清單上的曲目以播放。

切換媒體檔類型

播放含有多種媒體檔類型的數位媒體時，可切換要播放的媒體檔類型。

- 觸碰[]。
- 觸碰您要設定的項目。
 - Music:
切換媒體檔案類型為音樂（壓縮音訊）。
 - Video:
切換媒體檔類型為視訊。
 - CD-DA:
切換媒體檔案類型為CD（音訊資料（CD-DA））。

搜尋要播放的部分

- ☐ 使用DVD-Video時，可選擇[Title]、[Chapter]或[10key]。
- ☐ 使用VCD時，可選擇[Track]或[10key]（僅限PBC）。

- 觸碰[]。
- 觸碰項目以選擇搜尋功能。
- 觸碰[0]至[9]輸入所需的數字。

- ☐ 若要取消輸入的數字，請觸碰[清除]。
- 4 觸碰[]可從已登錄的數字開始播放。

操作DVD選單

您可直接觸碰畫面上的選單項目操作DVD選單。

- ☐ 使用特定DVD光碟內容時，此功能可能無法正常運作。此時，請使用觸控面板按鍵操作DVD選單。

- 觸碰[]或[MENU]。
- 觸碰所需的選單項目。

切換字幕／音訊語言

- 觸碰[]或[]可變更語言。
- []：變更字幕語言。
- []：變更音訊語言。
- 若要切換字幕／音訊語言，也可以使用「DVD/DivX設定」選單。
- ☞ 第36頁上設定第一優先語言


使用觸控面板按鍵操作DVD選單

DVD選單上的項目出現時，觸控面板按鍵會與項目重疊。此時，請使用觸控面板按鍵選擇項目。

- 觸碰[]。
 - 觸碰[]、[]、[]或[]可選擇所需的選單項目。
 - 觸碰[]。
- ☐ 播放選單的方法視碟片而異。
 - 若觸碰[]，即可直接操作DVD選單。

壓縮音訊檔案

播放螢幕 1（例如：USB）

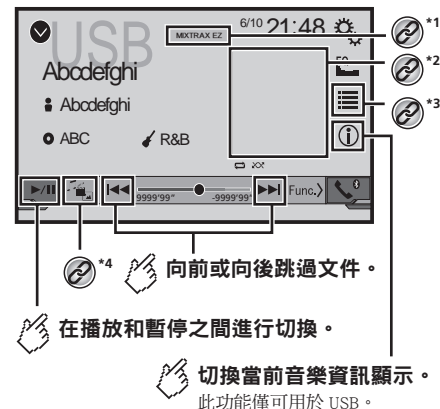

壓縮音訊檔案

按隨機順序播放文件。



: 不按隨機順序播放文件。



: 按隨機順序播放重複播放範圍內的所有文件。

播放螢幕 2 (例如: USB)



設置重複播放範圍。



或: 重複播放所有文件。



: 重複播放當前文件夾。



: 重複播放當前文件。



選擇前一個文件夾或下一個文件夾。



構建使用 Music Browse「音樂瀏覽」模式的數據庫。

此功能僅可用於 USB。

- *1 顯示 MIXTRAX 畫面。
此功能只適用於 USB 儲存裝置。
第28頁上 MIXTRAX
- *2 選擇清單中的檔案。
第20頁上從檔案名稱清單中選擇檔案
使用 USB 儲存裝置時，可利用 Music Browse 搜尋檔案。
第20頁上利用 Music Browse 選擇檔案
- *3 顯示連結搜尋畫面。
此功能只適用於 USB 儲存裝置。
第20頁上選擇專輯中的歌曲 (連結搜尋)

- *4 切換媒體檔案類型。
第20頁上 切換媒體檔案類型

- 按下 ◀◀ 或 ▶▶，亦可向前或向後略過檔案。
 - 按住 ◀◀ 或 ▶▶，即可倒轉或快轉。
- 您可以播放儲存在碟片或 USB 儲存裝置中的壓縮音訊檔案。
- 第49頁上 媒體相容性表

開始程序 (適用碟片)

- 顯示「AV 信號源選擇」畫面。



- 插入要播放的光碟。
此時來源會變更，然後將開始播放。
第8頁上 插入及退出碟片
- 放入碟片後，選擇 [Disc] 作為播放來源。

開始程序 (適用USB)

- 顯示「AV 信號源選擇」畫面。



- 插入 USB 儲存裝置。
第8頁上 插入及拔除 USB 儲存裝置
- 觸碰 [USB]。
- 依資料夾編號順序播放。若資料夾內沒有可播放檔案，則會略過。

從檔案名稱清單中選擇檔案

您可以利用檔案名稱或資料夾名稱清單，尋找檔案或資料夾。

- 觸碰 []。
- 觸碰清單上的檔案進行播放。
檔案會依檔案編號順序播放。

利用 Music Browse 選擇檔案

您可以利用目前播放歌曲的相關檔案清單，選擇要播放的檔案。

- 此功能只適用於 USB 儲存裝置。

- 觸碰 [] 切換成 Music Browse 模式，然後建立資料庫。
- 觸碰 []。
- 觸碰所需的類別顯示檔案清單。
- 觸碰您要精簡的項目。
精簡項目，直到所需的歌曲標題或檔案名稱顯示在清單上。
- 觸碰所需的歌曲標題或檔案名稱開始播放。

選擇專輯中的歌曲 (連結搜尋)

- 觸碰插圖開啟歌曲清單。
- 觸碰要播放的歌曲。

切換媒體檔案類型

播放含有多種媒體檔案類型的數位媒體時，可切換要播放的媒體檔案類型。

- 觸碰 []。
- 觸碰您要設定的項目。
 - Music:
切換媒體檔案類型為音樂 (壓縮音訊)。
 - Video:
切換媒體檔案類型為視訊。
 - CD-DA:
切換媒體檔案類型為 CD (音訊資料 (CD-DA))。
 - Photo:
切換媒體檔案類型為靜態影像 (JPEG 資料)。


壓縮視訊檔案



隱藏觸摸屏按鈕。

若要再次顯示按鈕，觸摸螢幕上的任意位置。

(例如：光碟)

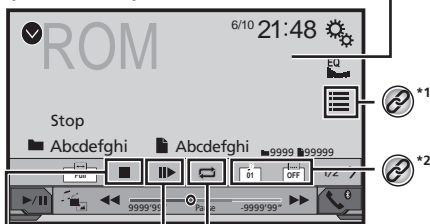

設置重複播放範圍。

- 或 ：重複播放所有文件。
- ：重複播放當前文件夾。
- ：重複播放當前文件。



進行逐幀播放。




進行慢動作播放。



停止播放。

(例如：光碟)

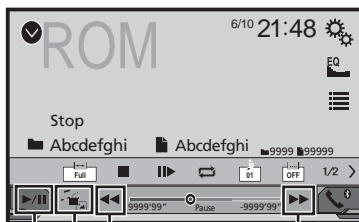

在播放和暫停之間進行切換。



進行快退或快進。
再次觸摸以改變播放速度。

- *1 選擇清單中的檔案。
 - ☞ 第21頁上從檔案名稱清單中選擇檔案
- *2 切換字幕／音訊語言。
 - ☞ 第19頁上切換字幕／音訊語言
- *3 切換媒體檔案類型。
 - ☞ 第20頁上切換媒體檔案類型

- ☐ 按下 或 ，亦可向前或向後略過檔案。
 - ☐ 按住 或 ，即可倒轉或快轉。
 - ☐ 變更寬螢幕模式。
 - ☞ 第38頁上常用操作
- 您可以播放儲存在碟片或USB儲存裝置中的壓縮視訊檔案。
- ☞ 第49頁上媒體相容性表

⚠ 注意

基於安全考量，行車時，無法觀看視訊影像。若要觀看視訊影像，請停在安全位置並拉起／踩踏手煞車。

開始程序

- ☞ 第20頁上壓縮音訊檔案

從檔案名稱清單中選擇檔案

您可以利用檔案名稱清單選擇要觀看的檔案。

- 1 觸碰

- 2 觸碰清單上的檔案進行播放。

- ☐ 依檔案編號順序播放檔案，並略過不含檔案的資料夾。
- 觸碰縮圖的播放符號以預覽檔案。

靜態影像檔案



隱藏觸摸屏按鈕。


若要再次顯示按鈕，觸摸螢幕上的任意位置。



將已顯示的圖像順時針旋轉 90°。



選擇前一個或下一個文件夾。

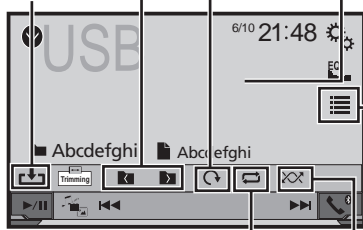

設置重複播放範圍。



: 重複播放所有文件。



: 重複播放當前文件夾。



按隨機順序播放文件。



: 不按隨機順序播放文件。



: 按隨機順序播放當前重複播放範圍內的所有文件。



向前或向後跳過文件。



在播放和暫停之間進行切換。

- *1 將目前影像另存成背景畫面。
 - 第22頁上將影像另存成背景畫面
- *2 選擇清單中的檔案。
 - 第21頁上從檔案名稱清單中選擇檔案
- *3 切換媒體檔案類型。
 - 第22頁上切換媒體檔案類型

- ☐ JPEG影像皆不會顯示在後側顯示器上。
 - ☐ 按下◀◀或▶▶，亦可向前或向後略過檔案。
 - ☐ 按住◀◀或▶▶，可一次搜尋10個JPEG檔案。若目前播放的檔案是資料夾中的第一個或最後一個檔案，則不會執行搜尋。
 - ☐ 變更寬螢幕模式。
 - 第38頁上常用操作
- 您可以觀看儲存在USB儲存裝置中的靜態影像。
- 第49頁上媒體相容性表

開始程序

- 1 顯示「AV 信號源選擇」畫面。



- 2 插入USB儲存裝置。
 - 第8頁上插入及拔除USB儲存裝置

- ☐ 依資料夾編號順序播放。若資料夾內沒有可播放檔案，則會略過。

- 3 觸碰[USB]。
影像顯示在畫面上。

從檔案名稱清單中選擇檔案

您可以利用檔案名稱清單選擇要觀看的檔案。

- 1 觸碰。
- 2 觸碰清單上的檔案進行播放。
 - ☐ 觸碰清單上的資料夾顯示其內容。您可觸碰清單上的檔案進行播放。

切換媒體檔案類型

播放含有多種媒體檔案類型的數位媒體時，可切換要播放的媒體檔案類型。

- 1 觸碰。
- 2 觸碰您要設定的項目。
 - Music:
切換媒體檔案類型為音樂（壓縮音訊）。
 - Video:
切換媒體檔案類型為視訊。
 - Photo:
切換媒體檔案類型為靜態影像（JPEG資料）。

將影像另存成背景畫面

您可以將目前顯示的影像儲存於本機記憶體內，並設為AV畫面或主畫面的背景畫面。

- 1 觸碰要儲存影像上的。
- 2 觸碰下列項目以設為背景畫面。
 - AV 畫面:
將影像另存成AV畫面的背景畫面。
 - 主畫面:
將影像另存成主畫面的背景畫面。
 - 二者:
將影像另存成AV畫面和主畫面的背景畫面。
- 3 觸碰「Yes」以覆寫影像。
 - ☐ 每一張影像都能加以儲存，供AV畫面和主畫面使用。若儲存其他影像，則會覆蓋目前背景畫面。

設定幻燈片播放時間間隔

可在本產品上以幻燈片模式觀看JPEG檔案。在此設定下，可設定每張影像的播放時間間隔。

□ 此設定適用於播放JPG檔案時。

1 顯示「視頻設定」畫面。




2 觸碰[相片瀏覽]。

3 觸碰您要設定的項目。

可使用下列項目：

「10sec」（預設）、「5sec」、「15sec」、「手動設定」。

音頻信號源螢幕 1

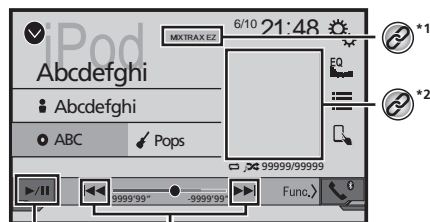

向前或向後跳過文件。


在播放和暫停之間進行切換。

按隨機順序播放文件。

：隨機播放選定清單中的歌曲或視頻。

：隨機播放專輯。

音頻信號源螢幕 2

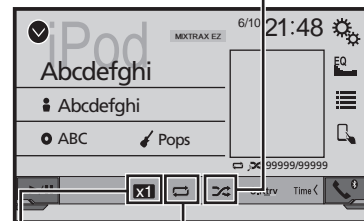

設置重複播放範圍。

：重複播放選定清單中的所有內容。

：重複播放當前歌曲或視頻。


改變有聲讀物播放速度。

× 1：正常播放

× 2：快速播放

× 1/2：慢動作播放

視頻信號源螢幕

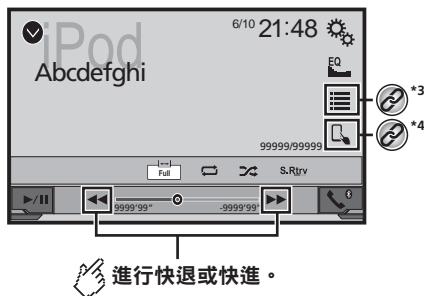

- *1 顯示「MIXTRAX」畫面。
↳ 第28頁上MIXTRAX
- *2 選擇清單中的檔案。
↳ 第24頁上選擇專輯中的歌曲（連結搜尋）
- *3 選擇清單中的曲目。
↳ 第24頁上在播放清單畫面中選擇歌曲或視訊來源
- *4 將控制模式切換成「App Mode」。
↳ 第24頁上在您的iPod中使用本產品的iPod功能

- 按下 或 按鈕也可以向前或向後跳過檔案。
- 按住 或 按鈕也可以執行倒轉或快轉。
- 變更寬螢幕模式。
- ↳ 第38頁上常用操作

連接 iPod

將iPod連接至本產品時，請選擇裝置連接方式。設定需依據連接的裝置為主。

- ↳ 第14頁上iPod / iPhone或智慧型手機設定

有30針接腳的iPod使用者須知

經由USB纜線

- 視iPod而定，連接時，需要使用iPod / iPhone (CD-IU201V) 專用USB介面纜線（另售）。

若連接以上任一纜線將可啟用iPod音訊及／或視訊來源。

- ↳ 第41頁上具備30針接腳的iPhone

經由藍牙無線技術

- ↳ 第11頁上登錄您的藍牙裝置

有Lightning接頭的iPod/iPhone使用者須知

經由USB纜線

- 透過iPod/iPhone (CD-IU52)（另售）專用USB介面纜線，即可使用iPod音訊來源。

不過，無法使用與iPod視訊檔案相關的功能。

- ↳ 第41頁上具有Lightning接頭的iPhone

若要使用有Lightning接頭的iPod播放音訊及／或視訊檔案，請先在iPod上安裝「CarMediaPlayer」，在「AppRadioMode」下啟動「CarMediaPlayer」。

有關「CarMediaPlayer」的詳細資訊，請參閱本公司網站上的資訊。

經由藍牙無線技術

- ↳ 第11頁上登錄您的藍牙裝置

▲ 注意

基於安全考量，行車時，無法觀看視訊影像。若要觀看視訊影像，請停在安全位置並拉起／踩下手煞車。

開始程序

- 1 連接iPod。

- ↳ 第24頁上連接iPod

此時來源會變更，然後將開始播放。

- 若連接iPhone或iPod touch，請先結束應用程式。

- 2 顯示「AV 信號源選擇」畫面。



- 3 觸碰[iPod]。

在播放清單畫面中選擇歌曲或視訊來源

您可由播放清單畫面中搜尋要播放的歌曲或視訊。

- 1 觸碰。

- 2 觸碰或可切換音樂或視訊類別清單。

- 3 觸碰您要搜尋的類別。

若選擇英文作為系統語言，也會提供字母搜尋功能。觸碰初始搜尋列以使用此功能。

- 4 觸碰您要播放的清單標題。

若找不到所需的歌曲或視訊，請試著按照上述步驟重新搜尋。

- 5 從所選擇的選單開始播放。

- 視iPod的世代或版本而定，有些功能無法操作。

- 您可以播放利用MusicSphere應用程式建立的播放清單。可從本公司網站取得應用程式。

在您的iPod中使用本產品的iPod功能

在「App Mode」下，您可以使用iPod控制本產品的iPod功能。iPod的應用程式畫面可顯示在本產品上，音樂檔案和視訊檔案也會透過本產品播放。

- 使用此功能時，即使關閉點火開關，iPod也不會關閉。請手動關閉iPod電源。

- 1 觸碰。

- 2 操作已連接的iPod，並選擇視訊或歌曲，然後播放。

- 即使將控制模式設為「App Mode」，仍可從本產品存取部分功能。不過，操作會視應用程式而定。


- 觸碰可切換控制模式。

選擇專輯中的歌曲（連結搜尋）

- 1 觸碰插圖開啟歌曲清單。

- 2 觸碰要播放的歌曲。

iPhone或智慧型手機應用程式

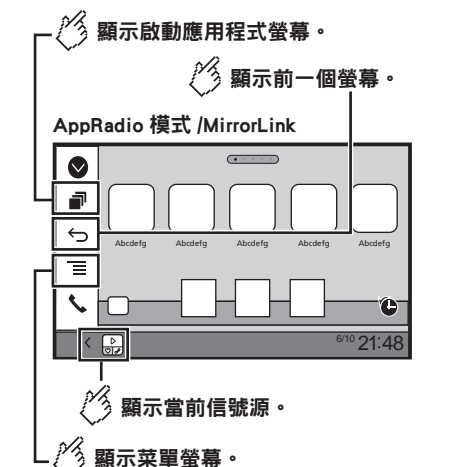

- 在AppRadio Mode和MirrorLink Mode下，將會出現應用程式控制側邊列。
- 按下DISP按鈕可隱藏應用程式控制側邊列。再按一次DISP按鈕就會再次顯示。
- [S] 和 [M]，視類型裝置而定。

警告

在您當地的司法管轄地區，於駕駛中無論是使用iPhone或智慧手機都可能屬違規行為，因此您必須注意並遵守相關法令規範。若對特定功能有任何疑問，請務必在車輛停妥後再執行該功能。除非您處於安全無虞的駕駛環境中，否則請勿使用任何功能。

使用AppRadio Mode

您可直接從畫面中控制iPhone或智慧型手機的應用程式（AppRadio Mode）。

在AppRadio Mode下，您可以利用手指的動作如輕點、拖曳、捲動或輕觸本產品畫面操作應用程式。

- 在本章節中，iPhone和iPod touch都是指「iPhone」。
- 相容的手指動作視iPhone或智慧型手機的應用程式而異。
- 即使應用程式不相容於AppRadio Mode，仍可能會顯示影像，視應用程式而定。但無法操作應用程式。

若要使用AppRadio Mode，請事先在iPhone或智慧型手機上安裝AppRadio應用程式。有關AppRadio應用程式的詳細資訊，請前往下列網站：

<http://www.pioneer.eu/AppRadioMode>

- 執行此項操作前，請確定詳閱使用應用程式連接內容。
- 第51頁上使用應用程式架構連線內容

- 先鋒對於因不正確或錯誤的應用程式內容導致的问题概不負責。
- 支援應用程式的內容及功能由應用程式供應商負責。
- 在AppRadio Mode下，駕駛時產品功能會受到限制，其中可使用的功能是由應用程式供應商決定。
- AppRadio Mode功能的可用性是由應用程式供應商決定，而非先鋒。
- AppRadio Mode允許存取列出項目以外的應用程式（駕駛時受限制），但可使用內容的範圍是由應用程式供應商決定。

開始程序

將iPhone或智慧型手機連接至本產品時，您必須選擇裝置連接方式。設定需依據連接的裝置為主。

- 第14頁上iPod / iPhone或智慧型手機設定

iPhone使用者須知

- 1 連接iPhone。
 - 第41頁上具備30針接腳的iPhone
 - 第41頁上具有Lightning接頭的iPhone

- 2 按下 []。

- 3 觸碰 [APPS]。

可啟動應用程式時，訊息會出現在本產品和您的iPhone螢幕上。

- 4 使用iPhone啟動應用程式。

AppRadio應用程式啟動。

- 5 觸碰 [確認]。

出現AppRadio Mode畫面（應用程式選單畫面）。

智慧型手機使用者須知

- 請確定已經選擇已登錄裝置作為優先裝置。
- 第11頁上登錄您的藍牙裝置

- 1 解除智慧型手機的鎖定，並透過USB連接至本產品。

- 繼續連線方式視您的裝置而異。
- 第14頁上Android 裝置相容性

- 2 按下 []。

- 3 觸碰 [APPS]。

啟動AppRadio app，並出現AppRadio Mode畫面（應用程式選單畫面）。

所有裝置的一般操作

- 若您在執行AppRadio Mode相容應用程式時連接您的裝置，該應用程式操作畫面將出現在本產品上。
- AppRadio應用程式啟動後，觸碰所需的應用程式圖示。
- 所需的應用程式啟動，且出現應用程式操作畫面。
- 按下 [] 可返回最上層選單畫面。

使用鍵盤

當您輕點iPhone應用程式的文字輸入區時，畫面上會顯示鍵盤。您可以直接從本產品中輸入所需的文字。

注意

為了安全著想，只有在車輛停止且拉起 / 踩下煞車時才能使用鍵盤功能。

- 此功能僅適用於iPhone上的AppRadio Mode。

- 1 啟動AppRadio Mode。

- 第25頁上開始程序

- 2 觸碰應用程式操作畫面上的文字輸入區。

出現輸入文字的鍵盤。

- 可變更鍵盤語言。

- 第30頁上利用iPhone應用程式設定鍵盤語言

顯示您應用程式的影像

您可設定在畫面上顯示不相容於 [AppRadio Mode] 的裝置應用程式影像。

- 視應用程式的類型而定，您可能無法看見畫面上的影像。
- 在有Lightning接頭的iPhone上使用此功能時，請勿透過藍牙無線技術連接其他裝置。
- 您只能控制連接裝置上的應用程式。
- 使用此功能觸碰顯示幕時，「請勿觸碰」標記會出現在畫面的右上角。

- 1 連接裝置。

- 第41頁上具備30針接腳的iPhone
- 第41頁上具有Lightning接頭的iPhone
- 第14頁上Android 裝置相容性

- 2 按下 []。


- 3 觸碰 [APPS]。

可啟動應用程式時，訊息會出現在本產品和您的iPhone螢幕上。

- 若有30針接腳的iPhone使用者，請在iPhone上拒絕啟動應用程式，然後觸碰本產品上的 [確認]。

- 4 在裝置上啟動應用程式。

iPhone或智慧型手機應用程式

應用程式的影像會出現在畫面上。
□ 按下  可返回最上層選單畫面。

使用MirrorLink

連接安裝相容應用程式的MirrorLink裝置時，可直接從本產品控制行動裝置的應用程式（MirrorLink模式）。
您可利用多點觸控動作，如輕點、拖曳、捲動及輕觸，透過顯示器檢視及操作相容的應用程式。

□ 視連接的MirrorLink裝置機型而定，多點觸控動作可能會停用。

開始程序

將MirrorLink裝置連接至本產品時，您必須選擇裝置連接方式。
設定需依據連接的裝置為主。

☞ 第14頁上*iPod / iPhone或智慧型手機設定*

- 1 解除MirrorLink裝置的鎖定。
- 2 利用另售USB介面纜線將MirrorLink裝置連接至本產品，以便搭配MirrorLink裝置使用（CD-MU200）。
- ☞ 第14頁上MirrorLink 裝置相容性
- 3 按下  。

4 觸碰 [APPS] 。

若已在MirrorLink裝置中安裝啟動程式應用程式，則應用程式會啟動。

若未安裝，將會出現應用程式選單畫面。

5 觸碰所需的應用程式圖示。

所需的應用程式啟動，且出現應用程式操作畫面。


□ 視連接裝置的狀態而定，部分應用程式可能不會啟動。若未啟動，請根據應用程式啟動訊息啟動應用程式。


□ 按下  可返回最上層選單畫面。

使用音訊混音功能

您可在使用AppRadioMode或MirrorLink模式時，輸出適用iPhone或智慧型手機的音訊混合AV來源和應用程式。

- 1 啟動AppRadioMode或MirrorLink模式。
- 2 按下Volume (+/-) 按鈕。
畫面上將顯示音訊混合選單。

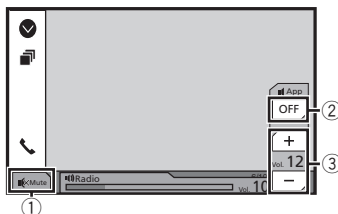

- ① 觸碰可靜音。再觸碰一次即可取消靜音。
- ② 設定是否關閉混音功能。
- ③ 調整應用程式音訊音量。
每次觸碰[+]或[-]可提高或降低音量。
□ 按下  可切換AV操作畫面及應用程式畫面。
□ 無法在畫面上調整主要聲音的音量。按下Volume (+/-) 按鈕可調整主要聲音的音量。

藍牙音訊播放器

X7750BT





播放螢幕 1



 按隨機順序播放文件。



選擇清單中的檔案。
☞ 第27頁上從檔案名稱清單中選擇檔案

- 按下  或  按鈕，亦可向前或向後略過檔案。
- 按住  或  按鈕，亦可倒轉或快轉。

藍牙音訊播放器

- ❑ 使用藍牙音訊播放器之前，請登錄並連接裝置與本產品。
- 🔗 第11頁上登錄您的藍牙裝置
- ❑ 視連接至本產品的藍牙裝置而定，本產品可用操作可能會受限或與本手冊內容有所出入。
- ❑ 聆聽藍牙裝置上的歌曲時，請盡量不要操作手機功能。若操作手機，訊號可能會使歌曲播放出現噪音。
- ❑ 使用經由藍牙連接至本產品的藍牙裝置接聽電話時，可能會暫停播放。

開始程序

- 1 拉出連接纜線，以便使用AppRadioMode。
 - ❑ 您無法在使用AppRadioMode連接纜線時，使用藍牙裝置。
- 2 顯示「系統設定」設定畫面。



- 3 觸碰[AV 輸入]。
- 4 請確認「藍牙音訊」已開啟。
- 5 顯示「AV 信號源選擇」畫面。



- 6 在AV來源選擇畫面上觸碰[Bluetooth Audio]。

從檔案名稱清單中選擇檔案

- ❑ 此功能視藍牙裝置類型而定。
- 1 觸碰[📁]。
 - 2 觸碰清單上的檔案或資料夾進行播放。

AUX來源



👉 在操作視頻文件的螢幕和操作音樂文件的螢幕之間進行切換。

- ❑ [Full] 只有在輔助設備中存在音訊及視訊檔案時才可使用。
- ❑ 需使用迷你插孔AV纜線(CD-RM10) (另售)進行連線。
 - 🔗 第42頁上外部視訊組件及顯示器

⚠注意

基於安全考量，行車時，無法觀看視訊影像。若要觀看視訊影像，請停在安全位置並拉起／踩踏手煞車。

開始程序

您可藉由將裝置連接視訊輸入，顯示視訊影像輸出。

- 1 顯示「系統設定」設定畫面。



- 2 觸碰[輸入/輸出設定]。
- 3 請確認「AUX 輸入」已開啟。
- 4 顯示「AV 信號源選擇」畫面。



- 5 觸碰[AUX]。
- 影像顯示在畫面上。

設定視訊訊號

連接本產品與AUX設備時，請選擇適合的視訊訊號設定。

- ❑ 只有在視訊訊號輸入至AUX輸入時，才能操作此功能。

- 1 進入「視頻設定」畫面。



- 2 觸碰[視頻信號設定]。
- 3 觸碰[AUX]。
- 4 觸碰您要設定的項目。

可使用下列項目：

自動 (預設)、PAL、NTSC、PAL-M、PAL-N、SECAM。

您可以藉由連接至本產品的裝置顯示視訊影像輸出。

➡ 第42頁上 外部視訊組件及顯示器

▲注意

基於安全考量，行車時，無法觀看視訊影像。若要觀看視訊影像，請停在安全位置並拉起／鬆踏手煞車。

開始程序

您可藉由將裝置連接視訊輸入，顯示視訊影像輸出。

- 1 顯示「系統設定」設定畫面。



- 2 觸碰[輸入/輸出設定]。
- 3 將設定設為「開啟」。
- 4 顯示AV來源選擇畫面。



- 5 觸碰[AV]。
- 影像顯示在畫面上。



設定視訊訊號

連接本產品與AV設備時，請選擇適合的視訊訊號設定。

☐ 只有在視訊訊號輸入至AV輸入時，才能操作此功能。


- 1 顯示「視頻設定」畫面。



- 2 觸碰[視頻信號設定]。
 - 3 觸碰[AV]。
 - 4 觸碰您要設定的項目。
- 可使用下列項目：
- 自動（預設）、PAL、NTSC、PAL-M、PAL-N、SECAM。

✎ 停用 MIXTRAX 模式。

（例如：iPod）

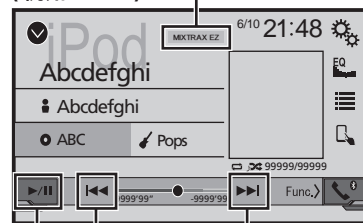

✎ 選擇一首曲目。

✎ 在播放和暫停之間進行切換。

- ☐ 按下 或 按鈕也可以向前或向後跳過檔案。
- ☐ 按住 或 按鈕也可以執行倒轉或快轉。

MIXTRAX操作

MIXTRAX是一種從您音訊程式庫建立連續混音選擇的原始技術，具備一應俱全的DJ音效。

MIXTRAX EZ操作

您可以使用此裝置播放iPod/USB音訊檔案。

MIXTRAX EZ可用來在歌曲之間加入各種音效，編輯歌曲之間的暫停，

讓您享受連續不斷的音樂。

- 只有播放USB儲存裝置中的檔案或iPod中的歌曲時，才可使用此功能。
- 將控制模式設為應用程式模式時，無法使用此功能。
- 播放特定檔案／歌曲時，可能無法使用音效。
- 播放特定檔案／歌曲時，可能無法使用連續播放。

顯示「MIXTRAX Settings」畫面

- 1 按下 .
- 2 觸碰 ，接著觸碰[AV 輸入]。
- 3 觸碰[MIXTRAX 設定]。

設定播放部分

您可指定播放部分。

- 顯示「MIXTRAX 設定」畫面
 ➤ 第28頁上顯示「MIXTRAX Settings」畫面
- 觸碰[Short Playback Mode]。
- 觸碰您要設定的項目。
 可使用下列項目：
 60s（預設）、90s、120s、150s、180s、關閉、隨機。

設定顯示特效

您可以設定MIXTRAX的特效顯示。

- 顯示「MIXTRAX 設定」畫面
 ➤ 第28頁上顯示「MIXTRAX Settings」畫面
- 觸碰[顯示效果]可切換「開啟」（預設）或「關閉」。

設定插播音效

您可以設定向前或向後跳過曲目時發出的效果音。

- 顯示「MIXTRAX 設定」畫面
 ➤ 第28頁上顯示「MIXTRAX Settings」畫面
- 觸碰[Cut-In 效果]可切換「開啟」（預設）或「關閉」。

設定MIXTRAX效果

您可以設定並播放想要的MIXTRAX效果。

- 顯示「MIXTRAX 設定」畫面
 ➤ 第28頁上顯示「MIXTRAX Settings」畫面
- 觸碰[效果設定]。
- 觸碰您要設定的項目。
 可使用下列項目：
 Standard（預設）、Simple、Custom
 ■ 選擇「Custom」時，請檢查想要的效果。

設定閃爍圖案

閃爍色彩會隨音量與低音位準而變化。

- 顯示「MIXTRAX 設定」畫面
 ➤ 第28頁上顯示「MIXTRAX Settings」畫面

- 觸碰[閃爍模式]。
- 觸碰您要設定的項目。
 ● 聲音1（預設）至聲音6：
 閃爍圖案隨音量而變化。請選擇想要的模式。
- L-Pass1至L-Pass6：
 閃爍圖案隨低音位準而變化。請選擇想要的模式。
- 隨機1：
 閃爍圖案隨音量模式及低通模式而隨機變化。
- 隨機2：
 閃爍圖案隨音量模式而隨機變化。
- 隨機3：
 閃爍圖案隨低通模式而隨機變化。
- 關閉：
 閃爍圖案不閃爍。

顯示「系統設定」設定畫面

- 按下■。
- 觸碰 \odot ，接著觸碰 \square 。
 隨即顯示「系統設定」設定畫面。

設定方向盤控制鍵

您可透過有線遙控纜線設定顯示幕上的方向盤控制鍵。

- 第40頁上電源線
- ☐ 將車輛停在安全位置並作動手煞車後，才能使用此設定。
- ☐ 關閉所有來源時，才能使用此設定。
- 需此設定才能使用方向盤遙控功能。
- ☐ 您可以將一個功能鍵設定成對應多個方向盤鍵。
- ☐ 您可以將功能鍵設定成對應一個方向盤鍵。
- ☐ 若您在連接本產品與隨附的有線遙控纜線時出錯，請重設。
- ☐ 如果此功能無法正確運作，請洽經銷商或先鋒授權維修站。
- ☐ 開始設定時，會自動清除所有預設按鍵設定。

使用方向盤控制轉接器的先鋒使用者須知

- 顯示「系統設定」設定畫面。
 ➤ 第29頁上顯示「系統設定」設定畫面
- 觸碰[方向盤控制]。
- 觸碰[不用轉接器]。
- 觸碰[確認]。

手動將功能登錄至各個按鍵

- 顯示「系統設定」設定畫面。
 ➤ 第29頁上顯示「系統設定」設定畫面
- 觸碰[方向盤控制]。
- 觸碰[不用轉接器]。
- 觸碰項目以選擇車輛品牌。
- 觸碰要設定的項目。
 依照畫面上的指示登錄功能設定。
 - 若觸碰[清除]，便會清除所有設定。

啟動藍牙音訊來源

系統設定

- 1 顯示「系統設定」設定畫面。
- ➔ 第29頁上顯示「系統設定」設定畫面
- 2 觸碰[AV 輸入]。
- 3 觸碰[藍牙音訊]可切換「開啟」（預設）或「關閉」。

設定不斷捲動

「持續捲動」設為「開啟」時，錄製的文字資訊會不斷在顯示幕中捲動。

- 1 顯示「系統設定」設定畫面。
- ➔ 第29頁上顯示「系統設定」設定畫面
- 2 觸碰[持續捲動]可切換「開啟」或「關閉」（預設）。

設定後視攝影機

需取得另售的後視攝影機（例如ND-BC6）才能使用後視攝影機功能。（詳情請洽經銷商。）

後視攝影機

本產品具備自動切換功能，排檔桿排入倒車(R)檔位時，會自動切換成車輪安裝之後視攝影機的全螢幕影像。

- ❑ 若在本產品系統啟動後將排檔桿排入倒車(R)檔位，則只會顯示攝影機影像，而不會顯示停車輔助指南和「視訊可能會左右反向顯示」訊息。

▲注意

先鋒建議使用輸出鏡像的攝影機，否則螢幕影像可能會顛倒。

- ❑ 將排檔桿從其他檔位移至倒車(R)檔位後，請立即確認顯示幕是否切換成後視攝影機影像。
- ❑ 若畫面於正常行駛期間切換成全螢幕後視攝影機影像，請在「攝影機設定」中切換成相反的設定。

設定後視攝影機啟動

- 1 顯示「系統設定」設定畫面。
- ➔ 第29頁上顯示「系統設定」設定畫面
- 2 觸碰[攝影機設定]。
- 3 觸碰[倒車攝影機輸入]可切換「開啟」或「關閉」（預設）。

設定後視攝影機極性

- ❑ 「倒車攝影機輸入」為「開啟」時，可使用此功能。
- ➔ 第30頁上設定後視攝影機啟動

- 1 顯示「系統設定」設定畫面。
- ➔ 第29頁上顯示「系統設定」設定畫面
- 2 觸碰[攝影機設定]。
- 3 觸碰[攝影機設定]。
- 電池（預設）：
連接的導線為正極。
- 接地：
連接的導線為負極。

關閉示範畫面

- 1 顯示「系統設定」設定畫面。
- ➔ 第29頁上顯示「系統設定」設定畫面
- 2 觸碰[Demo模式]可切換「開啟」（預設）或「關閉」。

選擇系統語言

- 若內嵌的語言和選取的語言設定不同，便會無法正確顯示文字資訊。
- 某些字元可能無法正常顯示。

- 1 顯示「系統設定」設定畫面。
- ➔ 第29頁上顯示「系統設定」設定畫面
- 2 觸碰[系統語言]。
- 3 觸碰想要使用的語言。
選擇語言後，將返回上一個畫面。

利用 iPhone 應用程式設定鍵盤語言

您可以設定 iPhone 鍵盤的語言，以便在 AppRadioMode 中使用鍵盤。

- ❑ 此功能僅適用於 iPhone 上的 AppRadioMode。

- 1 顯示「系統設定」設定畫面。
- ➔ 第29頁上顯示「系統設定」設定畫面
- 2 觸碰[鍵盤]。
- 3 觸碰想要使用的語言。
選擇語言後，將返回上一個畫面。

調整觸控面板的回應位置（觸控面板校正）

如果感覺畫面上的觸控面板按鍵離回應觸碰的實際位置，請調整觸控面板畫面的回應位置。

- ❑ 此設定只有在您停妥車輛至安全位置並拉起／踩踏手煞車時才能使用。
- ❑ 請勿使用尖頭工具（如原子筆或機械筆），以免損壞螢幕。
- ❑ 儲存調整後的位置資料期間，請勿關閉引擎。

- 1 顯示「系統設定」設定畫面。
- ➔ 第29頁上顯示「系統設定」設定畫面
- 2 觸碰[觸控面板校正]。
- 3 沿箭頭觸碰畫面的兩個角落，然後同時觸碰兩個+號中心兩次。
- 4 按下⏏。
- 儲存調整結果。
- 5 再按一次⏏。
- 繼續進行16點調整。
- 6 輕觸畫面上顯示的「+」號中心。
目標代表順序。
 - 若按下⏏，將返回上一個調整位置。
 - 若按下⏏，將取消調整。
- 7 按住⏏。
- 儲存調整結果。

設定調光器

設定調光器觸發

- ❑ 此設定只有在您停妥車輛至安全位置並拉起／踩踏手煞車時才能使用。

- 1 顯示「系統設定」設定畫面。
- ➔ 第29頁上顯示「系統設定」設定畫面
- 2 觸碰[調光器設定]。
- 3 觸碰[調光器觸發器]。
- 4 觸碰想要的項目。
 - 自動（預設）：
隨車輛頭燈的啟閉自動開啟或關閉調光器。
 - 手動設定：
手動開啟或關閉調光器。
 - 時間：
在您調整的時間開啟或關閉調光器。

設定日間或夜間的調光器持續時間

- ❑ 「調光器觸發器」設為「手動設定」時，可使用此功能。

系統設定

❑ 此設定只有在您停妥車輛至安全位置並拉起／踩踏手煞車時才能使用。

- 顯示「系統設定」設定畫面。
- 第29頁上顯示「系統設定」設定畫面
- 觸碰[調光器設定]。
- 觸碰[日/夜]可切換下列項目。
 - 日（預設）：
手動關閉調光器。
 - 夜：
手動開啟調光器。

可選擇調光器持續時間

您可以調整開啟或關閉調光器的時間。

- ❑ 「調光器觸發器」設為「時間」時，可使用此功能。
- ❑ 此設定只有在您停妥車輛至安全位置並拉起／踩踏手煞車時才能使用。

- 顯示「系統設定」設定畫面。
- 第29頁上顯示「系統設定」設定畫面
- 觸碰[調光器設定]。
- 觸碰[調光器持續時間]。
隨即顯示「持續時間設定」畫面。
- 拖曳游標以設定調光器持續時間。
 - 您也可以觸碰[◀]或[▶]來設定調光器持續時間。
每觸碰一次[◀]或[▶]，游標就會向後或向前移動15分鐘。
- 預設設定為18:00-6:00 (6:00 PM-6:00 AM)。
如果游標位於同一點，調光器可用時間為0小時。
如果關閉時間設定游標位於左端，開啟時間設定游標位於右端，則調光器可用時間為0小時。
- 如果開啟時間設定游標位於左端，關閉時間設定游標位於右端，則調光器可用時間為24小時。
調光器持續時間調整列的時間顯示以時鐘顯示設定為準。
- 第38頁上設定時間與日期

調整影像

您可調整各來源及後視攝影機的影像。

▲注意

基於安全考量，車輛行進時，無法使用其中的一些功能。若要啟用這些功能，必須將車子停在安全之處，並且作動手煞車。請參閱《使用者重要資訊》（另一本手冊）。

- 顯示要調整的畫面。
- 顯示「系統設定」設定畫面。

第29頁上顯示「系統設定」設定畫面

- 觸碰[畫面調整]。
- 觸碰項目以選擇要調整的功能。
 - 亮度：
調整黑色濃度。（-24至+24）
 - 對比度：
調整對比度。（-24至+24）
 - 色濃度：
調整顏色飽和度。（-24至+24）
 - 色調：
調整色調（偏紅或偏綠）。（-24至+24）
 - 調光器：
調整顯示幕亮度。（+1至+48）
 - 色溫：
調整色溫，以達最佳的白平衡。（-3至+3）
- 在某些影像無法調整色調和色濃度。
觸碰[後方攝像]時，模式會切換成所選的攝影機模式。觸碰[訊源]、[導航]或[Apps]可回到所選的模式。
- 觸碰[◀]、[▶]、[▲]、[▼]以進行調整。
 - 車輛頭燈關閉（日間）和開啟（夜間）時對「亮度」、「對比度」和「調光器」所做的調整會分開儲存。
「亮度」和「對比度」會隨車輛頭燈的啟閉而自動切換。
您可以變更開啟或關閉「調光器」的設定或時間。
- 第30頁上設定調光器
某些後視攝影機可能無法進行影像調整。
設定內容可分開儲存。

顯示韌體版本

- 顯示「系統設定」設定畫面。
- 第29頁上顯示「系統設定」設定畫面
- 觸碰[系統資訊]。
- 觸碰[韌體資訊]。
隨即顯示「韌體資訊」畫面。

更新韌體

▲注意

- 用來更新的USB儲存裝置只能含有正確的更新檔案。
- 更新韌體時，切勿關閉本產品電源或移除USB儲存裝置。
- 僅可在車輛停止且手煞車作動時更新韌體。

- 下載韌體更新檔案。
- 將空白（格式化）USB儲存裝置連接至電腦，找出正確的更新檔案，將檔案複製到USB儲存裝置。
- 將USB儲存裝置連接至本產品。
- 關閉來源。
- 第10頁上AV來源選擇畫面上的來源
- 顯示「系統設定」設定畫面。
- 第29頁上顯示「系統設定」設定畫面
- 觸碰[系統資訊]。
- 觸碰[韌體升級]。
- 觸碰[繼續]以顯示資料傳輸模式。
 - ❑ 依照畫面上的指示完成韌體更新。
 - ❑ 韌體更新成功後，本產品會自動重設。
 - ❑ 如果畫面顯示錯誤訊息，請觸碰顯示幕，再次執行以上步驟。

顯示「音頻」設定畫面

- 1 按下 **⏮**。
- 2 觸碰 **🔊**，接著觸碰 **🔊**。
隨即顯示「音頻」設定畫面。

使用淡化器調整

- 1 顯示「音頻」設定畫面。
➔ 第32頁上顯示「音頻」設定畫面
- 2 觸碰[Fader]。
- 3 觸碰 **▲**或**▼**調整前置／後置揚聲器平衡。
□ 前置／後置揚聲器平衡從前移到後的同時，會顯示「Front25」至「Rear25」。
□ 預設設定為「F/R 0」。
□ 使用雙揚聲器系統時，請將「Front」和「Rear」設為「0」。
- 您也可拖曳顯示表上的點設定淡化／平衡。

使用平衡調整

- 選擇「標準模式」作為揚聲器模式時，可使用此功能。
- 1 顯示「音頻」設定畫面。
➔ 第32頁上顯示「音頻」設定畫面
 - 2 觸碰[Balance]。
 - 3 觸碰 **◀**或**▶**調整左／右揚聲器平衡。
□ 在左置／右置揚聲器平衡由左移到右的同時，會顯示「Left25」至「Right25」。
□ 預設設定為「L/R 0」。
 - 您也可拖曳顯示表上的點設定淡化／平衡。

切換靜音／衰減

導航輸出語音提示時，可自動靜音或削減AV來源音量和iPhone應用程式音量。

- 1 顯示「音頻」設定畫面。
➔ 第32頁上顯示「音頻」設定畫面
- 2 觸碰[靜音等級]。
- 3 觸碰您要設定的項目。
 - 衰減（預設）：
音量變成比目前音量低20 dB。
 - 靜音：
音量變為0。

- 關閉：
音量不變。

調整來源音量

- SLA（來源音量調整）可讓您調整各個來源的音量，以免切換來源時音量出現劇烈變化。
- 設定以FM調諧器的音量為準（保持不變）。
 - 選擇FM調諧器作為AV來源時，無法使用此功能。
- 1 比較FM調諧器音量與欲調整之來源的音量。
 - 2 顯示「音頻」設定畫面。
➔ 第32頁上顯示「音頻」設定畫面
 - 3 觸碰[音訊電平調整]。
 - 4 觸碰 **▲**或**▼**調整來源音量。
□ 若直接觸碰可移動游標的區域，SLA設定會變成觸碰位置的值。
□ 調高或調低來源音量的同時，會顯示「+4」至「-4」。
□ 預設設定為「0」。

使用自動位準控制

此功能會自動修正音樂檔案或來源之間的聲音位準差異。

- 1 顯示「音頻」設定畫面。
➔ 第32頁上顯示「音頻」設定畫面
- 2 觸碰[自動等級控制]。
- 3 觸碰想要的項目。
 - 關閉（預設）：
關閉自動位準控制設定。
 - 模式 1：
小幅修正音樂檔案或來源之間的聲音位準差異（用於窄動態範圍聲音訊號）。
 - 模式 2：
大幅修正音樂檔案或來源之間的聲音位準差異（用於寬動態範圍聲音訊號）。

調整響度

此功能會在音量較低時補償低頻和高頻範圍的不足。
□ 使用免持功能撥打或接聽電話時，無法使用此功能。

- 1 顯示「音頻」設定畫面。
➔ 第32頁上顯示「音頻」設定畫面
- 2 觸碰[響度]。
- 3 觸碰想要的項目。
可使用下列項目：
關閉（預設）、低、中、高。

使用重低音揚聲器輸出

本產品配備可開關的重低音揚聲器輸出機構。

- 1 顯示「音頻」設定畫面。
➔ 第32頁上顯示「音頻」設定畫面
- 2 觸碰[重低音]可切換「開啟」（預設）或「關閉」。

調整截止頻率值

您可以調整各個揚聲器的截止頻率值。
可調整下列揚聲器：
標準模式：前、後、重低音揚聲器。
網路模式：高音、中音、重低音揚聲器。
□ 「重低音」為「開啟」時，才能使用「重低音」。
➔ 第32頁上使用重低音揚聲器輸出

- 1 顯示「音頻」設定畫面。
➔ 第32頁上顯示「音頻」設定畫面
- 2 觸碰[分頻設定]或[重低音設定]。
- 3 觸碰 **◀**或**▶**切換要調整的揚聲器。
- 4 將圖線拖曳至要調整的位置。
□ 您也可以設定下列項目。
 - [Phase]：
將重低音揚聲器相位切換成正常或相反位置。
 - LPF/HPF：
將LPF/HPF設定切換成「開啟」或「關閉」。
 - 調整高音揚聲器時，無法使用此功能。
 - 觸碰 **◀**或**▶**切換調整的揚聲器。

切換後揚聲器輸出

- 1 關閉來源。
- 2 顯示「音頻」設定畫面。
➔ 第32頁上顯示「音頻」設定畫面
- 3 觸碰[後揚聲器輸出]。
- 4 觸碰可切換「Rear」（預設）或「超重低音」。

增強低音

- 1 顯示「音頻」設定畫面。
➔ 第32頁上顯示「音頻」設定畫面
- 2 觸碰[低音增強]。

3 觸碰以選擇低音增強等級，可選擇0到+6。

選擇聆聽位置

您可以選擇作為音效中心的聆聽位置。

1 顯示「音頻」設定畫面。

➔ 第32頁上顯示「音頻」設定畫面

2 觸碰[聆聽位置]。

3 觸碰想要的位置以變更聆聽位置。

可使用下列項目：

關閉（預設）、Front、左前方、右前方、全部。

☐ 選擇「網路模式」作為揚聲器模式時，無法使用「全部」。

微調揚聲器輸出位準

您可以藉由聆聽音訊輸出來微調揚聲器輸出位準。

☐ 「重低音」設為「開啟」時，可使用此功能。

➔ 第32頁上使用重低音揚聲器輸出

1 顯示「音頻」設定畫面。

➔ 第32頁上顯示「音頻」設定畫面

2 觸碰[揚聲器音壓]。

3 視需要觸碰◀或▶選擇聆聽位置。

可使用下列項目：

關閉（預設）、Front、左前方、右前方、全部。

☐ 選擇「網路模式」作為揚聲器模式時，無法使用「全部」。

☐ 若您變更聆聽位置設定，則所有揚聲器的輸出電平都將隨此設定變更。

4 觸碰◀或▶調整揚聲器輸出位準。

☐ 要修正的距離增加或減少的同時，會顯示「-24」dB至「10」dB。

可選擇以下揚聲器：

左前、右前、左後、右後、重低音揚聲器

■ 若要使用此功能，必須事先測量車輛的音響。

調整時序校準

時序校準可調整各揚聲器與聆聽位置的距離，修正聲音到達聆聽位置所需的時間。

1 測量聆聽者頭部與各揚聲器主機的距離。

2 顯示「音頻」設定畫面。

➔ 第32頁上顯示「音頻」設定畫面

3 觸碰[聲音時序校準]。

4 視需要觸碰◀或▶選擇聆聽位置。

可使用下列項目：

OFF（預設）、Front、左前方、右前方、全部。

☐ 選擇「網路模式」作為揚聲器模式時，無法使用「全部」。

☐ 若您變更聆聽位置設定，則所有揚聲器的輸出電平都將隨此設定變更。

5 觸碰◀或▶輸入所選揚聲器與聆聽位置的距離。

☐ 您可以用2.5 cm為單位來輸入數值（0到350 cm）。

可選擇以下揚聲器：

左前、右前、左後、右後、重低音揚聲器

■ 若觸碰[TA開啟]，將強制關閉時序校準。

■ 聆聽位置設定設為「左前方」或「右前方」時，才能使用此功能。

■ 若要使用此功能，必須事先測量車輛的音響。

切換時序校準預設

1 顯示「音頻」設定畫面。

➔ 第32頁上顯示「音頻」設定畫面

2 觸碰[時間調校預設]。

3 觸碰想要的項目。

● 初始（預設）：

設定成初始設定值。

● 自動時間調校：

將「自動EQ&TA測定」的結果反映至設定值。

● 關閉：

將所有設定值重設為0。

● 自訂：

設定成在「聲音時序校準」調整的值。

☐ 調整時序校準時，預設項目會自動切換成「自訂」。

☐ 聆聽位置設定設為「左前方」或「右前方」時，才能使用「自訂」。

使用等化器

調用等化器曲線

您可以隨時輕鬆調用儲存的七種等化器曲線。以下為等化器曲線清單：

● S.Bass為只增強低音調音效的曲線。

● Powerful為增強低音調與高音調音效的曲線。

● Natural為稍微增強低音調與高音調音效的曲線。

● Vocal為增強中音（人聲範圍）的曲線。

● Flat為平坦曲線，不增強任何部分。

● Custom1為個人建立的自訂等化器曲線。若選擇此曲線，效果會套用至所有AV來源。

● Custom2為個人建立的自訂等化器曲線。若選擇此曲線，效果會套用至所有AV來源。

☐ 預設設定為「Powerful」。

1 顯示「音頻」設定畫面。

➔ 第32頁上顯示「音頻」設定畫面

2 觸碰[圖形EQ]。

3 觸碰想要的等化器。

自訂等化器曲線

您可以任意調整目前選擇的等化器曲線設定。您可以透過13頻圖形等化器進行調整。

☐ 若在選擇「S.Bass」、「Powerful」、「Natural」、「Vocal」或「Flat」時進行調整，等化器曲線設定會強制變成「Custom1」。

☐ 若在選擇「Custom2」曲線時進行調整，則會更新「Custom2」。

☐ 您可以建立適用於所有來源的「Custom1」和「Custom2」曲線。

1 顯示「音頻」設定畫面。

➔ 第32頁上顯示「音頻」設定畫面

2 觸碰[圖形EQ]。

3 選擇要作為自訂基礎的曲線。

4 觸碰要調整的頻率。

☐ 若用手指劃過多個等化器頻段的長條，等化器曲線設定將設為各長條觸碰點的值。

使用自動調整等化器

您可以設定自動調整等化器以配合汽車的音響。若要使用此功能，必須事先測量車輛的音響。

➔ 第33頁上自動調整等化器曲線（自動EQ）

☐ 若要手動調整等化器曲線，請將「自動等化器與自動時間調校」設為「關閉」。

1 顯示「音頻」設定畫面。

➔ 第32頁上顯示「音頻」設定畫面

2 觸碰[自動等化器與自動時間調校]可切換「開啟」或「關閉」（預設）。

自動調整等化器曲線（自動EQ）

藉由測量車輛音響，即可配合車內環境自動調整等化器曲線。

▲警告

測量汽車音響時，揚聲器可能會發出響亮的聲音（噪音）。切勿在行車時執行自動EQ測量。

▲注意

- 執行自動EQ之前，請先進行徹底檢查。若在下列情況下執行此功能，可能會導致揚聲器受損：
 - 揚聲器連接方式錯誤。（例如將後置揚聲器連接到重低音揚聲器輸出插孔。）
 - 揚聲器連接到輸出高於揚聲器最大輸出功率能力的功率放大器。
- 若未將聲音測量用麥克風（另售）置於適當位置，測量音可能會變得較響亮，且測量可能要花很長的時間，導致耗用大量電力。請務必將麥克風放在指定的位置。

操作自動EQ功能之前

- 請盡可能在安靜的場所執行自動EQ，並且關閉引擎和空調。此外，請事先切斷車用電話或車內行動電話的電源，或從車內取出。周遭的聲音可能會導致無法正確測量車輛音響。
- 請務必使用聲音測量用麥克風（另售）。使用其他麥克風可能會無法測量，或導致車輛音響的測量結果不準確。
- 若要執行自動EQ，必須連接前置揚聲器。
- 將本產品連接至具輸入位準控制功能的功率放大器時，如果功率放大器的輸入位準設定低於標準位準，可能會無法執行自動EQ。
- 將本產品連接至具LPF（低通濾波器）的功率放大器時，請先關閉LPF再執行自動EQ。此外，請將主動式重低音揚聲器內建LPF的截止頻率設定成最高頻率。
- 已由電腦計算出的距離可提供最佳延遲，確保精準的測量結果。請勿變更此值。
 - 車內的反射音很強，且會發生延遲。
 - 主動式重低音揚聲器的LPF或外部放大器會延遲低音。
- 若測量期間發生錯誤，請在測量車輛音響之前檢查下列項目。
 - 前置揚聲器（左／右）
 - 後置揚聲器（左／右）
 - 噪音
 - 聲音測量用麥克風（另售）
 - 低電量

執行自動EQ

- 自動EQ變更的音訊設定如下：
 - 淡化器／平衡設定返回中間位置。
- 第32頁上**使用平衡調整**
 - 「靜音等級」設為「關閉」。
- 第32頁上**切換靜音／衰减**
 - 自動EQ之前的設定值會被覆寫。
 - 使用麥克風時，請勿按▲開啟或關閉面板。

▲注意

測量進行時，請勿關閉引擎。

- 1 將車輛停放在安靜的地點，關上所有車門、車窗和天窗，然後將引擎熄火。

如果引擎仍在運轉，引擎噪音可能會妨礙自動EQ的正常進行。

- 若在測量期間偵測到駕駛限制，將取消測量。

- 2 將聲音測量用麥克風（另售）固定於駕駛座的頭枕中央，面向前方。

自動EQ會隨麥克風的放置位置而異。如有需要，可將麥克風置於前乘客座並執行自動EQ。

- 3 移除iPhone或智慧型手機。

- 4 開啟點火開關（ACC ON）。

若車輛空調或暖氣開啟，請加以關閉。

- 5 將AV來源切換至「OFF」。

- 第10頁上顯示AV操作畫面

- 6 顯示「音頻」設定畫面。

- 第32頁上顯示「音頻」設定畫面

- 7 觸碰[自動EQ&TA測定]。

隨即顯示「自動EQ&TA測定」畫面。

- 8 連接聲音測量用麥克風（另售）與本產品。

將麥克風插入本產品的AUX輸入插孔。

如果麥克風（另售）線不夠長，請使用延長線（另售）。

- 9 觸碰[左前方]或[右前方]選擇目前的聆聽位置。

- 10 觸碰[開始]。

10秒倒數開始。

- 程序開始之前，會先中斷藍牙連線。

- 11 離開車輛並關上車門，直到倒數結束。

倒數結束時，揚聲器會發出測量音（噪音），而自動EQ測量開始。

- 12 請等候測量完成。

自動EQ完成時會顯示訊息。

- 測量時間因車輛類型而異。

- 若要停止測量，請觸碰[停止]。

- 13 請將麥克風妥善存放於置物箱或其他安全位置。

如果麥克風長時間受到陽光直接照射，高溫可能會導致失真、變色或故障。

儲存聲音設定

您可以儲存目前的聲音設定，以便加以調用。可儲存的設定如下：

淡化器、平衡、揚聲器位準、圖形等化器、HPF/LPF、聆聽位置、交叉、時序校準。

- 1 顯示「音頻」設定畫面。

- 第32頁上顯示「音頻」設定畫面

- 2 觸碰[儲存設定]。

- 3 觸碰[確認]。

隨即儲存所有目前的聲音設定。

- 觸碰[取消]時，將回到「音頻」設定畫面。

載入聲音設定

- 1 顯示「音頻」設定畫面。

- 第32頁上顯示「音頻」設定畫面

- 2 觸碰[載入設定]。

- 3 觸碰要載入的項目。

可使用下列項目：

AEQ Setting、聲音設定。

- 執行自動EQ測量後，才能使用「AEQ Setting」。

- 第33頁上**自動調整等化器曲線（自動EQ）**

- 儲存聲音設定後，才能使用「聲音設定」。

- 第34頁上**儲存聲音設定**

選擇背景顯示畫面

背景顯示共有9種AV操作畫面的預設顯示和6種最上層選單畫面的預設顯示可供選擇。此外，您也可以將背景顯示畫面變更成從USB儲存裝置匯入的其他影像。

1 顯示「主題」畫面。




2 觸碰[背景]。

- 您也可以觸碰此畫面上的[照明顏色]、[主題]或[Utility]變更設定畫面。

3 觸碰[首頁]或[AV]切換畫面顯示。

AV操作畫面及最上層選單畫面的設定內容可分別記憶。

4 觸碰您要設定的項目。

- 預設顯示畫面：選擇所需的預設背景顯示畫面。
-  (自訂)：顯示從USB儲存裝置匯入的背景顯示影像。
→ 第22頁上將影像另存成背景畫面
-  (關閉)：隱藏背景顯示畫面。

設定照明色彩

照明色彩共有7種可供選擇。此外，也可以依序切換這7種照明色彩。

從預設色彩中選擇色彩

您可以從色彩清單中選擇照明色彩。



1 顯示「主題」畫面。



2 觸碰[照明顏色]。

- 您也可以觸碰此畫面上的[主題]、[背景]或[Utility]變更設定畫面。

3 觸碰想要的色彩。

- 有色按鍵：選擇想要的預設色彩。
-  (自訂)：顯示自訂照明色彩的畫面。
→ 第35頁上建立使用者定義色彩
-  (彩虹)：依序變換五種預設色彩。

- 觸碰[首頁]或[AV]分別可預覽最上層選單畫面或AV操作畫面。

建立使用者定義色彩

您可以建立使用者定義色彩。系統會儲存您建立的色彩，下次設定照明色彩時，即可選擇該色彩。

 
1 顯示「主題」畫面。



2 觸碰[照明顏色]。

- 您也可以觸碰此畫面上的[主題]、[背景]或[Utility]變更設定畫面。

3 觸碰下列按鍵。



顯示建立使用者定義色彩的畫面，並將色彩儲存至記憶體。

4 觸碰下列按鍵。



調整亮度和紅、綠、藍的色階，建立個人喜愛的色彩。



- 您也可以拖曳色軸以調整色調。

5 觸碰並按住[備忘]，將自訂色彩儲存至記憶體。

自訂色彩已儲存至記憶體。

下次觸碰相同按鍵時，便會從記憶體調出設定的色彩。

選擇主題色彩

主題色彩共有5種可供選擇。

1 顯示「主題」畫面。



2 觸碰[主題]。

- 您也可以觸碰此畫面上的[照明顏色]、[背景]或[Utility]變更設定畫面。

3 觸碰想要的色彩。

- 觸碰[首頁]或[AV]分別可預覽最上層選單畫面或AV操作畫面。

選擇時鐘影像

AV操作畫面及最上層選單畫面的時鐘共有3種影像可供選擇。


1 顯示「主題」畫面。



2 觸碰[Utility]。

- 您也可以觸碰此畫面上的[照明顏色]、[主題]或[背景]變更設定畫面。

3 觸碰您要設定的項目。

- 預設影像：選擇想要的預設時鐘影像。
-  (關閉)：隱藏時鐘顯示。

- 觸碰[首頁]或[AV]分別可預覽最上層選單畫面或AV操作畫面。

設定視訊播放機

設定第一優先語言

初次播放時，可指派第一優先語言至第一優先字幕、音訊及選單。如果碟片已錄製您選擇的語言，便會以該語言顯示或輸出字幕、音訊及選單。

- 所選來源為「Disc」、「CD」、「Video CD」或「DVD」時，可使用此設定。

設定字幕語言

您可以設定想要的字幕語言。若有字幕，便會以所選的語言顯示字幕。

- 1 顯示「視頻設定」畫面。



- 2 觸碰[DVD/DivX 設定]。

- 3 觸碰[字幕語言]。

出現快顯選單。

- 4 觸碰想要的語言。

選擇「其他」時，會顯示語言代碼輸入畫面。輸入所需語言的四位數代碼，然後觸碰。

- 如果沒有所選擇的語言，則會顯示碟片指定的語言。
- 您也可以在此播放時觸碰切換字幕語言鍵以切換字幕語言。
- 即使播放時使用切換字幕語言鍵切換字幕語言，也不會影響在此處所做的設定。

設定音訊語言

您可以設定喜好的音訊語言。

- 1 顯示「視頻設定」畫面。



- 2 觸碰[DVD/DivX 設定]。

- 3 觸碰[音頻語言]。

出現快顯選單。

- 4 觸碰想要的語言。

選擇「其他」時，會顯示語言代碼輸入畫面。輸入所需語言的四位數代碼，然後觸碰。

- 如果沒有所選擇的語言，則會顯示碟片指定的語言。
- 您也可以在此播放時觸碰切換音訊語言鍵以切換音訊語言。
- 即使播放時使用切換音訊語言鍵切換音訊語言，也不會影響在此處所做的設定。

設定選單語言

您可以設定喜好的語言，以該語言顯示光碟所錄製的選單。

- 1 顯示「視頻設定」畫面。



- 2 觸碰[DVD/DivX 設定]。

- 3 觸碰[選單語言]。

出現快顯選單。

- 4 觸碰想要的語言。

選擇「其他」時，會顯示語言代碼輸入畫面。輸入所需語言的四位數代碼，然後觸碰。

- 如果沒有所選擇的語言，則會顯示碟片指定的語言。

設定角度圖示顯示

您可以設定角度圖示，使其出現在可切換角度的場景。

- 所選來源為「Disc」、「CD」、「Video CD」或「DVD」時，可使用此設定。

- 1 顯示「視頻設定」畫面。



- 2 觸碰[DVD/DivX 設定]。

- 3 重複觸碰[多角度]，直到出現想要的設定。

- 開啟（預設）：開啟多角度設定。
- 關閉：關閉多角度設定。

設定長寬比

顯示器分為兩種。寬螢幕顯示器的寬高比（電視長寬比）為16:9，一般顯示器的電視長寬比為4:3。若使用電視長寬比為4:3的一般後顯示器，則可設定適合後顯示器的長寬比。（建議只在想要調整長寬比以配合後顯示器時使用此功能。）

- 使用一般顯示器時，請選擇「Letter Box」或「Pan Scan」。選擇「16:9」可能導致影像不自然。
- 如果選擇電視長寬比，本產品顯示畫面會切換成相同的設定。
- 選取的來源為「Disc」、「CD」、「Video CD」或「DVD」時即可使用此設定。

- 1 顯示「視頻設定」畫面。



- 2 觸碰[DVD/DivX 設定]。

- 3 觸碰[電視比例]。

出現快顯選單。

- 4 觸碰您要設定的項目。

- 16:9（預設）：顯示寬螢幕影像（16:9）（初始設定）。
- Letter Box：影像形狀如同信箱，畫面上下方出現黑邊。
- Pan Scan：截短畫面左右側的影像。

- 播放無全螢幕系統的碟片時，即使選擇「Pan Scan」設定，仍會以「Letter Box」播放碟片。請檢查碟片包裝上是否有16:9 LB標記。
- 某些碟片的電視長寬比無法變更。如需詳細資訊，請參閱碟片說明書。

設定家長監控功能

某些DVD-Video碟片可讓您使用家長監控功能設定限制，讓幼童無法觀看內含暴力或成人內容的場景。您可根據需要設定不同程度的家長監控等級。

- 設定家長監控等級後，播放設有家長監控的碟片時，可能會顯示輸入密碼指示。此時，輸入正確密碼後才會開始播放。
- 所選來源為「Disc」、「CD」、「Video CD」或「DVD」時，可使用此設定。

設定密碼和等級

初次使用此功能時，請登錄密碼。若未登錄密碼，則家長監控功能無法運作。

設定視訊播放機

- 1 顯示「視頻設定」畫面。



- 2 觸碰 [DVD/DivX 設定]。
- 3 觸碰 [視聽限制]。
「視聽限制」畫面出現。
- 4 觸碰 [0] 到 [9] 輸入四位數密碼。
- 5 觸碰下列按鍵。



登錄密碼，隨後即可設定等級。

- 6 觸碰 [1] 到 [8] 中任一數字，選擇想要的等級。
 - [8]：允許播放整張碟片（初始設定）。
 - [7] 至 [2]：允許播放適合兒童和不含成人內容的碟片。
 - [1]：只允許播放適合兒童的碟片。

- 7 觸碰下列按鍵。



設定家長監控等級。

 
- ☐ 建議記下密碼，以免忘記。
- ☐ 家長監控等級記錄在碟片中。您可以檢視碟片包裝、隨附手冊或碟片本身以作確認。您無法以未記錄家長監控等級的碟片使用家長監控功能。
- ☐ 有些碟片的家長監控功能可僅跳過特定的場景，之後再恢復正常播放。如需詳細資訊，請參閱碟片說明書。

顯示DivX VOD登錄碼

若要使用本產品播放DivX VOD（隨選視訊）內容，必須先向DivX VOD內容供應商登錄本產品。登錄方式是產生DivX VOD登錄碼，將代碼提交給供應商。

- ☐ 請記下代碼：向DivX VOD供應商登錄本產品時，將需要代碼。
- ☐ 所選來源為「Disc」、「CD」、「Video CD」或「DVD」時，可使用此設定。

- 1 顯示「視頻設定」畫面。



- 2 觸碰 [DVD/DivX 設定]。
- 3 觸碰 [DivX VOD]。
「DivX VOD」畫面出現。
 - ☐ 若已啟動登錄碼，將不會顯示。
- 4 觸碰 [註冊碼]。
隨即顯示10位數登錄碼。
 - ☐ 請記下代碼：向DivX VOD供應商取消登錄時，將需要代碼。

顯示DivX VOD取消登錄碼

您可以刪除附有取消登錄碼的已登錄登錄碼。

- ☐ 所選來源為「Disc」、「CD」、「Video CD」或「DVD」時，可使用此設定。

- 1 顯示「視頻設定」畫面。



- 2 觸碰 [DVD/DivX 設定]。
- 3 觸碰 [DivX VOD]。
「DivX VOD」畫面出現。
- 4 觸碰 [註銷碼]。
隨即顯示8位數取消登錄碼。
 - ☐ 請記下代碼：向DivX VOD供應商取消登錄時，將需要代碼。

自動播放DVD

插入有DVD選單的DVD碟片時，本產品將自動取消選單，然後從第一個標題的第一個章節開始播放。

- ☐ 有些DVD可能無法正常播放。如果此功能無法完整運作，請關閉此功能，然後開始播放。
- ☐ 所選來源為「Disc」、「CD」、「Video CD」或「DVD」時，可使用此設定。

- 1 顯示「視頻設定」畫面。



- 2 觸碰 [DVD/DivX 設定]。
- 3 重複觸碰 [DVD 自動播放]，直到出現想要的設定。
 - 關閉（預設）：關閉DVD自動播放設定
 - 開啟：開啟DVD自動播放設定

設定後視攝影機的視訊訊號

連接後視攝影機至本產品時，請選擇適合的視訊訊號設定。

- ☐ 只有在視訊訊號輸入至AV輸入時，才能操作此功能。

- 1 顯示「視頻設定」畫面。



- 2 觸碰 [視頻信號設定]。
- 3 觸碰 [攝影機]。
出現快顯選單。
- 4 觸碰您要設定的項目。
 - 自動（預設）：自動調整視訊訊號設定。
 - PAL：設定視訊訊號為PAL。
 - NTSC：設定視訊訊號為NTSC。
 - PAL-M：設定視訊訊號為PAL-M。
 - PAL-N：設定視訊訊號為PAL-N。
 - SECAM：設定視訊訊號為SECAM。

最愛選單

將最愛選單項目登錄成捷徑之後，只需在「我的最愛」畫面觸碰一下，就能快速跳至登錄的選單畫面。

- ❑ 最愛選單中最多可登錄12個選單項目。

建立捷徑

- 顯示「設定」畫面。



- 觸碰要新增至最愛選單之選單項目的星形圖示。
所選選單的星形圖示將填滿。

- 若要取消登錄，請再次觸碰選單欄位中的星形圖示。

選擇捷徑

- 顯示「我的最愛」畫面。



- 觸碰所需的選單項目。

移除捷徑

- 顯示「我的最愛」畫面。





- 觸碰要移除的最愛選單欄位。

所選選單項目隨即從「我的最愛」畫面中移除。

- 觸碰已登錄選單欄位中的星形圖示也可以移除捷徑。

常用操作

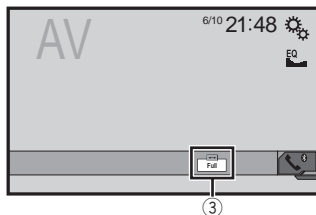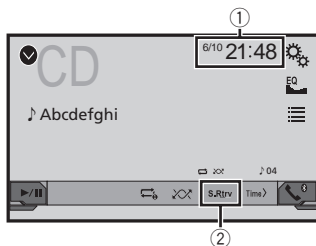

- 時鐘顯示
顯示時間與日期設定畫面
➔ 第38頁上設定時間與日期
- S.Rtrv鍵
切換聲音修正器設定
➔ 第38頁上設定「Sound Retriever」功能
- 畫面顯示模式鍵
變更寬螢幕模式
➔ 第38頁上變更寬螢幕模式

設定時間與日期

- 觸碰畫面上的目前時間。
- 觸碰▲或▼設定正確的時間與日期。
您可以操作以下項目：年、月、日、時、分。
 - ❑ 您可以將時間顯示格式變更成「12 小時」（預設）或「24 小時」。
 - ❑ 您可以變更時間顯示格式的順序：日-月-年、月-日-年、年-月-日。

設定「Sound Retriever」功能

「Sound Retriever」功能會自動增強壓縮音訊並還原豐富的聲音。

- 觸碰[S.Rtrv]可切換設定。
- [S.Rtrv]（模式1）（預設）、[S.Rtrv]（模式2）：啟用「Sound Retriever」功能。
- [S.Rtrv]（關閉）：停用「Sound Retriever」功能。
- ❑ 模式1效果強於模式2。

變更寬螢幕模式

您可為視訊及JPEG影像設定螢幕大小。

- ❑ 預設設定為「Full」，JPEG影像則為「Normal」。

- 觸碰下列按鍵。
 - ❑ 此按鍵外觀會隨目前的設定變化。
- 觸碰想要的模式。
 - Full
4:3影像僅朝水平方向放大，可讓您享受無任何遺漏的影像。
 - ❑ 此設定僅適用於視訊。
 - Zoom
4:3影像朝水平與垂直方向依相同比例放大。
 - ❑ 此設定僅適用於視訊。
 - Normal
4:3影像正常顯示，比例不變。
 - ❑ 此設定適合視訊及JPEG影像。
 - Trimming
顯示的影像佈滿整個螢幕，長寬比維持不變。如果螢幕比例與影像不同，則顯示的影像上／下方或兩側可能會被裁掉一部分。
 - ❑ 此設定僅適用於JPEG影像。
- ❑ 行車時無法操作此功能。
- ❑ 可針對各種視訊來源儲存不同的設定。
- ❑ 若在與其原始螢幕比例不一致的寬螢幕模式下觀看視訊，可能會出現差異。
- ❑ 以「Zoom」模式觀看時，視訊影像會顯得較為粗糙。

其他功能

將本產品還原成預設設定

您可以將設定或記錄內容還原成預設設定。要清除使用者資料，可使用多種方法。

方法1：移除車輛電池

重設本產品登錄的各種設定。

□ 在「主題」畫面上配置的設定不會重設。

方法2：從「系統設定」選單初始化

方法3：按下RESET按鈕

☞ 第5頁上重設微處理器

還原預設設定

□ 此設定只有在您停車至安全位置並拉起／踩踏手煞車時才能使用。

▲注意

還原設定時，請勿關閉引擎。

1 顯示「系統設定」設定畫面。



2 觸碰[還原設定]。

出現確認是否初始化設定的訊息。

3 觸碰[還原]。

□ 在處理程序開始前來源會關閉且藍牙連線會中斷。

連接

注意事項

本產品及本手冊

- 請勿在會造成您無法專心安全駕駛的情況下，操作本產品、任何應用程式或後視攝影機選購配件（若購買）。務必遵守安全駕駛規則及所有現行交通法規。若無法順利操作本產品或看顯示器，請將車輛停在安全位置並拉起／踩踏手煞車，再進行必要調整。
- 請勿將本產品安裝在：(i) 妨礙駕駛視線；(ii) 影響車輛任何操作系統或安全功能之性能（包括氣囊、危險警告燈按鈕）；(iii) 影響駕駛安全操作車輛的位置。在某些情況下，可能因車輛類型或車內形狀而無法安裝本產品。

重要安全措施

▲警告

Pioneer不建議您自行安裝本產品。本產品僅限由專業人員安裝。建議僅由經過特殊訓練並熟悉電子產品的授權先鋒維修人員設定及安裝本產品。切勿自行維修本產品。安裝或維修本產品及其連接纜線可能會暴露於觸電或其他危險之下，並可能造成本產品遭到保固不理賠的損壞。

連接系統前的注意事項

▲警告

為了您的安全起見，請勿任意改造或停用手煞車運動系統。改造或停用手煞車運動系統可能會造成重傷或死亡。

▲注意

- 以纜線固定夾或絕緣膠帶固定所有纜線。請勿讓裸露的纜線露出。
- 請勿將本產品的黃色導線直接連接汽車電瓶。若將該導線直接連接至電瓶，引擎震動可能會導致從乘客室穿至引擎室的纜線絕緣失效。若黃色導線的絕緣因接觸金屬零件而破損，可能會出現短路而導致相當大的危險。
- 讓纜線纏繞繞向機柱或排檔桿非常危險。請務必妥善安裝本產品及其纜線、佈線，以免妨礙或阻礙駕駛。
- 請確保纜線及電線不會干擾或卡在車輛的任何移動零件上，特別是方向盤、排檔桿、手煞車、座椅滑軌、車門或任何車輛操控裝置。
- 請勿將電線配置在會接觸高溫的位置。若絕緣變熱，電線可能會受損，導致短路或造成產品故障及永久性損壞。
- 請勿縮短導線長度。若縮短導線長度，保護電路（保險絲盒、保險絲電阻或濾波器等）可能會無法正常運作。
- 切勿削除本產品的供電導線絕緣並接入導線，為其他電子產品供電。否則將超過導線的電流容量，造成過熱。


安裝本產品前

- 本機限使用12伏特電池與負接地。否則可能會導致起火或故障。
- 為防止電子系統短路，安裝之前請務必拔下（-）電池電纜。

防止受損

▲警告

- 請使用超過50 W（輸出值）與介於4 Ω至8 Ω（阻抗值）的揚聲器。請勿將1 Ω至3 Ω的揚聲器用於本機。
- 黑色纜線為接地。安裝本機或功率放大器（另售）時，請務必先連接接地線。請確保接地線已正確連接至車體的金属部位。功率放大器及本機或其他裝置的接地線必須以不同的螺絲分別連接車輛。若接地線的螺絲鬆動或掉落，可能會導致起火、冒煙或故障。

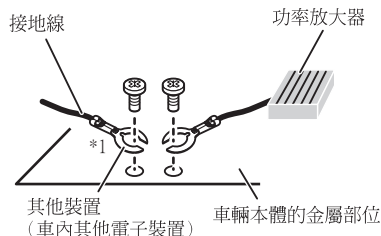


*1 此配備需另購

- 更換保險絲時，僅可使用本產品規定額定值的保險絲。
- 本產品無法安裝在點火開關無ACC（配件）位置的車輛上。



ACC位置

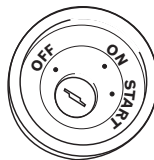

無ACC位置

- 若要避免短路，請用絕緣膠帶包覆中斷連接的導線。為所有不使用的揚聲器導線建立絕緣尤其重要，如留有未包覆絕緣處，可能會造成短路。


連接

- 如要連接功率放大器或其他裝置至本產品，請參閱要連接產品的手冊。

藍／白導線注意事項


- 開啟點火開關(ACC ON)時，會透過藍／白導線輸出控制訊號。連接至外部功率放大器的系統遙控端子、自動天線中繼控制端子或天線增強電源控制端子(最大300 mA 12 V DC)。即使已關閉音訊來源，仍會透過藍／白導線輸出控制訊號。

本產品

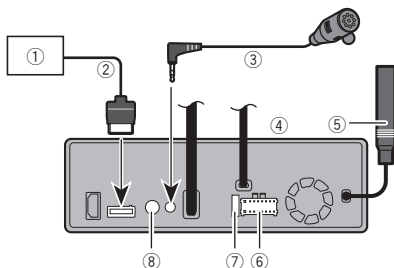

- 1 隱藏式電視選台器 (GEX-1550TV (另售))
- 2 RGB 纜線 (導航系統隨附)
- 3 麥克風 4 m (AVH-X7750BT)
- 4 本產品
- 5 天線插孔
- 6 電源供應器
- 7 保險絲 (10 A)
- 8 可連接有線遠端輸入固定線路遙控轉接器 (另售)。


電源線

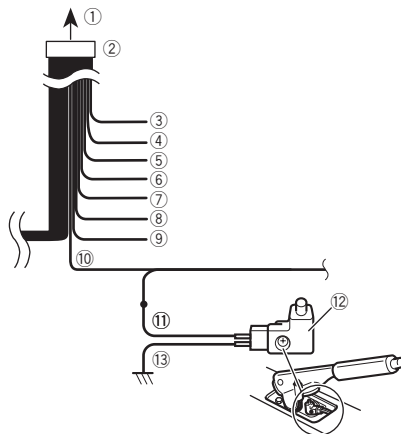


- 1 連接電源
- 2 電源線
- 3 黃色
連接有電端子，無論點火開關位置。
- 4 紅色
連接由點火開關(12 V DC)開啟／關閉控制的電力端子。
- 5 橘色／白色
連接車燈開關端子。
- 6 黑色(接地)
連接車體(金屬)。
- 7 紫色／白色
與倒車燈相連的兩條導線當中，連接排檔桿位於倒車(R)檔位時，電壓產生變化的那一條。此連接可讓本機感應車輪往前或往後移動。
- 8 黃色／黑色
若使用具有靜音功能的設備，請將此導線連接該設備的靜音導線。若否，則靜音導線不必建立任何連接。
- 9 藍色／白色
連接至功率放大器(最大300 mA 12 V DC)的系統控制端子。
- 10 淺綠色
用來偵測手煞車的開啟／關閉狀態。此導線必須連接至手煞車開關的電源供應側。
- 11 電源供應側

- 12 手煞車開關
- 13 接地側

揚聲器導線

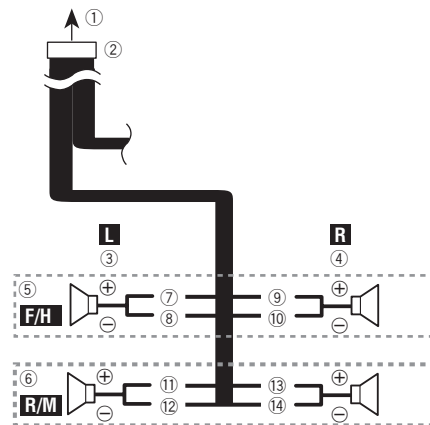

使用重低音揚聲器而無選購之放大器時，請進行這些連接。

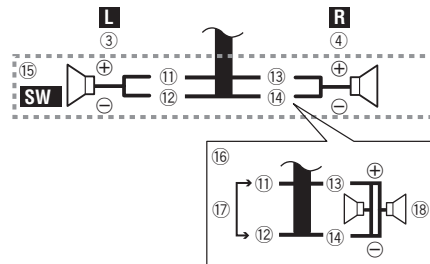

- 1 連接電源
- 2 電源線
- 3 左
- 4 右
- 5 前置揚聲器(STD)或高音揚聲器(NW)
- 6 後置揚聲器(STD)或中音揚聲器(NW)

連接

- ⑦ 白色
- ⑧ 白色／黑色
- ⑨ 灰色
- ⑩ 灰色／黑色
- ⑪ 綠色
- ⑫ 綠色／黑色
- ⑬ 紫色
- ⑭ 紫色／黑色

- ⑮ 重低音揚聲器 (4Ω)
- ⑯ 使用70W (2Ω) 的重低音揚聲器時，請務必將重低音揚聲器連接至本機的紫色和紫色／黑色導線。請勿連接任何東西至綠色和綠色／黑色導線。

⑰ 未使用。

- ⑱ 重低音揚聲器 (4Ω) × 2

■ 若重低音揚聲器連接本產品而非後置揚聲器，請在初次設定時變更後置輸出設定。本產品的重低音揚聲器輸出為單聲道。

☛ 第32頁上切換後揚聲器輸出


■ 若配備雙揚聲器系統，請勿連接任何東西至未與揚聲器連接的揚聲器導線。

功率放大器（另售）

無內部放大器

重要事項


使用此連接時，不使用揚聲器導線。

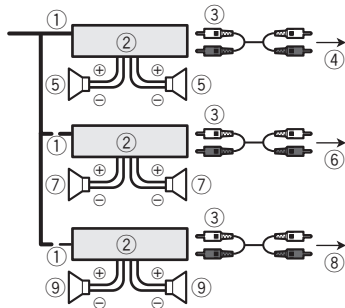

有內部放大器

重要事項

 使用此連接時，前置揚聲器／後置揚聲器訊號(STD)或中音／高音揚聲器訊號(NW)從揚聲器導線輸出。



- ① 系統遙控器
連接至藍色／白色纜線。
- ② 功率放大器（另售）
- ③ 連接RCA線（另售）
- ④ 連接後置輸出(STD)
連接中音輸出(NW)
- ⑤ 後置揚聲器(STD)
中音揚聲器(NW)
- ⑥ 連接前置輸出(STD)
連接高音輸出(NW)
- ⑦ 前置揚聲器(STD)
高音輸出(NW)
- ⑧ 連接重低音揚聲器輸出(STD)
連接低音輸出(NW)
- ⑨ 重低音揚聲器(STD)
低音揚聲器(NW)
- ☛ 請將揚聲器模式變更成標準模式(STD)或網路模式(NW)。
- ☛ 第8頁上首次啟動時
- 您可以依據重低音系統變更重低音揚聲器的RCA輸出。
- 本產品的重低音揚聲器輸出為單聲道。


iPhone和智慧型手機

- 欲深入瞭解如何使用另售纜線連接外部裝置，請參閱纜線的手冊。
- 欲深入瞭解iPhone之連接、操作和相容性，請參閱 第14頁上 iPod / iPhone或智慧型手機設定。
- 欲深入瞭解Android裝置之連接、操作和相容性，請參閱 第14頁上 iPod / iPhone或智慧型手機設定。

具有Lightning接頭的iPhone

透過USB連接埠連接

需使用 iPod / iPhone專用的USB介面纜線(CD-IU52)（另售）建立連線。

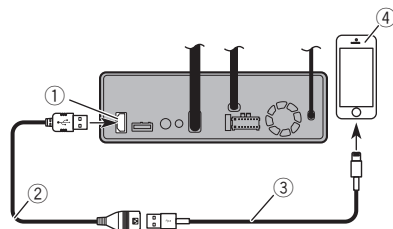


- ① USB連接埠
- ② USB纜線1.5 m
- ③ iPod / iPhone的專用USB介面纜線(CD-IU52)（另售）
- ④ 具有Lightning接頭的iPhone

具備30針接腳的iPhone

透過AUX輸入連接

需使用 iPod / iPhone專用的USB介面纜線(CD-IU201V)（另售）建立連線。

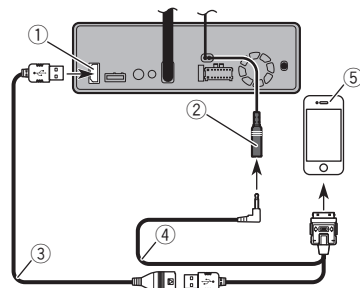


- ① USB連接埠
- ② AUX輸入
- ③ USB纜線1.5 m
- ④ iPod / iPhone專用USB介面纜線(CD-IU201V)（另售）
- ⑤ 具備30針接腳的iPhone

連接

Android或MirrorLink裝置

透過USB連接埠連接

需使用Android或MirrorLink 裝置的USB介面纜線(CD-MU200) (另售) 建立連線。

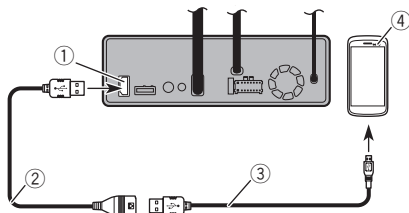

- ① USB連接埠
- ② USB纜線 (隨附於CD-MU200)
- ③ USB - micro USB纜線 (USB A - micro USB B型) (隨附於CD-MU200)
- ④ Android或MirrorLink裝置

攝影機

關於後視攝影機


使用後視攝影機時，會自動從視訊切換成後視影像 (將排檔桿排入 倒車檔 (R)。攝影機檢視模式也可讓您在行車時查看車後情況。

警告

僅限使用顛倒或鏡射後視攝影機的輸入影像。使用其他輸入影像可能導致受傷或損壞。


注意

- 螢幕影像可能會顛倒。
- 後視攝影機可協助您留意後方車輛或倒車進入狹窄的停車位。請勿用作娛樂用途。
- 後視影像中的物體可能會比實際上更近或更遠。
- 倒車或查看車輛後方時，顯示的全螢幕影像之影像區域可能會略為不同。

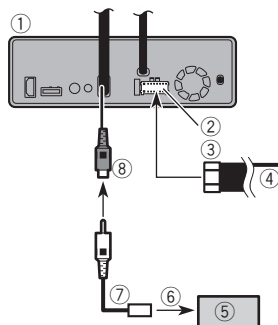

- ① 本產品
 - ② 電源供應器
 - ③ 電源線
 - ④ 紫色/白色 (REVERSE-GEAR SIGNAL INPUT)
 - ⑤ 後視攝影機 (ND-BC6) (另售)
 - ⑥ 連接視訊輸出
 - ⑦ RCA線 (隨附於ND-BC6)
 - ⑧ 褐色 (REAR VIEW CAMERA IN)
- 僅可將後視攝影機連接至REAR VIEW CAMERA IN。請勿連接其他設備。
- 必須採用適當的設定，才能使用後視攝影機。
- ➔ 第30頁上設定後視攝影機

外部視訊組件及顯示器

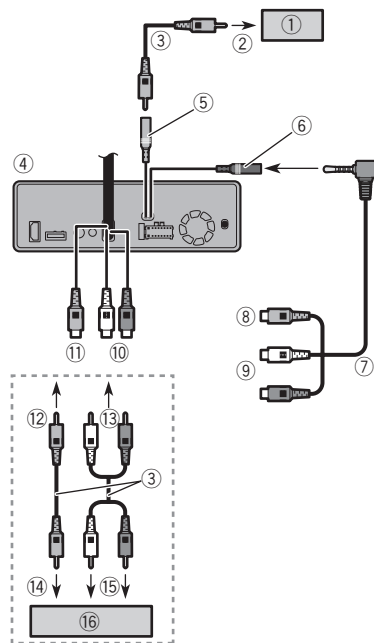

- ① 具備RCA輸入插孔的後顯示器
- ② 連接視訊輸入
- ③ RCA纜線 (另售)
- ④ 本產品
- ⑤ 黃色 (REAR MONITOR OUTPUT)
- ⑥ AUX輸入
- ⑦ 迷你插孔AV纜線 (CD-RM10) (另售)
- ⑧ 黃色
- ⑨ 紅色、白色
- ⑩ 紅色、白色 (AUDIO INPUT)
- ⑪ 黃色 (VIDEO INPUT)
- ⑫ 連接黃色
- ⑬ 連接紅色、白色

連接

- ⑭ 連接視訊輸出
- ⑮ 連接音訊輸出
- ⑯ 外部視訊組件（另售）
- 必須採用適當的設定，才能使用外部視訊組件。
- ➡ 第28頁上AV輸入

警告

切勿將後顯示器安裝在駕駛人行車時可以觀看視訊來源的位置。
本產品的後置視訊輸出用於連接顯示器，讓後座乘客觀看視訊來源。

安裝

安裝前注意事項

注意

切勿將本產品安裝在以下位置或造成以下情況：

 
- 若車輛突然停止，可能造成駕駛或乘客受傷。
- 可能會干擾駕駛操作車輛的位置，例如駕駛座前方地板上，或靠近方向盤或排檔桿之處。
- 為確保正確安裝，請務必依照指定的方式使用隨附的零件。若有任何本產品未隨附的零件，請在經銷商檢查過零件相容性後，以指定的方式使用相容的零件。若使用非隨附或不相容的零件，可能會破壞本產品的內部零件或造成鬆脫並致使產品分離。
- 請勿將本產品安裝在：(i) 妨礙駕駛視線；(ii) 影響車輛任何操作系統或安全功能之性能（包括氣囊、危險警告燈按鈕）；(iii) 影響駕駛安全操作車輛的位置。
- 切勿將本產品安裝在儀表板、車門或部署車輛氣囊的車柱前方或附近。請參閱車輛的車主手冊瞭解前座氣囊的部署區域。

安裝前


- 若安裝工作需要對車輛進行鑽孔或其他修改，請洽詢最近的經銷商。
- 進行本產品最終安裝之前，請暫時連接電線以確認連線正確且系統運作正常。

安裝注意事項

- 請勿將本產品安裝在接觸高溫或濕氣的位置，如：
 - 靠近暖氣、出風口或空調的位置。
 - 受陽光直射的位置，如儀表板上方。
 - 可能接觸雨水的位置，如車門或車輛地板附近。
- 請將本產品水平安裝在0至30度公差內（離左右5度）的表面。若未正確安裝裝置而讓表面傾斜度超過以上公差，會提高車輛位置顯示錯誤的可能性，並可能造成顯示效能下降。




- 為了確保使用本機時能夠適當地散熱，安裝時，請務必在後面板後方留下足夠的空間，並纏住鬆散的纜線，以防其堵住出風口。

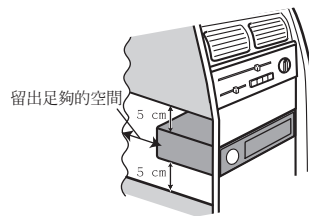


留出足夠的空間

- 線材不得覆蓋下圖所示的區域。必須遵守此項目才能讓放大器自由傳播。

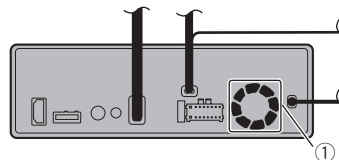

- ① 請勿覆蓋此區域。
- 請確定在儀表板及本機 LCD 面板之間預留足夠的空間，以便 LCD 面板在不接觸儀表板的情形下開啟及關閉。

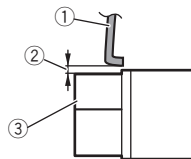

- ① 儀表板
- ② 預留空間
- ③ LCD 面板

DIN 前/後安裝


本裝置可使用前或後安裝方式正確安裝。
安裝時請使用市售零件。

安裝

DIN 前安裝

1 決定側托架的位置。


安裝在淺的空間時，請變更側托架的位置（小）。

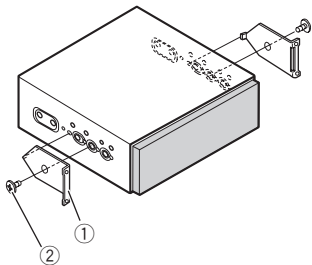

- ① 側托架（小）
- ② 平頭面螺絲（5 mm × 6 mm）

2 將裝置安裝至儀表板中。

將安裝套插入儀表板。然後使用螺絲起子固定安裝套，將金屬突出部位彎（90°）至定位。

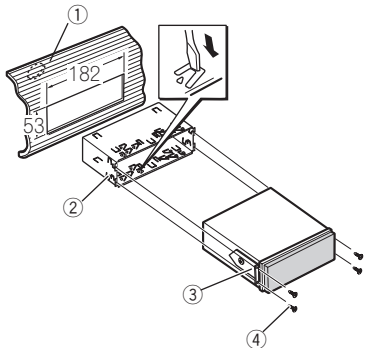


- ① 儀表板
- ② 安裝套
- ③ 側托架
- ④ 螺絲（2 mm × 3 mm）

DIN 後安裝

1 決定適當的位置，其中托架上的孔與裝置側邊的孔需相符。


在安裝至淺的空間時，請使用下列螺絲孔。

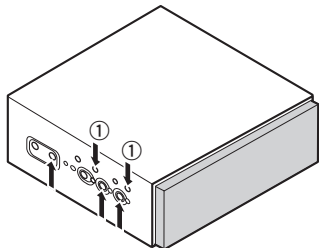

- ① 請僅使用接線螺絲（4 mm × 3 mm）。

2 鎖緊各邊的兩顆螺絲。

視托架的螺絲孔形狀而定，使用接線螺絲（4 mm × 3 mm）、接線螺絲（5 mm × 6 mm）或平頭面螺絲（5 mm × 6 mm）。

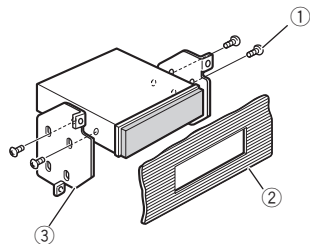


- ① 螺絲
- ② 儀表板或操縱台
- ③ 原廠收音機安裝托架

■ 在部分類型的車輛中，裝置與儀表板之間可能會出現縫隙。若發生此情形，請使用隨附的框架填補縫隙。

拆除裝置

向外伸展裝飾環的上下方以拆除裝飾環。然後鬆開螺絲（2 mm × 3 mm）以拆除安裝套。

- 重新安裝裝飾環時，請將裝飾環壓在裝置上，直到卡至定位。（若裝飾環裝反，將無法正確固定。）

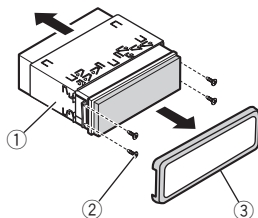

- ① 安裝套
- ② 螺絲（2 mm × 3 mm）
- ③ 裝飾環


安裝麥克風

X7750BT

- 調整麥克風的方向和與駕駛的距離，將麥克風安裝在最容易接收駕駛聲音的位置。
- 連接麥克風之前，請務必關閉（ACC OFF）產品電源。


安裝在遮陽板上

1 將麥克風導線裝入溝槽。

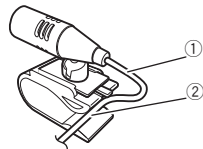

- ① 麥克風導線
- ② 溝槽

2 將麥克風夾安裝在遮陽板上。

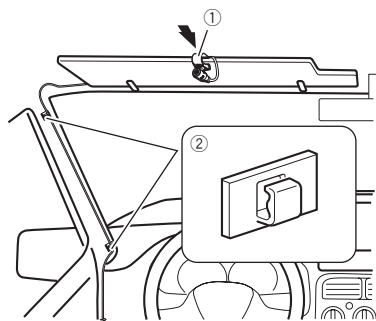


- ① 麥克風夾
- ② 夾子

使用另售的夾子固定車輛內部的導線。
遮陽板位於朝上位置時，將麥克風安裝至遮陽板上。若遮陽板位在朝下的位置，則無法識別駕駛的聲音。


安裝在轉向機柱上

- 1 滑動麥克風座並按壓突出部位，從麥克風夾拆下麥克風座。

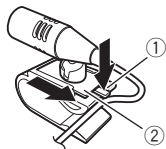

- ① 突出部位
- ② 麥克風座

- 2 將麥克風安裝在轉向機柱上。

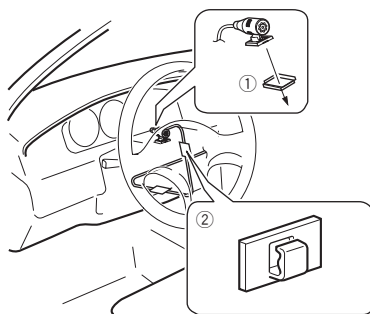

- ① 雙面膠
 - ② 夾子
- 使用另售的夾子固定車輛內部的導線。
■ 使其與方向盤保持距離。

調整麥克風角度



故障排除

若操作本產品時有問題，請參閱本節。常見問題以及可能原因和解決方法如下。若在此找不到問題的解決方法，請聯絡經銷商或最近的Pioneer授權服務中心。

AV畫面的問題

無法播放CD或DVD。

- 碟片插入方向上下顛倒。
 - 確定碟片標籤朝上後再插入。
- 碟片髒污。
 - 清潔碟片。
- 碟片破裂或出現其他破損。
 - 插入正常的圓形碟片。
- 碟片中的檔案屬於不支援的檔案格式。
 - 檢查檔案格式。
- 無法播放碟片格式。
 - 請更換碟片。
- 裝入的碟片屬於本產品無法播放的類型。
 - 請檢查碟片類型。

畫面遭注意訊息覆蓋，無法顯示視訊。

- 手煞車導線未連接或未作動。
 - 正確連接手煞車導線並作動手煞車。
- 手煞車連鎖啟動。
 - 將車輛停在安全的位置並作動手煞車。

連接的設備未輸出視訊。

- 「AV 輸入」設定不正確。
 - 修正設定。

音訊或視訊跳過。

- 本產品未確實固定。
 - 請確實固定本產品。

未產生聲音。無法調高音量。

- 纜線未正確連接。
 - 請以正確方式連接纜線。
- 系統正在執行DVD-Video靜態、慢動作或逐格播放。
 - DVD-Video靜態、慢動作或逐格播放時，不會輸出聲音。
- 播放碟片時，系統暫停或執行、快速倒轉或前進。
 - 如使用非音樂CD (CD-DA) 的媒體，快速倒轉或前進時不會輸出聲音。

顯示圖示⊙，且無法操作。

- 操作與視訊配置不相容。
 - 無法操作。（例如DVD播放不提供該角度、音訊系統、字幕語言等。）

影像停止（暫停）且無法操作本產品。

- 播放碟片時無法讀取資料。
 - 停止播放，再重新開始。

畫面拉長，且長寬比不正確。

- 顯示幕的長寬比設定不正確。
- 請為該影像選擇適當的設定。

顯示家長監控訊息，無法播放DVD。

- 家長監控功能開啟。
- 關閉家長監控功能或變更等級。

無法取消DVD播放的家長監控功能。

- 密碼錯誤。
- 請輸入正確的密碼。

播放未採用在「DVD/DivX 設定」中選擇的音訊語言和字幕語言設定。

- DVD播放未採用在「DVD/DivX 設定」中選擇的對話或字幕語言。
- 如果碟片未錄製在「DVD/DivX 設定」中選擇的語言，則無法切換至所選的語言。

播放時，影像非常不清晰/失真，而且偏暗。

- 碟片錄有防拷訊號。（有些碟片可能錄有此訊號。）
- 由於本產品相容於類比防拷系統，因此，使用某些顯示器觀看具有保護訊號的碟片時，影像可能會出現水平條紋或其他缺陷。此並非故障。

無法操作iPod。

- iPod凍結。
- 使用iPod / iPhone專用USB介面纜線重新連接iPod。
- 更新iPod軟體版本。
- 發生錯誤。
- 使用iPod / iPhone專用USB介面纜線重新連接iPod。
- 將車輛停在安全的位置並關閉引擎。將點火鑰匙轉回關閉（ACC OFF）。然後重新啟動引擎，再開啟本產品的電源。
- 更新iPod軟體版本。
- 纜線未正確連接。
- 請以正確方式連接纜線。

聽不見iPod的聲音。

- 同時使用Bluetooth及USB連線時，音訊輸出方向可能會自動切換。
- 使用iPod變更音訊輸出方向。

電話畫面的問題

因無法使用觸控面板按鍵撥號，所以無法進行撥號。

- 電話超出服務範圍。
- 重新進入服務範圍後再重試。
- 目前無法建立行動電話與本產品之間的連線。
- 請執行連線程序。

應用程式畫面的問題

顯示黑色畫面。

- 操作應用程式時，智慧型手機端的應用程式結束。
- 按下■顯示最上層選單畫面。
- 智慧型手機的作業系統可能在等待畫面操作。
- 將車輛停在安全的位置，檢查智慧型手機的畫面。

有顯示畫面，但完全無法操作。

- 發生錯誤。
- 將車輛停在安全的位置並關閉點火開關（ACC OFF）。接著再次開啟點火開關（ACC ON）。
- 連接Android裝置時，請先中斷本產品的Bluetooth連線，然後再重新連接。

智慧型手機未充電。

- 充電期間長時間使用智慧型手機，造成智慧型手機溫度上升，所以充電停止。
- 中斷智慧型手機與纜線的連接，並等候至智慧型手機冷卻。
- 消耗的電量比充電電量還多。
- 停止智慧型手機上所有不必要的服務，即可解決此問題。

錯誤訊息

本產品發生問題時，顯示幕上會出現錯誤訊息。請參閱下表確認問題，然後採取建議的修正措施。若問題持續發生，請記下錯誤訊息並聯絡經銷商或最近的Pioneer服務中心。

常見故障

AMP Error

- 本產品無法運作或揚聲器連線不正確；已啟動保護電路。
- 檢查揚聲器連線。若關閉/開啟引擎後訊息仍無法消失，請向經銷商或Pioneer授權服務中心尋求協助。

Product overheat. System will be shut down automatically in 1 minute. Restart the product by ACC Off/On may fix this problem. If this message keep showing up, it is possible that some problem occurred in the product.

- 本產品溫度過高，無法運作。
- 依照畫面上顯示的指示操作。若無法解決問題，請向經銷商或Pioneer授權服務中心尋求協助。

碟片

Error-02-XX/FF-FF

- 碟片髒污。
- 清潔碟片。
- 碟片有刮傷。
- 請更換碟片。
- 碟片裝入方向上下顛倒。
- 確定碟片的裝入方向正確。
- 存在電氣或機械錯誤。
- 按下RESET按鈕。

非本區域光碟

- 碟片和本產品的區碼不同。
- 請換上區碼正確的DVD。

無法判別碟片

- 本產品無法播放此類型的碟片。
- 請更換為本產品可播放的碟片。

無法判別檔案

- 本產品無法播放此類型的檔案。
- 請選擇可播放的檔案。

略過

- 插入的碟片包含受DRM保護的檔案。
- 已跳過受保護的檔案。

保護

- 插入之碟片中所有的檔案均內嵌DRM。
- 請更換碟片。

TEMP

- 本產品的溫度超出正常工作溫度範圍。
- 請等待本產品溫度回到正常工作溫度範圍內。

租賃已到期。

- 插入的碟片包含已到期的DivX VOD內容。
- 請選擇可播放的檔案。

Video resolution not supported

- 檔案中有本產品無法播放的檔案。
- 請選擇可播放的檔案。

無法寫入快閃記憶體。

- 因某些因素導致無法儲存VOD內容的播放記錄。
- 請重試。
- 若訊息頻繁出現，請洽詢經銷商。

您的設備沒有被授權播放這個DivX加密的視頻。

- 本產品的DivX登錄碼尚未經過DivX VOD內容供應商授權。
- 請向DivX VOD內容供應商登錄本產品。

不支援此視頻更新率

- DivX檔案的畫面播放速率超過30 fps。
- 請選擇可播放的檔案。

Audio Format not supported

- 本產品不支援此類型的檔案。
- 請選擇可播放的檔案。

USB儲存裝置

Error-02-9X/-DX

- 通訊失敗。
 - 將點火開關轉到OFF，然後再轉回ON。
 - 中斷USB儲存裝置的連接。
 - 切換至不同的來源。接著再切回USB儲存裝置。

無法判別檔案

- 本產品無法播放此類型的檔案。
 - 請選擇可播放的檔案。
- 連接之USB儲存裝置的安全功能已啟用。
 - 依照USB儲存裝置的說明停用安全功能。

略過

- 連接的USB儲存裝置包含受DRM保護的檔案。
 - 已跳過受保護的檔案。

保護

- 連接的USB儲存裝置中所有的檔案均內嵌DRM。
 - 更換USB儲存裝置。

無法相容USB

- 本產品不支援連接的USB儲存裝置。
 - 移除裝置，更換相容的USB儲存裝置。

確認USB

- USB接頭或USB纜線短路。
 - 檢查USB接頭或USB纜線是否卡住或損壞。
- 連接的USB儲存裝置消耗量超過最大允許電流。
 - 移除並停用USB儲存裝置。將點火開關轉至OFF，再轉至ACC或ON，然後連接相容的USB儲存裝置。

Video resolution not supported

- 檔案有本產品無法播放的檔案。
 - 請選擇可播放的檔案。

為保護你的手持裝置，USB已經斷線。請勿插入任何USB裝置於USB端子。請重新開機。

- USB接頭或USB纜線短路。
 - 檢查USB接頭或USB纜線是否卡住或損壞。
- 連接的USB儲存裝置消耗量超過最大允許電流。
 - 移除並停用USB儲存裝置。將點火開關轉至OFF，再轉至ACC或ON，然後連接相容的USB儲存裝置。
- iPod / iPhone的USB介面纜線短路。
 - 檢查iPod / iPhone專用USB介面纜線或USB纜線是否卡住或損壞。

Audio Format not supported

- 本產品不支援此類型的檔案。
 - 請選擇可播放的檔案。

iPod

Error-02-6X/-9X/-DX

- iPod故障。
 - 拔下iPod的纜線。顯示iPod主選單後，重新連接iPod並重設。

Error-02-67

- iPod韌體版本過時。
 - 更新iPod版本。

iTunes標籤

Error-8D

- 內建FLASH ROM發生錯誤。
 - 將點火開關轉到OFF，然後再轉到ON。

標記儲存失敗。

- 無法將標籤資訊儲存至本產品。
 - 再試一次。

已經儲存

- 已將此標籤資訊儲存至記憶體。
 - 任何歌曲的標籤資訊都只能儲存一次。無法多次儲存同一歌曲的標籤資訊。

記憶體已滿，請將iPod連接。

- 已順利儲存標籤資訊。本產品的快閃記憶體已滿。
 - 本產品的標籤資訊已在連接iPod時自動傳輸至iPod。

記憶體已滿，標籤未存儲。請將iPod連接。

- 本產品用作暫存區的快閃記憶體已滿。
 - 本產品的標籤資訊已在連接iPod時自動傳輸至iPod。

iPod記憶體已滿，無法傳輸標記。

- iPod用於標籤資訊的記憶體已滿。
 - 同步化iPod與iTunes，然後清除標籤播放清單。

標記傳輸失敗。請重新連接iPod。

- 本產品的標籤資訊無法傳輸至iPod。
 - 檢查iPod然後再試一次。

Bluetooth

Error-10

- 本產品的Bluetooth模組電源故障。
 - 將點火開關轉到OFF，然後轉到ON。
- 如果執行以上動作後仍顯示錯誤訊息，請聯絡經銷商或Pioneer授權服務中心。

MirrorLink

無法讀出應用程式清單。

- 無法載入應用程式清單。
 - 拔下智慧型手機的纜線，經過幾秒後再重新連接智慧型手機。
 - 將點火開關轉到OFF，然後轉到ON。
- 如果執行以上動作後仍顯示錯誤訊息，請重設智慧型手機。
- 如果執行以上動作後仍顯示錯誤訊息，請聯絡經銷商或Pioneer授權服務中心。

在您的MirrorLink裝置上沒有支援的應用程式。

- 找不到支援的應用程式。
 - 將相容於MirrorLink的應用程式安裝至MirrorLink裝置。

Communication error occurred.

- 發生通訊錯誤。
 - 拔下智慧型手機的纜線，經過幾秒後再重新連接智慧型手機。
 - 將點火開關轉到OFF，然後轉到ON。
- 如果執行以上動作後仍顯示錯誤訊息，請重設智慧型手機。
- 如果執行以上動作後仍顯示錯誤訊息，請聯絡經銷商或Pioneer授權服務中心。

啟動應用程式失敗。

- 無法啟動應用程式。
 - 再試一次。

由於不正常的解析度，無法顯示裝置的畫面。

- 影像尺寸太大
 - 從裝置傳輸的影像大小超過800 × 480。

操作及保養碟片

操作碟片時，必須牢記一些基本的注意事項。

內建光碟機及保養

- 僅限使用傳統的圓形碟片。請勿使用其他形狀的碟片。
- 請勿使用破裂、缺口、扭曲或有其他損壞的碟片，否則可能會損壞內建光碟機。
- 請使用12-cm碟片。請勿使用8-cm碟片或8-cm碟片轉接器。
- 使用可在標籤表面上印刷的碟片時，請檢查碟片說明及警告。視碟片而定，有可能無法插入及退出。使用此類碟片可能會導致本設備受損。
- 請勿在碟片表面黏貼標籤、書寫或塗抹化學物質。
- 請勿在碟片貼上市售標籤或其他物品。
- 若要清潔碟片，請用軟布從中心向外擦拭。
- 凝結可能會暫時影響內建光碟機的效能。
- 由於碟片特性、碟片格式、錄製的應用程式、播放環境及存放條件等緣故，可能會無法播放碟片。
- 道路顛簸會中斷碟片的播放。

- 使用碟片之前，請閱讀注意事項。

播放碟片的環境條件

- 在極端的高溫下，過溫保護功能可自動關閉本產品電源以保護本產品。
- 儘管產品已經過精心設計，但因機械磨損、使用或操作碟片之環境條件的緣故，碟片表面仍會出現不影響實際運作的小型刮傷。這不是本產品故障的跡象。請視為正常磨損。

可播放碟片

DVD-Video



- **DVD** 是DVD Format/Logo Licensing Corporation 的商標。
- 本產品無法播放DVD-Audio碟片。本DVD光碟機可能無法播放所有附有以上標記的碟片。

CD



以AVCHD格式錄製的光碟

本機與以AVCHD（先進高畫質視訊編碼）格式錄製的光碟不相容。請勿插入AVCHD碟片。否則可能無法退出碟片。

播放雙面碟

- 雙面碟有兩面，一面為音訊的可燒錄CD，另一面為視訊的可燒錄DVD。
- 本產品可播放DVD面。然而，由於雙面碟的CD面不相容於一般CD標準，因此，本產品可能無法播放CD面。
- 經常載入和退出雙面碟可能會刮壞碟片。
- 嚴重刮傷會導致本產品出現播放問題。有時雙面碟可能會卡在碟片槽中而無法退出。為防止這種情形發生，建議勿將雙面碟用於本產品。
- 如需關於雙面碟的詳細資訊，請洽詢製造商。

Dolby Digital

本產品可在內部縮混Dolby Digital訊號，並以立體聲輸出聲音。

- 由Dolby Laboratories授權製造。Dolby與雙D標誌是Dolby Laboratories的商標。



有關可播放媒體的詳細資訊

相容性

有關碟片相容性的一般注意事項

- 本產品的特定功能可能無法用於某些碟片。
- 不保證與所有碟片的相容性。
- 本產品無法播放DVD-ROM/DVD-RAM碟片。
- 直接接觸陽光、高溫或車內存放環境可能會導致無法播放碟片。

DVD-Video碟片

- 本DVD光碟機無法播放有不相容區碼的DVD-Video碟片。在本產品的機殼上可找到播放器的區碼。

DVD-R/DVD-RW/DVD-R SL（單層）／DVD-R DL（雙層）碟片

- 無法播放以Video格式（視訊模式）錄製的最最終化碟片。
- 無法播放以Video Recording格式（VR模式）錄製的碟片。

- 無法播放以跳層燒錄方式錄製的DVD-R DL（雙層）碟片。
- 如需有關錄製模式的詳細資訊，請聯絡媒體、燒錄機或寫入軟體的製造商。

CD-R/CD-RW碟片

- 本產品無法播放未最終化碟片。
- 由於碟片特性，碟片上的刮痕或塵垢，或內建光碟機透鏡上的刮痕、塵垢或凝結所致，可能會無法播放以音樂CD燒錄機或電腦錄製的CD-R/CD-RW碟片。
- 視錄製裝置、寫入軟體、設定值及其他環境因素而定，可能無法播放以電腦錄製的碟片。
- 請用正確的格式燒錄。（如需詳細資訊，請聯絡媒體、燒錄機或寫入軟體製造商。）
- 本產品可能會無法顯示CD-R/CD-RW碟片所錄製的標題與其他文字資訊（在音訊資料（CD-DA）情況下）。
- 使用CD-R/CD-RW碟片之前，請閱讀注意事項。

有關USB儲存裝置的一般注意事項

- 請勿將USB儲存裝置置於任何高溫位置。
- 本產品能否識別儲存裝置或正常播放檔案，視使用的USB儲存裝置種類而定。
- 有些音訊及視訊檔案的文字資訊可能無法正確顯示。
- 請正確使用檔案的副檔名。
- 開始播放具有複雜資料夾階層之USB儲存裝置中的檔案時，可能會有些微延遲。
- 操作因USB儲存裝置的種類而異。
- 由於檔案特性、檔案格式、錄製的應用程式、播放環境及存放條件等緣故，可能會無法播放USB中部分的音樂檔案。

USB儲存裝置相容性

- 如需有關USB儲存裝置與本產品相容性的詳細資訊，請參閱第52頁上規格。
 - 協議：bulk
 - 透過USB集線器無法將USB儲存裝置連接至本產品。
 - 已進行磁碟分割的USB儲存裝置與本產品不相容。
 - 在行裝時請確實固定USB儲存裝置。請勿讓USB儲存裝置掉落在地板上，否則可能卡在煞車或油門踏板之下。
 - 開始播放用影像資料編碼的音訊檔案時，可能會略有延遲。
 - 部分連接本產品的USB儲存裝置可能會在播放廣播時產生雜訊。
 - 請勿連接除USB儲存裝置以外的裝置。
- USB儲存裝置上的音訊檔案順序
使用USB儲存裝置時，順序與USB儲存裝置不同。

操作指南和補充資訊

- 本產品不相容於多媒體記憶卡（MMC）。
- 本機無法播放有版權保護的檔案。

有關DivX檔案的一般注意事項

DivX檔案注意事項

- 僅保證從DivX合作夥伴網站下載的DivX檔案可正常使用。未經授權的DivX檔案可能無法正常運作。
- 開始播放後才可操作DRM租用檔案。
- 本產品可顯示長達1 590分鐘43秒的DivX檔案。禁止執行超出此時間範圍的搜尋操作。
- 播放DivX VOD檔案前，需提供本產品的ID代碼給DivX VOD供應商。關於ID代碼，請參閱 第37頁上顯示*DivX VOD登錄碼*。
- 如需可在本產品上播放DivX視訊版本的詳細資訊，請參閱第52頁上*規格*。
- 如需有關DivX的詳細資訊，請造訪下列網站：
<http://www.divx.com/>

DivX字幕檔案

- 可使用副檔名為「.srt」的Srt格式字幕檔案。
- 每個DivX檔案只能使用一個字幕檔案。多個字幕檔案無法建立關聯。
- 副檔名之前的字元字串與DivX檔案相同的字幕檔案，可與DivX檔案建立關聯。副檔名之前的字元字串必須完全相同。但如果單一資料夾中只有一個DivX檔案及一個字幕檔案，即使檔案名稱不同，這些檔案也會建立關聯。
- 字幕檔案必須儲存在與DivX檔案相同的資料夾中。
- 最多可使用255個字幕檔案。多出的字幕檔案不會被識別。
- 字幕檔案名稱最多可使用64個字元，包括副檔名。若檔案名稱使用超過64個字元，可能會無法識別字幕檔案。
- 字幕檔案的字元代碼應符合ISO-8859-1。使用非ISO-8859-1的字元會造成字元顯示錯誤。
- 若顯示在字幕檔案中的字元包括控制碼，字幕可能不會正確顯示。
- 若資料使用高傳輸率，則字幕及視訊可能不會完全同步。
- 若設定多行字幕在極短的時間範圍內（如0.1秒）顯示，字幕可能不會在正確的時間顯示。

媒體相容性表

一般

- 儲存在碟片中的音訊檔案播放時間上限：60小時
- 儲存在USB儲存裝置中的音訊檔案播放時間上限：7.5小時（450分鐘）

CD-R/-RW

檔案系統：ISO9660等級1、ISO9660等級2、Romeo、Joliet、UDF
1.02/1.50/2.00/2.01/2.50
資料夾上限：700
檔案上限：999
可播放的檔案類型：MP3、WMA、AAC、DivX、MPEG1、MPEG2、MPEG4

DVD-R/-R SL/-R DL/ DVD-RW

檔案系統：ISO9660等級1、ISO9660等級2、Romeo、Joliet、UDF
1.02/1.50/2.00/2.01/2.50
資料夾上限：700
檔案上限：3 500
可播放的檔案類型：MP3、WMA、AAC、DivX、MPEG1、MPEG2、MPEG4

USB儲存裝置

檔案系統：FAT16/FAT32
資料夾上限：1 500
檔案上限：15 000
可播放的檔案類型：MP3、WMA、AAC、WAVE、H.264、MPEG4、MKV、JPEG

MP3相容性

- 同時存在1.x版本及2.x版本時，將優先處理2.x版本的ID3標籤。
- 本產品不相容於：MP3i（互動式MP3）、mp3 PRO、m3u播放清單

CD-R/-RW

副檔名：.mp3
位元率：8 kbps至320 kbps (CBR)、VBR
取樣頻率：16 kHz至48 kHz (32 kHz、44.1 kHz、48 kHz用於加強)
ID3標籤：ID3標籤版本1.0、1.1、2.2、2.3

DVD-R/-R SL/-R DL/ DVD-RW

副檔名：.mp3
位元率：8 kbps至320 kbps (CBR)、VBR
取樣頻率：16 kHz至48 kHz (32 kHz、44.1 kHz、48 kHz用於加強)
ID3標籤：ID3標籤版本1.0、1.1、2.2、2.3

USB儲存裝置

副檔名：.mp3
位元率：8 kbps至320 kbps (CBR)、VBR
取樣頻率：8 kHz至48 kHz
ID3標籤：ID3標籤版本1.0、1.1、2.2、2.3、2.4

WMA相容性

- 本產品不相容於：Windows Media Audio 9 Professional、Lossless、Voice

CD-R/-RW

副檔名：.wma
位元率：5 kbps至320 kbps (CBR)、VBR
取樣頻率：8 kHz至48 kHz

DVD-R/-R SL/-R DL/ DVD-RW

副檔名：.wma
位元率：5 kbps至320 kbps (CBR)、VBR
取樣頻率：8 kHz至48 kHz

USB儲存裝置

副檔名：.wma
位元率：5 kbps至320 kbps (CBR)、VBR
取樣頻率：8 kHz至48 kHz

WAV相容性

- 顯示幕中顯示的取樣頻率可能四捨五入。
- 無法播放CD-R/-RW、DVD-R/-RW/-R SL/-R DL上的WAV檔案。

USB儲存裝置

副檔名：.wav
格式：Linear PCM (LPCM)
取樣頻率：16 kHz至48 kHz
量化位元數：8位元及16位元

AAC相容性

- 本產品可播放使用iTunes編碼的AAC檔案。

CD-R/-RW

副檔名：.m4a
位元率：8 kbps至320 kbps (CBR)
取樣頻率：8 kHz至44.1 kHz

DVD-R/-R SL/-R DL/ DVD-RW

副檔名：.m4a
位元率：8 kbps至320 kbps (CBR)
取樣頻率：8 kHz至44.1 kHz

USB儲存裝置

副檔名：.m4a
位元率：8 kbps至320 kbps (CBR)
取樣頻率：8 kHz至48 kHz

DivX相容性

- 本產品不相容於：DivX Ultra格式、無視訊資料的DivX檔案、以LPCM (Linear PCM)音訊轉碼器編碼的DivX檔案
- 視檔案資訊構成（如音訊串流數目）而定，碟片開始播放時，可能會略有延遲。
- 如果檔案大小超過4 GB，會在結束前停止播放。
- DivX檔案的組成可能會禁止某些特殊的操作。
- 高傳輸率的檔案可能無法正確播放。CD的標準傳輸率為4 Mbps，DVD則為10.08 Mbps。
- 無法播放USB儲存裝置中的DivX檔案。

CD-R/-RW

副檔名：.avi/.divx
設定檔（DivX版本）：Home Theater Ver.3.11/Ver.4.x/Ver.5.x/Ver.6.x
相容的音訊轉碼器：MP3、Dolby Digital
位元率（MP3）：8 kbps至320 kbps (CBR)、VBR
取樣頻率（MP3）：16 kHz至48 kHz (32 kHz、44.1 kHz、48 kHz用於加強)
最大影像大小：720像素× 576像素

最大檔案大小：4 GB

DVD-R / R SL / R DL / DVD-RW

副檔名：.avi/.divx

設定檔 (DivX版本)：Home Theater Ver. 3.11/Ver. 4.x/Ver. 5.x/Ver. 6.x

相容的音訊轉碼器：MP3、Dolby Digital

位元率 (MP3)：8 kbps至320 kbps (CBR) / VBR

取樣頻率 (MP3)：16 kHz至48 kHz (32 kHz、44.1 kHz、48 kHz 用於加強)

最大影像大小：720像素× 576像素

最大檔案大小：4 GB

視訊檔案相容性 (USB)

- 視建立檔案的環境或檔案內容而定，檔案可能無法正確播放。
- 本產品可能會因用於WMA檔案編碼的應用程式而無法正常運作。
- 視用於WMA檔案編碼的Windows Media Player版本而定，專輯名稱與其他文字資訊可能無法正常顯示。
- 轉輯播放用影像資料編碼的音訊檔案時，可能會略有延遲。
- 本產品不相容於封包寫入資料傳送。
- 本產品最多可識別32個字元（從第一個字元開始，包括副檔名及資料夾名稱）。視顯示區域而定，本產品會嘗試以縮小的字型大小顯示。然而，可顯示的字元數上限制於各個字元及顯示區域的寬度而異。
- 資料夾選擇順序或其他操作可能會因編碼或寫入軟體而異。
- 無論原始錄製歌曲之間空白部分的長短，壓縮音訊碟片播放時，歌曲之間都會出現短暫的暫停。

.avi

格式：MPEG-4/H.264

相容的視訊轉碼器：MPEG-4（簡易設定檔）/H.264（基礎設定檔）

相容的音訊轉碼器：Linear PCM (LPCM) MP3

最大解析度：640 像素 x 360 像素

最大畫面播放速率：30 fps

最大檔案大小：2 GB

最長播放時間：150分鐘

- 視位元率而定，檔案可能無法播放。

.mp4

格式：MPEG-4/H.264

相容的視訊轉碼器：MPEG-4（簡易設定檔）/H.264（基礎設定檔）

相容的音訊轉碼器：AAC/Linear PCM (LPCM) MP3

最大解析度：640 像素 x 360 像素

最大畫面播放速率：30 fps

最大檔案大小：2 GB

最長播放時間：150分鐘

- 視位元率而定，檔案可能無法播放。

.3gp

格式：MPEG-4/H.264

相容的視訊轉碼器：MPEG-4（簡易設定檔）/H.264（基礎設定檔）

相容的音訊轉碼器：AAC/Linear PCM (LPCM) MP3

最大解析度：640 像素 x 360 像素

最大畫面播放速率：30 fps

最大檔案大小：2 GB

最長播放時間：150分鐘

- 視位元率而定，檔案可能無法播放。

.mkv

格式：MPEG-4/H.264

相容的視訊轉碼器：MPEG-4（簡易設定檔）/H.264（基礎設定檔）

相容的音訊轉碼器：AAC/Linear PCM (LPCM) MP3/AAC-3

最大解析度：640 像素 x 360 像素

最大畫面播放速率：30 fps

最大檔案大小：2 GB

最長播放時間：150分鐘

- 視位元率而定，檔案可能無法播放。

.mov

格式：MPEG-4/H.264

相容的視訊轉碼器：MPEG-4（簡易設定檔）/H.264（基礎設定檔）

相容的音訊轉碼器：AAC/Linear PCM (LPCM) MP3

最大解析度：640 像素 x 360 像素

最大畫面播放速率：30 fps

最大檔案大小：2 GB

最長播放時間：150分鐘

- 視位元率而定，檔案可能無法播放。

階層實例

- 本產品會指定資料夾編號。使用者無法指定資料夾編號。

版權與商標聲明

版權所有 (c) 1987, 1993, 1994

The Regents of the University of California (加州大學董事會)。保留所有權利。無論修改與否，皆允許轉載及使用原始碼與二進位格式，前提為符合下列條件：

1. 轉載佈原始碼時，必須保留上述版權聲明、本條件清單及以下免責聲明。
 2. 轉載佈二進位格式時，必須在散佈版本隨附文件及／或其他資料中複製上述版權聲明、本條件清單及以下免責聲明。
 3. 凡提及本軟體功能或用途的廣告資料，皆必須標示下列聲明：本產品含有加州大學柏克萊分校及其貢獻者所開發的軟體。
 4. 未經事前書面同意，不得以該大學及其貢獻者之名義為本軟體之衍生產品背書或促銷。
- 本軟體由董事會及貢獻者依「原樣」提供，不具任何明示或暗示之保證，其中包括但不限於適銷性及特定用途適用性的暗示保

證。在任何情況下，對於因使用本軟體所致之任何直接、間接、附帶性、特殊性、懲罰性或衍生性損害（包括但不限於替代商品或服務之採購、無法使用、資料損失、利益損失或業務中斷），無論原因為何且無論基於契約、嚴格責任或侵權行為（包括過失等）之法理，董事會及貢獻者概不負責，即使獲知此類損害之可能性亦然。

Bluetooth



Bluetooth 文字商標及標誌為Bluetooth SIG, Inc. 擁有之註冊商標，PIONEER CORPORATION已獲授權使用此類標記。其他商標及商業名稱為其各自擁有者所有。

WMA

Windows Media是Microsoft Corporation於美國及／或其他國家的註冊商標或商標。本產品採用Microsoft Corporation開發之技術，未獲Microsoft Licensing, Inc. 授權，不得使用或散佈此技術。

DivX



DivX是Rovi Corporation子公司DivX, LLC建立的壓縮數位視訊格式。本機可播放CD-R/RW/ROM和DVD-R/RW/ROM碟片所錄製的DivX視訊檔案。使用與DVD視訊相同的術語，單一DivX視訊檔案稱為「標頭」。燒錄之前為CD-R/RW或DVD-R/RW碟片中的檔案／標題命名時請注意，檔案／標題將根據預設依照寫入順序播放。DivX、DivX Certified和相關標誌皆為Rovi Corporation或其子公司的商標，且經授權使用。關於DivX視訊：DivX 是DivX Inc. 建立的數位視訊格式。本產品為播放DivX視訊的官方DivX Certified 裝置。如需詳細資訊及將檔案轉換為DivX視訊的軟體工具，請造訪divx.com。關於DivX隨選視訊：本DivX Certified 裝置必須進行登錄以播放購買的DivX隨選視訊 (VOD) 影片。若要取得登錄碼，請參考〈

顯示DivX VOD登錄碼》一節以顯示DivX VOD登錄碼。欲深入了解如何完成登錄，請前往vod.divx.com。

➡ 第37頁上顯示DivX VOD登錄碼

AAC

AAC (Advanced Audio Coding, 進階音訊編碼) 是MPEG-2及MPEG-4使用的音訊壓縮技術標準。有多種應用程式可用來對AAC檔案進行編碼，但檔案格式與副檔名因用於編碼的應用程式而異。本機可播放由iTunes編碼的AAC檔案。

Android

Android是Google Inc. 的商標。

MirrorLink

MirrorLink Certified、Design Only 認證標誌、MirrorLink 及MirrorLink 標誌皆為Car Connectivity Consortium LLC. 的認證標記和商標。嚴禁未授權使用。

有關連接 iPod 裝置的詳細資訊

- Pioneer對於iPod資料遺失概不負責，即使資料於使用本產品時遺失亦然。請定期備份iPod資料。
 - 請勿讓iPod長時間處於直射陽光下。長時間暴露在直射陽光下可能會導致iPod因高溫而故障。
 - 請勿將iPod放在任何高溫位置。
 - 開車時請牢牢固定iPod。請勿讓iPod掉落在地板上，否則可能卡在煞車或油門踏板之下。
- 如需詳細資訊，請參閱iPod操作手冊。

iPod及iPhone

Made for



iPod



iPhone

「Made for iPod」及「Made for iPhone」代表該項電子配件專為連接iPod或iPhone而設計，並經過符合Apple效能標準的開發廠商認證。

Apple對於本裝置之操作或遵循安全性及法規標準與否，一概不予負責。

請注意，使用此搭配iPod或iPhone的配件可能會影響無線效能。iPhone、iPod、iPod classic、iPod nano及iPod touch皆為Apple Inc. 在美國及其他國家註冊的商標。

Lightning

Lightning是Apple Inc. 的商標。

App Store

App Store是Apple Inc. 的服務標記。

iOS

iOS是Cisco在美國及其他國家持有商標權之商標。

iTunes

iTunes為Apple Inc. 在美國與其他國家註冊的商標。

使用應用程式架構連線內容

重要資訊

使用本產品存取應用程式架構連線內容服務的需求：

- 適用於智慧型手機的Pioneer相容連線內容應用程式最新版本，可自服務供應商處下載至智慧型手機。
 - 有效的內容服務供應商帳戶。
 - 智慧型手機行動數據方案。
- 註：若智慧型手機的行動數據方案未提供無限資料使用量，則電信業者將針對透過3G、EDGE及／或LTE (4G) 網路存取應用程式架構連線內容收取額外費用。
- 透過3G、EDGE、LTE (4G) 或Wi-Fi 網路與網際網路連線。
 - 連接iPhone與本產品的選購Pioneer轉接器纜線。

限制：

- 使用者能否存取應用程式架構連線內容，將視手機可用性、及／或Wi-Fi網路覆蓋範圍是否允許智慧型手機連線至網際網路而定。
- 服務可用性隨地區而異。如需更多資訊，請洽詢連線內容服務供應商。
- 本產品的連線內容存取功能如有變更，恕不另行通知。此功能可能受下列因素影響：與智慧型手機未來軟體版本的相容性問題；與智慧型手機連線內容應用程式未來版本的相容性問題；供應商變更或中斷連線內容應用程式或服務。

有關觀看視訊的注意事項

請記住，若使用本系統從事商業或公開放映，可能會侵犯著作權法保護的版權。

有關觀看DVD-Video的注意事項

本項目使用的防拷技術受美國專利及其他Rovi Corporation的智慧財產權保護。禁止反向工程及反組譯。

有關使用MP3檔案的注意事項

本產品僅針對私人、非商業用途提供授權許可；除此之外，並未提供授權許可，或暗示任何使用者具有將本產品用於任何商業（即創造營收）即時廣播（地面、衛星、有線和／或任何其他媒體）、透過網際網路、內部網路和／或其他網路的廣播／串流，或其他電子內容傳播系統（如付費音訊或隨選音訊應用程式）之權利。此類用途須另行授權許可。如需詳細資訊，請造訪<http://www.mp3licensing.com>。

正確使用液晶螢幕

操作液晶螢幕

- 若將液晶螢幕長時間置於直射陽光下，螢幕會變得非常燙，可能導致液晶螢幕損壞。不使用本產品時，請盡可能避免讓本產品接觸直射陽光。
- 液晶螢幕應在規定的溫度範圍內使用。請參閱 第52頁上規格。
- 請勿在高或低於工作溫度範圍的溫度之下使用液晶，因為液晶螢幕可能會無法正常運作並受損。
- 液晶螢幕露出，以提高其在車內的可見性。請勿用力擠壓，以免造成損壞。
- 請勿用力推按液晶螢幕，以免造成刮痕。
- 操作觸控面板功能時，切勿使用手指之外的任何物體觸碰液晶螢幕。液晶螢幕容易刮傷。

液晶顯示 (LCD) 螢幕

- 若液晶螢幕靠近空調出風口，請勿使空調的出風方向對著液晶螢幕。暖氣的熱風會破壞液晶螢幕，而冷氣的冷風則會導致本產品內部形成濕氣，進而造成損壞。
- 液晶螢幕上可能會出現小黑點或白點（亮點）。這是液晶螢幕的特性所導致，並不代表故障。
- 若液晶螢幕受到陽光直射，會難以看清顯示的內容。
- 使用行動電話時，請讀取行動電話天線與液晶螢幕保持距離，以免視訊因斑點、彩色條紋等出現而受到干擾。

保養液晶螢幕

- 清除液晶螢幕上的灰塵或清潔液晶螢幕時，請先關閉本產品電源，再用柔軟的乾布擦拭。
- 擦拭液晶螢幕時，請小心勿刮傷表面。請勿使用刺激性或腐蝕性的化學清潔劑。

LED（發光二極體）背光

發光二極體位於顯示幕內部，為液晶螢幕提供照明。

- 在低溫下使用LED背光可能會因為液晶螢幕特性而致使影像延遲加劇及畫質降低。畫質會隨溫度增加而改善。
- LED背光的產品使用壽命超過10 000小時。但若在高溫下使用，使用壽命可能會縮短。
- 如果LED背光的使用壽命結束，螢幕將變暗，且看不見影像。此時請洽詢經銷商或最近的Pioneer授權服務中心。

規格

一般

額定功率來源.....	14.4 V DC (容許電壓範圍為10.8 V至15.1 V)
接地系統.....	負極型
最大電流消耗.....	10.0 A
尺寸(寬x高x深): DIN.....	
機身.....	180 mm × 50 mm × 160 mm
前端部分.....	188 mm × 58 mm × 32 mm
D.....	
機身.....	178 mm × 50 mm × 165 mm
前端部分.....	170 mm × 46 mm × 27 mm
重量.....	2.0 kg

顯示器

螢幕尺寸／長寬比.....	7.0吋寬／16:9 (有效顯示區域: 154.1 mm × 85.9 mm)
像素.....	1 152 000 (2 400×480)
顯示方法.....	TFT主動式矩陣驅動
色彩系統.....	PAL/NTSC/PAL-M/PAL-N/SECAM相容

音訊

最大輸出功率.....	50 W × 4 ch/4 Ω 50 W × 2 ch/4 Ω + 70 W × 1 ch/2 Ω (適用重低音揚聲器)
連續輸出功率.....	22 W × 4 (50 Hz至15 kHz, 5 %THD, 4Ω負載, 雙聲道驅動)
負載阻抗.....	4 Ω (容許範圍: 4 Ω至8 Ω [單聲道為2 Ω])
前輸出輸出位準 (最大).....	4 V

等化器 (13頻圖形等化器):

頻率.....	50 Hz/80 Hz/125 Hz/200 Hz/315 Hz/500 Hz/800 Hz/ 1.25 kHz/2 kHz/3.15 kHz/5 kHz/8 kHz/12.5 kHz
增益.....	±12 dB <Standard Mode>
HPF:	
頻率.....	50 Hz/63 Hz/80 Hz/100 Hz/125 Hz/160 Hz/200 Hz
斜率.....	-6 dB/oct、-12 dB/oct、-18 dB/oct、 -24 dB/oct、OFF
重低音揚聲器/LPF:	
頻率.....	50 Hz/63 Hz/80 Hz/100 Hz/125 Hz/160 Hz/200 Hz
斜率.....	-6 dB/oct、-12 dB/oct、-18 dB/oct、 -24 dB/oct、OFF
增益.....	+10 dB至-24 dB
相位.....	正相／反相
時序校準.....	0至140階 (2.5公分／階)
低音增強:	
增益.....	+12 dB至0 dB
揚聲器音量.....	+10 dB至-24 dB (1 dB/間隔)
<Network Mode>	
HPF (高):	
頻率.....	1.25 kHz/1.6 kHz/2 kHz/2.5 kHz/3.15 kHz/4 kHz/ 5 kHz/6.3 kHz/8 kHz/10 kHz/12.5 kHz
斜率.....	-6 dB/oct、-12 dB/oct、-18 dB/oct、-24 dB/oct
HPF (中):	
頻率.....	25 Hz/31.5 Hz/40 Hz/50 Hz/63 Hz/80 Hz/100 Hz/ 125 Hz/160 Hz/200 Hz/250 Hz
斜率.....	-6 dB/oct、-12 dB/oct、-18 dB/oct、 -24 dB/oct、OFF
LPF (中):	
頻率.....	1.25 kHz/1.6 kHz/2 kHz/2.5 kHz/3.15 kHz/4 kHz/ 5 kHz/6.3 kHz/8 kHz/10 kHz/12.5 kHz
斜率.....	-6 dB/oct、-12 dB/oct、-18 dB/oct、 -24 dB/oct、OFF
重低音揚聲器:	
頻率.....	25 Hz/31.5 Hz/40 Hz/50 Hz/63 Hz/80 Hz/100 Hz/ 125 Hz/160 Hz/200 Hz/250 Hz
斜率.....	-12 dB/oct、-18 dB/oct、-24 dB/oct、 -30 dB/oct、-36 dB/oct、OFF
增益.....	+10 dB至-24 dB
相位.....	正相／反相
時序校準.....	0至140階 (2.5公分／階)
低音增強:	
增益.....	+12 dB至0 dB
揚聲器音量.....	+10 dB至-24 dB (1 dB/間隔)

DVD光碟機

系統.....	DVD-Video、VCD、CD、MP3、WMA、AAC、DivX、MPEG播放器
可用碟片.....	DVD-VIDEO、VIDEO-CD、CD、CD-R、CD-RW、 DVD-R、DVD-RW、DVD-RDL
區碼.....	3

訊號格式:

取樣頻率.....	32 kHz/44.1 kHz/48 kHz/96 kHz
量化位元數.....	16位元/20位元/24位元; 線性
頻率響應.....	5 Hz至22 000 Hz (含DVD, 取樣頻率為48 kHz)
訊噪比.....	91 dB (1 kHz) (IEC-A network) (RCA等級)
輸出位準:	
視訊.....	1.0 Vp-p/75Ω (±0.2 V)
聲道數.....	2 (立體聲)
MP3解碼格式.....	MPEG-1、2 Audio Layer 3
WMA解碼格式.....	Ver.7、7.1、8、9、10、11、12 (雙聲道音訊) (Windows Media Player)
AAC解碼格式.....	MPEG-4 AAC (僅限iTunes編碼): .m4a (Ver.10.6及舊版)
DivX解碼格式.....	家庭劇院版本3、4、5.2、6 (不包括ultra及HD) : .avi、.divx
MPEG視訊解碼格式.....	MPEG-1、MPEG-2、MPEG-4 (第2部分)、 MS MPEG-4 (ver.3)

USB

USB標準規格.....	USB 1.1、USB 2.0 full speed、USB 2.0 high speed
最大電流供應.....	1.0 A
USB類別.....	MSC (大量儲存類別)、MTP (媒體傳輸通訊協定)
檔案系統.....	FAT16、FAT32
MP3解碼格式.....	MPEG-1、2 Audio Layer 3
WMA解碼格式.....	Ver.7、7.1、8、9、10、11、12 (雙聲道音訊) (Windows Media Player)
AAC解碼格式.....	MPEG-4 AAC (僅限iTunes編碼) (Ver.10.6及舊版)
WAV訊號格式 (僅限MSC Mode).....	Linear PCM
取樣頻率.....	Linear PCM: 16 kHz、22.05 kHz、24 kHz、 32 kHz、44.1 kHz、48 kHz
JPEG解碼格式 (僅限MSC Mode).....	.jpeg、.jpg、.jpe
像素取樣.....	4:2:2、4:2:0
解碼大小.....	最大: 8 192 (H) x 7 680 (W), 最小: 32 (H) x 32 (W)
H.264視訊解碼格式.....	基準線設定檔
MPEG4視訊解碼格式.....	簡易設定檔

Bluetooth

(AVH-X7750BT)	
版本.....	經過認證的Bluetooth 3.0
輸出功率.....	最大4 dBm (功率等級2)

FM調諧器

頻率範圍.....	87.5 MHz至108 MHz
可用靈敏度.....	12 dBf (0.8 μV/75Ω, 單聲道, S/N: 30 dB)
訊噪比.....	72 dB (IEC-A網路)

AM調諧器

頻率範圍.....	530 kHz至1 640 kHz (10 kHz)
頻率範圍.....	531 kHz至1 602 kHz (9 kHz)
可用靈敏度.....	28 μ V (S/N : 20 dB)
訊噪比.....	62 dB (IEC-A網路)

■ 為求改善，規格與設計可能改變，恕不另行通知。

Visit us on the World Wide Web at

<http://pioneer.jp/group/index-e.html>

<Middle East & Africa>

Pioneer Gulf.FZE

<http://www.pioneer-uae.com>

<Oceania>

Pioneer Electronics Australia. Pty.Ltd

<http://www.pioneer.com.au/>

<Asia>

Pioneer Electronics Asiacentre.Pte

<http://www.pioneer.com.sg>

Pioneer (HK) Ltd.

<http://www.pioneerhongkong.com.hk>

Pioneer High Fidelity Taiwan Co., Ltd.

<http://www.pioneer-twn.com.tw>

<Latin>

Pioneer International Latin America S.A.

<http://www.pioneer-latin.com>

PIONEER CORPORATION

1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi,
Kanagawa 212-0031, JAPAN

PIONEER ELECTRONICS (USA) INC.

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.
TEL: (800) 421-1404

PIONEER ELECTRONICS OF CANADA, INC.

340 Ferrier Street, Unit 2, Markham, Ontario L3R 2Z5,
Canada
TEL: 1-877-283-5901
TEL: 905-479-4411

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium/
Belgique
TEL: (0) 3/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

253 Alexandra Road, #04-01, Singapore 159936
TEL: 65-6472-7555

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

5 Arco Lane, Heatherton, Victoria, 3202, Australia
TEL: (03) 9586-6300

PIONEER ELECTRONICS DE MEXICO S.A. DE C.V.

Blvd. Manuel Avila Camacho 138, 10 piso
Col.Lomas de Chapultepec, Mexico, D.F. 11000
Tel: 52-55-9178-4270, Fax: 52-55-5202-3714

先鋒股份有限公司

台北市內湖區瑞光路407號8樓
電話：886-(0)2-2657-3588

先鋒電子（香港）有限公司

香港九龍長沙灣道909號5樓
電話：852-2848-6488